

ED'S AUTOSERVICES

AUDI




FP-05-02
Stereo Fitting Trims
Audi A3
10/1996 to 12/2000



AU2300B
Audi A4, A6, A8 1996 - 98



FP-05-00
Stereo Fitting Trims
Audi A4 1995-1999
Cabriolet/Convertible
1995-2003



231

FP-18-00

59

Audi A3 / Seat Toledo 12/2000 - 04/02



FP-05-03
Stereo Fitting Trims
Audi A4
11/1999 - 03/2000




238

FP-05-08

DIN Fit

63

Audi A3 04/2002 on

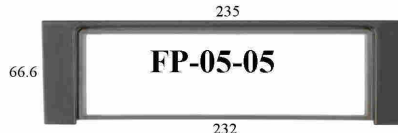

235

FP-05-05

66.6

232

Audi A4
03/2000 on
(Chorus units only)



232

AU2392B

ISO



255

CT24AU17

Audi A4 2000-01

119

238




238

FP-05-09

123

Audi A3
Symphony
09/2004 on

228

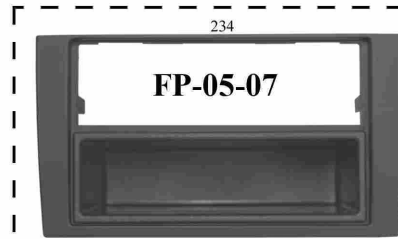

234

FP-05-07

129

226

Audi A4
2002 -2006



DFP-05-07

Double Din
Requires a sleeve
suits DFPK113



DFP-05-09

Double Din

requires a sleeve
suits DFPK113



FP-05-04

Stereo Fitting Trims
Audi A2 2000-2005
TT 1999-2006



FP-05-01

Stereo Fitting Trims
Audi A6/A8
06/1994 on
(Single DIN units)



FP-05-11

Audi A4 2007 on



DFP-05-11


Double Din
Requires Sleeve
(suits DFPK113)

226



FP-05-12

Audi TT 2007 on
Double DIN or Single DIN
Double DIN requires sleeve
suits DFPK 103

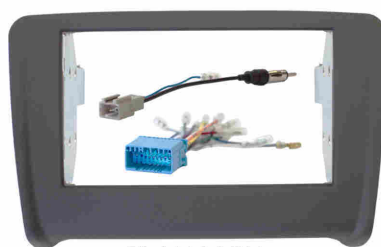

GEAU205

Audi TT 2007 on
Ex Japan cars with Clarion head unit
NB: NO LOWER SWITCH POSITION



**FP-05-06 /
CT24AU05**

124

Audi A6 (4B Facelift) (Not MMI)
2001-2004
Double DIN requires sleeve
suits DFPK 113


ED'S AUTOSERVICES



SAK-1102
Audi A3
Rear Door
165mm



AUDI
SAK-1104 or
CT25AU03
Audi A4 Front Door
130mm

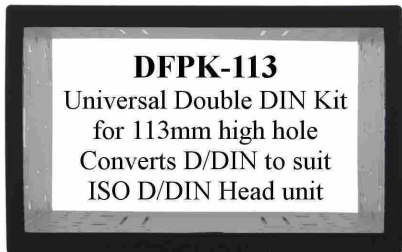

DFPK-113
Universal Double DIN Kit
for 113mm high hole
Converts D/DIN to suit
ISO D/DIN Head unit



SAK-1103
Audi A3
130mm



SAK-1105
Audi A4 Rear Shelf
165mm



CT25AU05
Speaker Spacer
Audi 165mm



CT25AU08
Audi A4
2009 on
165mm
Front Door



CT25AU07
Audi A4/A5 2009 on
200mm Front Door

A3 Front Door
2003-2012
A4 Front & Rear Door
2000-2004
A4 Avant Rear Door
2001-2004



PC9-401
Audi
Rear amplified
Speaker level input



ED-VWA2
VW/ Audi
Amplified Aerial Adaptor Lead



PC9-404
Audi
Rear amplified
RCA input (4V)



ED-VWA4
Audi/ VW 2000 on
Amplified Aerial Adaptor Lead



ED-VWA6
Audi/ BMW/ VW 2000 on
Aerial to Std Male
Std Female to OEM Stereo
Note: Band expanders need power
bypass, or phantom power will be
required




PC9-408
Audi
Front and rear amplified
Speaker level input



ED-VWA7
Audi/ VW/ Seat/ Skoda 2005 on
Active Diversity Aerial Adaptor



PC9-410
Audi
Front and rear amplified
RCA input

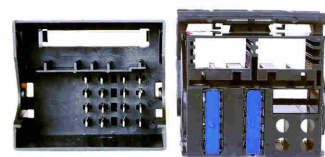

SOT-976
Phone kit/ Accessory
Interface Lead




PC9-416
Audi 2005 on
Front and rear amplified
RCA input



A3 96-03 Non Bose Quadlock Amped
All Road 05 on Quadlock Rear Amped
Q7 06 on Non MMI
TT 06 on Non Bose Quadlock



PC9-417
Audi 2005 on
Rear Amplified
Speaker level input

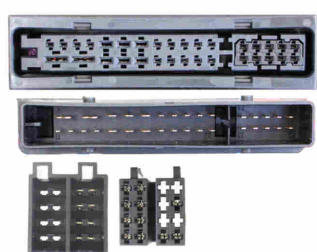

SOT-099
Audi MMI Non-Bose