



# ED'S AUTO SERVICES

## ACCESSORY INTERFACE LEADS

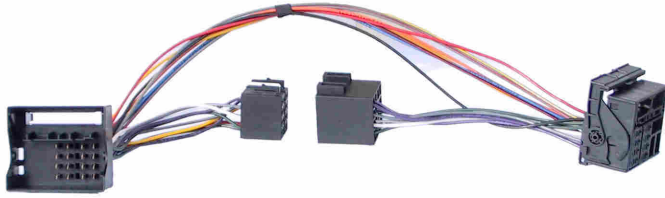

Vehicle to ISO to Vehicle  
Adaptor Leads  
For kits and devices that come with ISO plugs  
to go inline between the OEM stereo and vehicle.



**SOT-046** Chrysler 300C, Voyager  
Original Boston 04 - 07



**SOT-049** Hyundai 1999 on




**SOT-053**  
Holden/ Opel to 2000



**SOT-060** Round Pin BMW, Land Rover



**SOT-061** Ford up to 2001

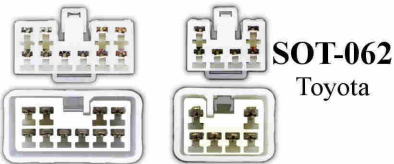

**SOT-062**  
Toyota



**SOT-064** Honda 1986 on




**SOT-067** Mazda 1990 on




**SOT-068** Chrysler Jeep pre 2000



**SOT-069** Subaru 1993 on

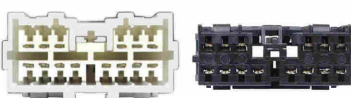


**SOT-070**  
Mitsubishi  
1995 on

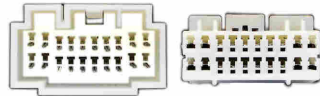

**SOT-071** Fiat Sedici, Suzuki  
Honda Non-amped 99 on




**SOT-072** Daewoo, Ssangyong

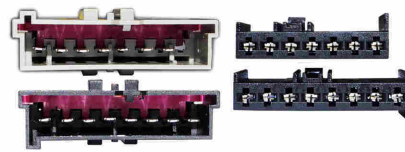

**SOT-074** Ford up to 2001



**SOT-075** Nissan 2002 on 16 pin

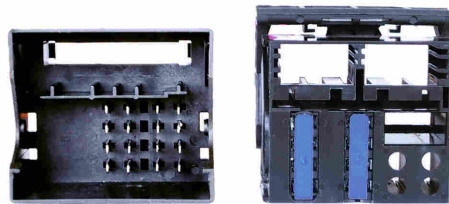

**SOT-076** Flat Pin BMW, Lambo,  
Land Rover, Range Rover, Smart



**SOT-077** Ford Ranger 2007 on  
Mazda 2001 on




**SOT-078** Holden Barina /Opel 2000 on



**SOT-082** Jaguar



**SOT-085** Ford

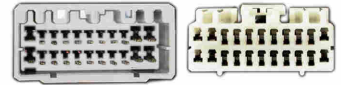


**SOT-086** Chrysler, Jeep 2000 on




**SOT-092** Ford Mondeo 2003 on



**SOT-093** Rodeo/ Isuzu

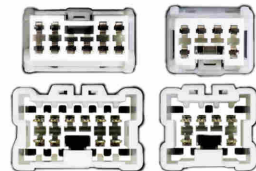

**SOT-096**  
Nissan 1995 on

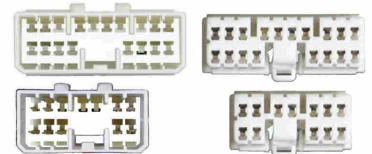

**SOT-098** Jaguar Alpine Audio




**SOT-099** Audi MMI Non-Bose



**SOT-117** Nissan VDA




**SOT-122** VE Commodore

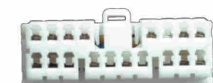

**SOT-126**  
Jaguar

# ED'S AUTO SERVICES

## ACCESSORY INTERFACE LEADS

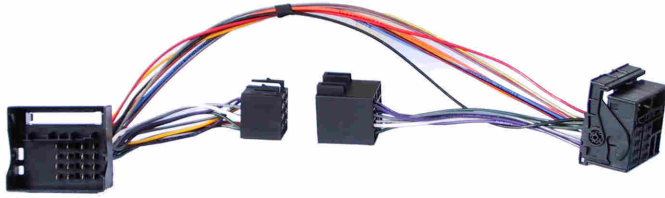

Accessory Interface Leads allow aftermarket products that are supplied with standard ISO blocks to be installed into vehicles with different connectors. Male to female conversions are ideal for satellite navigation units, hands free kits, amplifiers, tracking systems, Bluetooth devices, etc.




**SOT-901** Hyundai/ Kea 01 on,  
non-amped




**SOT-921** Porsche 2005 on  
Late PCM2 & PCM2.1 Systems



**SOT-908** Honda, Mistubishi 2006 on  
Citroën C-Crosser, Peugeot 4007 2007 on  
Non-amplified

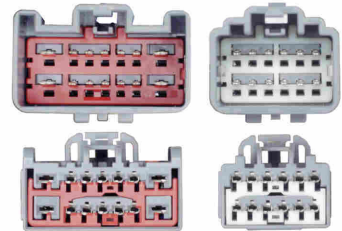

**SOT-934**  
Volvo  
Non-amped

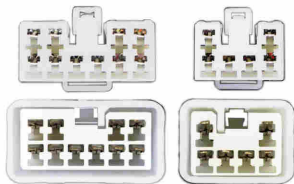

**SOT-910**  
Lexus  
IS/RX Series  
2005 on




**SOT-924**  
Chevrolet, Saab,  
Holden Epica



**SOT-936** Porsche pre 2005  
PCM1 & early PCM2



**SOT-912** Mercedes Gateway &  
Harmon Kardon Command



**SOT-929** Mitsubishi Outlander



**SOT-938** Ford Fiesta 2009  
Non Bluetooth



**SOT-913** Lexus 2005 on



**SOT-914** Toyota Landcruiser  
Touchscreen non-amp 2005 -08



**SOT-930**  
Hyundai Santa Fe  
2007 on



**SOT-962** Honda Accord Jazz  
Non-amped



**SOT-916** Mazda CX7 Post Amp



**SOT-918** Nissan 2006 on (20 pin)




**SOT-963** GM

See [autoleads.co.uk](http://autoleads.co.uk)  
for more options




# ED'S AUTO SERVICES

## ACCESSORY INTERFACE LEADS

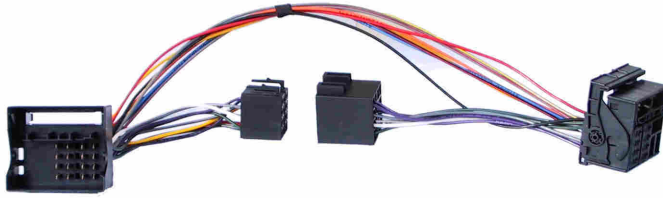

Accessory Interface Leads allow aftermarket products that are supplied with standard ISO blocks to be installed into vehicles with different connectors. Male to female conversions are ideal for satellite navigation units, hands free kits, amplifiers, tracking systems, Bluetooth devices, etc.

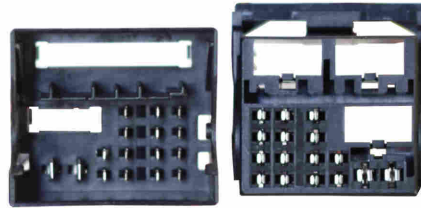

**SOT-986** Audi MIB




**CT10FD09** Ford C-Max, Fiesta, Kuga, Ranger, Transit 2010 on



**SOT-973** Honda Accord 08 on  
Insight 09 on



**SOT-1009** Honda Accord Jazz Amped

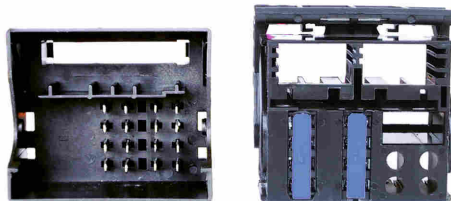

**SOT-976** VW, Mercedes, BMW 05 on



**SOT-IO2S** IO to 2 Speaker loom




**SOT-1111** Mazda Bose Amped




**SOT-IOADAP** IO adaptor for  
Amp SOT loom




**SOT-976FB**  
VW, Mercedes, BMW 05 on  
Fully populated Quadlock

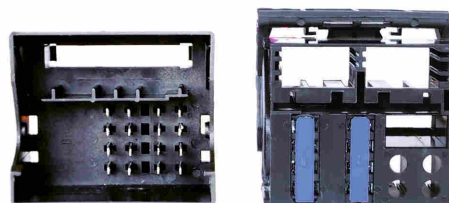

**SOT-1112** Peugeot JBL

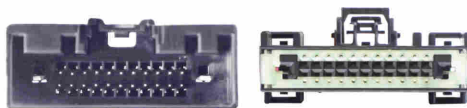

**SOT-984** Ford Fiesta Mk6 2010 on

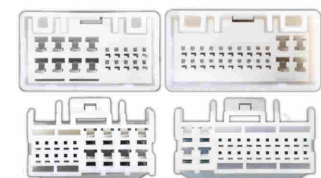

**SOT-985** Hyundai  
with 24 & 18 pin connector