


**Ed's AUTO SERVICES**  
**3B/ 155 Stoddard Rd, Mt Roskill, Auckland**  
**Ph 09/ 550 7256 Fax 09/629 5189**  
**CATALOGUE November 2016**

**INDEX**

<u><b>Product</b></u>	<u><b>Page</b></u>	<u><b>Product</b></u>	<u><b>Page</b></u>
Pockets	1	FM Converters	53
Din Fitting Escutcheons	1	Alarm Bkts, Switches	54
ISO Din Escutcheons	2	Cell Ph Bkt, Mute Leads	54
Audi	3, 4	Marine Enclosures, Accessories	55
Alfa Romeo	5	Speaker Spacers	56, 57
Citroën	5	Leads Plug Into Car Wiring	58, 59
BMW	6, 7	Active System Adaptors	60, 61
Chrysler / Dodge / Jeep	8	Speaker Level Converters	60
Daewoo	9	Steering Remote Adaptors	62 - 68
Daihatsu	9	iPod Adaptors	69 - 71
Fiat	9	Cell Phone Telemute Interfaces	75
Ford	10 - 12	Accessory Interface Leads	72 - 74
GM / Holden / Isuzu	13, 14	Leads Plug Into Original Stereo	76
Honda	15 - 17	Aerial Adaptor Leads	77, 78
Hyundai	18, 19	Aerials	78, 79
Jaguar	20	Fuses, Fuse Holders	80
Kia	20	Terminals Crimp	80
Mazda	21 - 23	Terminals Pre Insulated	81
Mercedes	24	Cable	82
Mitsubishi	25 - 27	Conduit, Heatshrink	83
Nissan	28, 29	Cable Ties	84
Nissan Brackets	30 - 32	Housings	84
Peugeot	33	Tape Sponge / Duct / D/Side	85
Porsche	33	Tape Insulation / Loom	85
Renault	33	Disconnect Plugs	85
Rover / Land Rover	34	Plastic Sheet	85
Smart Car	34	Sound Deadening	85
Skoda	35	Screws, Nuts	86
Ssangyong	35	Washers, Grommets	87
Subaru	36, 37	Tools, Crimpers	87 - 89
Suzuki	38	Stereo Removal	87
Toyota / Lexus Fascias	39 - 44	Bojo Tools	87, 88
Toyota Brackets	45 - 50	IO Bluetooth Handsfree	90
Volvo	51	Magnetic Phone/Pad mounts	91
VW	52		

This catalogue shows products normally kept in stock. We are always getting new products as demand dictates, so please ask if there is something you need that is not shown. The full range of Scosche and Autoleads Products is available. We hold a large range of products in stock and any others take approximately 3 to 6 weeks to arrive. Their websites are [www.dnaaudio.com.au](http://www.dnaaudio.com.au), [www.scosche.com](http://www.scosche.com) and [www.autoleads.co.uk](http://www.autoleads.co.uk)

# ED'S AUTO SERVICES

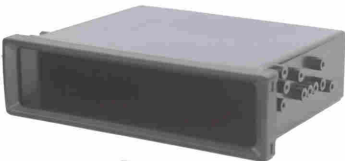

**HONP4**  
Honda Pocket




**HONP3**  
Honda Pocket  
with Lid



**HONP1**  
1990's type  
Honda Pocket  
screws under  
stereo



**MITPP**  
Mitsubishi  
Pocket

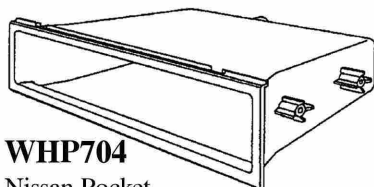


**WHP704**  
Nissan Pocket



**NISSP3**  
Nissan Pocket  
Newer models




**No 37DP**  
DIN stereo  
mounting  
box

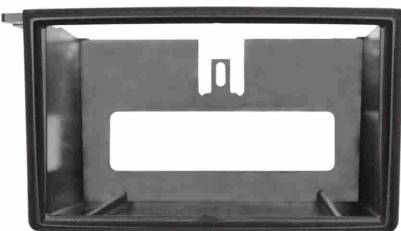

**No 36DDP**  
Double  
DIN  
stereo  
mounting  
box




**FP-007** DIN Blank (plastic) 190

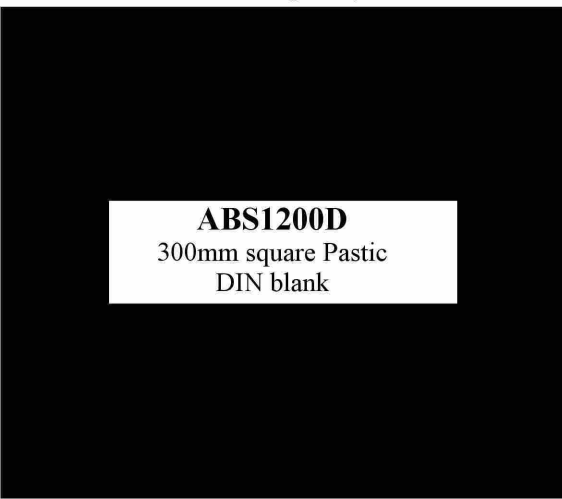

**ABS1200D**  
300mm square Pastic  
DIN blank


## POCKETS

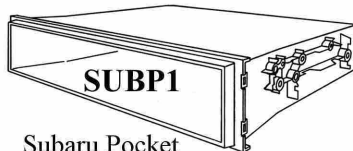

**SUBP1**  
Subaru Pocket



**SUBP3**  
Subaru Pocket with lid

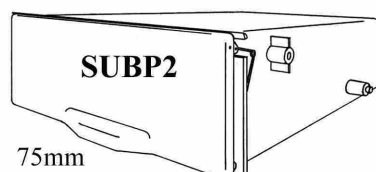

75mm  
Subaru Pocket with lid



**FP-016**  
For 113mm  
height Double DIN



**FP-017**  
For 103mm  
height Double DIN




**WHP701**  
Ford/Mazda  
Pocket 92 - 02  
(Side Clips)



**FD1300B**  
Ford Pocket  
40mm High  
Suits Mondeo, Transit  
Escort & US Ford



**WHP703** Grey  
**WHP703B** Black  
AU Falcon Pocket

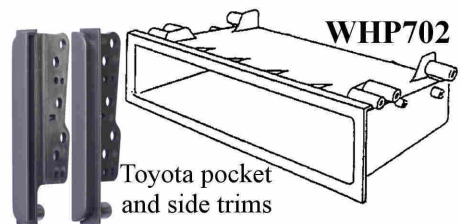

**WHP702**  
Toyota pocket  
and side trims  
(**WHP702KIT** WHP702 + Wiring loom)



**TOYP2**  
Toyota pocket  
with lid



**DDP**  
Din Dash  
Pocket




**TOYHB**  
Toyota Half DIN height Blank

## FITTING BRACKETS



**TA-204**  
3.2mm DIN Plastic trim  
pack of 10

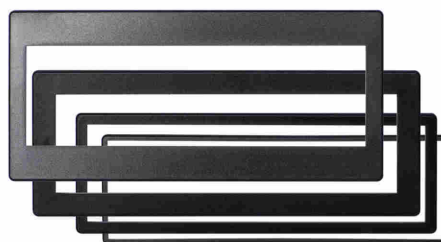


**DTR-600** Universal DIN  
Trim Rings  
(set of 4)




**No 397DS**  
4mm DIN Spacer Pastic

Can be used with DDP Pocket when fitting to Thin Steel Escutcheon.

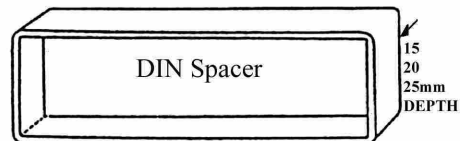


**No 58 x 15D** - 15mm  
**No 58 x 20D** - 20mm  
**No 58 x 25D** - 25mm

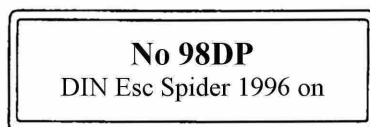


**No 98DP**  
DIN Esc Spider 1996 on



**No 180DP**  
DIN Esc Fiat

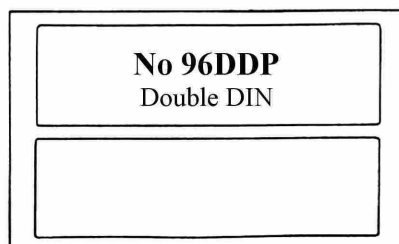

**No 96DDP**  
Double DIN

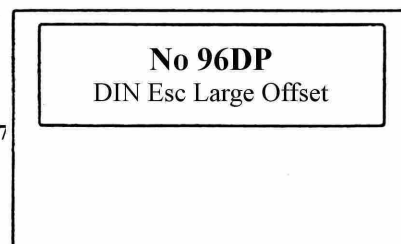







**No 96DP**  
DIN Esc Large Offset



# ED'S AUTO SERVICES

## ISO DIN TRIM ESCUTCHEONS

for use when stereo has been rear mounted,  
and original stereo trim panel is discarded.

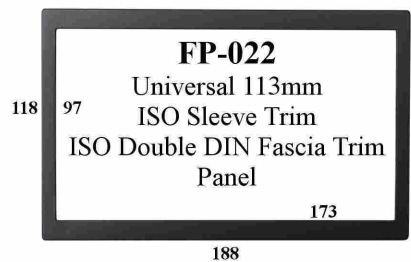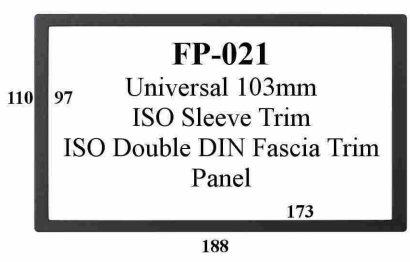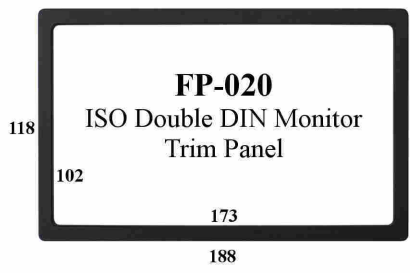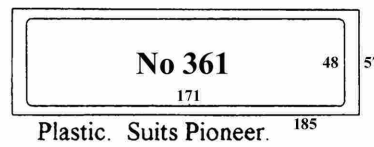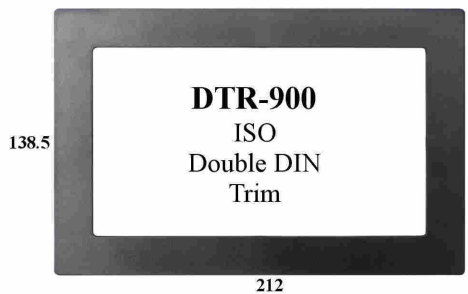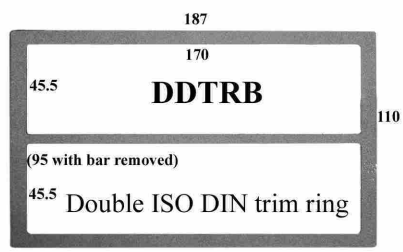

Universal Double DIN Kit  
for 103mm high hole  
Converts D/DIN to suit  
ISO D/DIN Head Unit




Universal Double DIN Kit  
for 113mm high hole  
Converts D/DIN to suit  
ISO D/DIN Head Unit

## AUDI



**FP-05-02**  
Stereo Fitting Trims  
Audi A3  
10/1996 to 12/2000

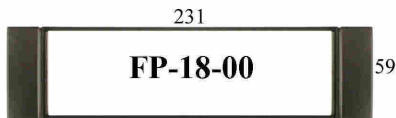

Audi A3 / Seat Toledo 12/2000 - 04/02



Audi A3 04/2002 on



Audi A3  
Symphony  
09/2004 on



**DFP-05-09**  
Double Din  
requires a sleeve  
suits DFPK113




**FP-05-04**  
Stereo Fitting Trims  
Audi A2 2000-2005  
TT 1999-2006



**FP-05-01**  
Stereo Fitting Trims  
Audi A6/A8  
06/1994 on  
(Single DIN units)



Audi TT 2007 on  
Double DIN or Single DIN  
Double DIN requires sleeve  
suits DFPK 103

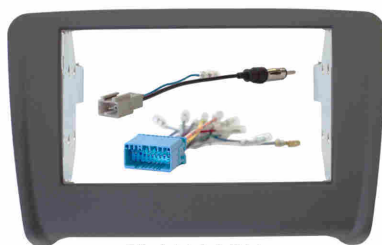


**GEAU205**  
Audi TT 2007 on  
Ex Japan cars with Clarion head unit  
NB: NO LOWER SWITCH POSITION



Audi A4, A6, A8 1996 - 98



**FP-05-03**  
Stereo Fitting Trims  
Audi A4  
11/1999 - 03/2000

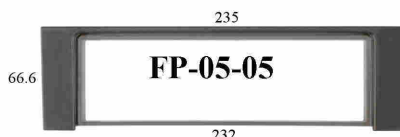

Audi A4  
03/2000 on  
(Chorus units only)



Audi A4 2000-01



Audi A4  
2002 -2006



**DFP-05-07**  
Double Din  
Requires a sleeve  
suits DFPK113



Audi A4 2007 on



**DFP-05-11**  
Double Din  
Requires Sleeve  
(suits DFPK113)




Audi A6 (4B Facelift) (Not MMI)  
2001-2004  
Double DIN requires sleeve  
suits DFPK 113



**SAK-1102**  
Audi A3  
Rear Door  
165mm



**AUDI**  
**SAK-1104 or**  
**CT25AU03**  
Audi A4 Front Door  
130mm

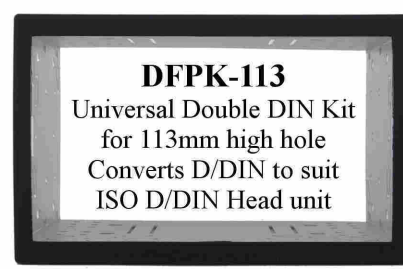

**DFPK-113**  
Universal Double DIN Kit  
for 113mm high hole  
Converts D/DIN to suit  
ISO D/DIN Head unit



**SAK-1103**  
Audi A3  
130mm



**SAK-1105**  
Audi A4 Rear Shelf  
165mm



**CT25AU05**  
Speaker Spacer  
Audi 165mm



**CT25AU08**  
Audi A4  
2009 on  
165mm  
Front Door




**CT25AU07**  
Audi A4/A5 2009 on  
200mm Front Door

A3 Front Door  
2003-2012  
A4 Front & Rear Door  
2000-2004  
A4 Avant Rear Door  
2001-2004



**PC9-401**  
Audi  
Rear amplified  
Speaker level input

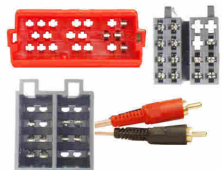

**PC9-404**  
Audi  
Rear amplified  
RCA input (4V)



**PC9-408**  
Audi  
Front and rear amplified  
Speaker level input



**PC9-410**  
Audi  
Front and rear amplified  
RCA input



**PC9-416**  
Audi 2005 on  
Front and rear amplified  
RCA input



**PC9-417**  
Audi 2005 on  
Rear Amplified  
Speaker level input



**ED-VWA2**  
VW/ Audi  
Amplified Aerial Adaptor Lead




**ED-VWA4**  
Audi/ VW 2000 on  
Amplified Aerial Adaptor Lead



**ED-VWA6**  
Audi/ BMW/ VW 2000 on  
Aerial to Std Male  
Std Female to OEM Stereo  
Note: Band expanders need power  
bypass, or phantom power will be  
required




**ED-VWA7**  
Audi/ VW/ Seat/ Skoda 2005 on  
Active Diversity Aerial Adaptor

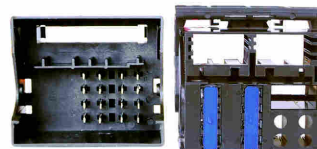

**SOT-976**  
Phone kit/ Accessory  
Interface Lead



A3 96-03 Non Bose Quadlock Amped  
All Road 05 on Quadlock Rear Amped  
Q7 06 on Non MMI  
TT 06 on Non Bose Quadlock

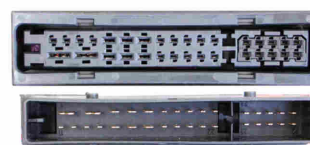

**SOT-099**  
Audi MMI Non-Bose



# ED'S AUTO SERVICES

## ALFA ROMEO



**FP-09-00**  
Alfa Romeo 155, Lancia  
06/92-12/97  
Black



**FP-09-01** Black

Alfa Romeo 156  
02/1998 on



**FP-09-02**  
Spider 90-04, GTV 96>

Black



**FP-09-04** Silver

Alfa Romeo 156  
09/2002 on



**FP-09-03** Silver Grey

Alfa Romeo 156  
09/2004 on  
147 up to 03/2005



**FP-09-05** Silver



**DFP-09-05** Silver  
Requires Sleeve  
Suits DFPK 113

Alfa Romeo 147  
2005 on




**CT24AR12**  
Alfa Romeo 147/GT  
2008 on Silver Grey




**FP-09-06** Black

Alfa Romeo 159 Brera Spider  
2006 on

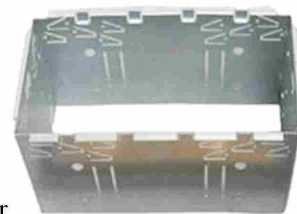

**DFPK-09-06**

 **ED-VW12** Alfa Romeo European Aerial adaptor  
to std male

## CITROËN



**DFP-01-13** Black  
Double DIN  
requires a sleeve  
suits DFPK113



**FP-01-13** Black

Citroën Jumper/Relay, Fiat Ducato  
Peugeot Boxer 09/2006 on



**FP-12-00** Black

Citroën Xantia  
05/1993 on



**CT24CT04** Black  
Citroën Xsara Picasso  
1999 on




**FP-12-04** Black  
Citroën Xsara Trim



**FP-12-01** Black  
Flip lid

Citroën ZX Berlingo  
1998 - 2001

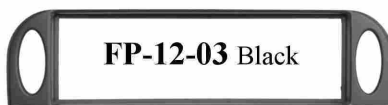

**FP-12-03** Black

Citroën C5 05/2001 to 02/2005



**FP-04-04** Black

Citroën C5 2004 on  
Peugeot 407




**FP-12-05** Black  
Citroën Xsara 2001 on


Base model with clock



**No 564E**

Citroën / Peugeot  
to ISO  
2005 on

 **ED-VW12** Citroën European Aerial adaptor  
to std male

 **ED-VWA4** Citroën European Aerial adaptor  
to std male



## BMW

**FP-06-00** Black

BMW 5 Series 04/1996 on

**DFP-06-00** Black  
Fits Cars without flap  
above stereo

Needs sleeve for Double DIN fitting Suits DFPK103

**FP-017**

Use with  
DFP-06-00

for single DIN Head Unit

**CTKBM14**

BMW 3 Series E90-M Black

Double DIN

**FP-06-05**

Auto A/C

BMW Mini 08/2003 on

**BW2320B** Black

BMW 3 Series  
03/1998 - 04/2005

**FP-06-04**

Black

BMW  
3 Series 04/2005 on  
Auto Air only

**DFP-06-06**

*Not Coupe, Not OEM Nav*

**FP-06-06**

**CTKBM02**

BMW Mini R56 06-15

Non amplified

CANBus steering ctrl  
and aerial adaptor

**CTKBM14**  
Matt Black

BMW 3 Series E9\* 2005-2012 Non-Amped  
Auto Aircon only  
Ashtray button relocation kit  
CAN-Bus Steering & Parking sensor  
Retention, Aerial adaptor

**CTKBM08**

BMW 1 Series  
Auto Air only  
includes CAN-Bus  
steering,aerial  
adaptors

**BW2335B**

BMW Z4 2003 on  
ISO Kit

**DFP-06-31** Black

BMW 3 Series Navigation  
Make sure original unit  
can be successfully  
replaced before ordering

**BW2337B**







BMW X3 10/2004 on

**DFPK-06-30** Black  
BMW X5  
2000 - 06

122


# ED'S AUTO SERVICES

## BMW

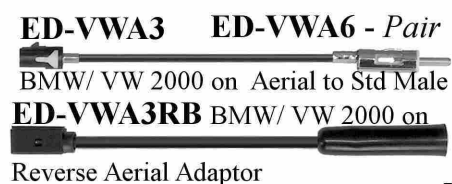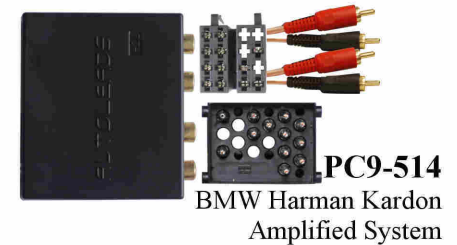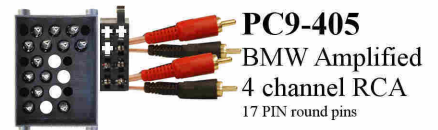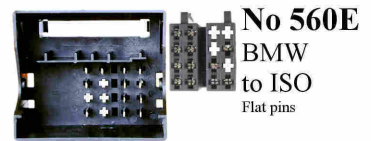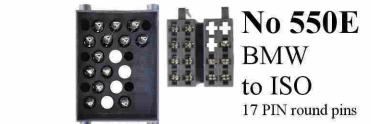

# ED'S AUTO SERVICES


## CHRYSLER / DODGE / JEEP

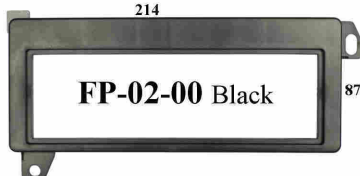


DIN Esc Jeep Wrangler 1997 - 2001  
Cherokee 1996 - 2001  
Grand Cherokee 1993 - 1998  
Voyager 1984 - 2000  
Neon 1995 - 1999



**CR1277B**  
Chrysler 1998 on  
Jeep 1999 on  
Grand Cherokee 1999 - 2004  
PT Cruiser, Voyager 2001 - 05  
Neon 2000 - 02 Wrangler 2004  
Black

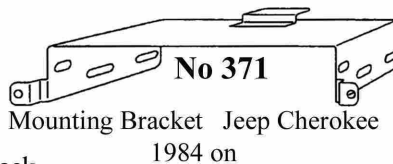

**No 371**  
Mounting Bracket Jeep Cherokee  
1984 on

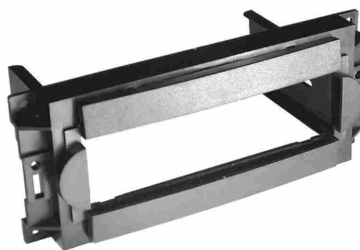


**CR1286B** Black  
Some Chrysler  
Dodge Durango 2004 on  
Jeep Grand Cherokee  
2005 on  
Chrysler 300C



Chrysler 300C  
Navigation Units 05 - 07  
Jeep  
Grand Cherokee 05 - 07  
Commander 06 - 07  
Dodge Ram 05 - 08  
DIN / Double DIN



**CR1293B** Black  
Jeep Cherokee  
Dodge Durango  
2011 on

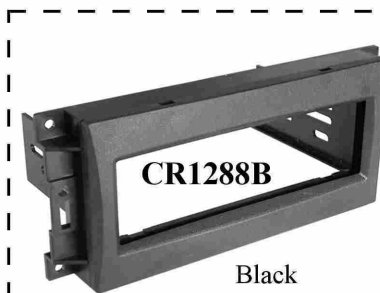


Black




**CR1291B** Black  
Double DIN Trim & Bracket

Jeep Wrangler  
Dodge Sebring  
Dodge Nitro 2007 on  
Chrysler 300 2008 on

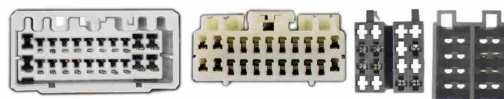


**SOT-046**  
Phone kit lead  
Original Boston  
300C, Voyager 04 - 07

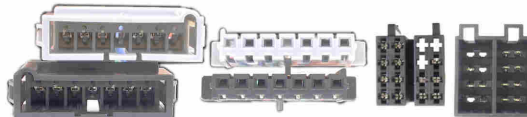

**SOT-068**  
Phone kit/ Accessory  
Interface Lead  
Chrysler/ Jeep pre 2000



**No 558E**  
Chrysler to ISO  
1984 on  
7 + 7 PIN

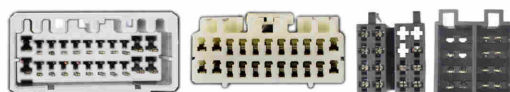

**SOT-086**  
Phone kit/ Accessory  
Interface Lead  
Chrysler/ Jeep 2000 on



**No 559E**  
Chrysler/Jeep to ISO  
2002 on  
22 PIN (6 Large, 16 Small)



**CR03SR**  
Chrysler, Jeep 2005 on  
CAN bus interface



**No 561E**  
Jeep to ISO  
1988 - 1997  
13 PIN



**CR07SR**  
Chrysler, Jeep 2007 on  
CAN bus interface



**CR04B**  
Some Chrysler/Jeep to bare wires  
2007 on  
22 PIN ( 2 Large, 20 Small )



**PC9-407**  
Chrysler/Jeep Grand Cherokee  
Voyager LE & Grand  
(Active speakers)

**ED - CR10** Chrysler 2001 on  
Aerial Adaptor Lead  
Use for fitting Standard Stereo to Chrysler Aerial

**ED - CR20** Chrysler/ Dodge/ Jeep  
Reverse aerial adaptor 2001 on

**ED - VWA3** Euro/Chrysler 2008 on Aerial Adaptor Lead

**ED - VWA3R** Euro/Chrysler 2008 on Reverse aerial Adaptor Lead



## CHERY

**CT23CY02 Silver**  
Chery Nice / A1 / J1  
DR2 / Kimo  
2007 - 2015

## ED'S AUTOSERVICES

## DAEWOO

**FP-16-00**

Daewoo  
Lanos, Leganza, Matiz,  
Nubira, Tacuma



**No 546E**

Daewoo  
Ssangyong Korando, Rexton  
(NB: **Don't** use for Musso)

## DAIHATSU

**No 226K**  
Daihatsu Materia  
Toyota bB  
2006 on

**No 253K Black**  
Daihatsu Sirion/  
Toyota Passo  
2004 on includes bkts.

**No 213 LH/RH**

Daihatsu Sirion  
09/1998 on

**No 229 LH/RH**

Daihatsu YRV  
M200, 201, 211  
2000 on

**No 246 LH/RH**

Daihatsu  
Sirion/ Boon  
Toyota Passo  
2004 on

**SOT-062**

Phone kit/ Accessory  
Lead Daihatsu

**No 540E**

Stereo hook up  
Daihatsu  
Toyota to ISO

## FIAT

**ED-VWA4** Fiat/Euro 2006 on aerial to std male

**FP-01-02 Grey**

Fiat Multipla 2000 - 06

**FP-01-11 Black**

Fiat 500

**ED-VW12**

Fiat/Euro aerial  
to std male

**ED-PF10**

Fiat/Peugeot  
aerial to std male

**FP-01-05 Black**  
Fiat Stilo 2002 on

**FP-01-13 Black**

Fiat Ducato, Peugeot Boxer  
Citroën Jumper/Relay 06 on

**CT24FT13 Black**  
Fiat Stilo 2001 on Black  
Requires Double DIN  
Cage  
Suits DFPK113

**DFP-01-13 Black**  
Double DIN  
requires a sleeve  
suits DFPK113

**FP-01-00 Black**  
Fiat Brava, Bravo  
Marea, Weekend 12/1995 on

**DFP-01-12 Gloss Black**  
Fiat Bravo  
2007 on  
Requires sleeve,  
suits DFPK103

**FP-01-04 Black**  
Fiat Punto 8/1999 on

**FP-01-07/BK Black**  
Fiat Grande Punto 05 on

**FP-01-09 Black**

Fiat Sedici/Suzuki SX4  
Double DIN requires sleeve suits DFPK103

**DFPK-01-30**  
Fiat Ducato 2011 on

Single & Double DIN Black page 9





**WHP701**

Ford/ Mazda Pocket  
92 - 02 (with side clips)

## FORD



**MA1535B** Black  
Ford Escape 2000 on



**FM-K546** Silver  
Ford Escape  
2006 on



**FD1327B** Black

100



**FD1330B** Black

2 x DIN / ISO


100

188  
Ford Explorer 1995 - 2002  
Ford F Series 1997 - 2003  
Ford F Series Super Duty Pickup 1997 - 2002  
Mazda B Series Pickup 1995 - 2002



**FD1422B** Black

100

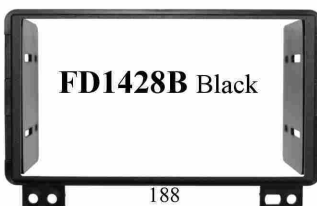

**FD1428B** Black

104

188  
Explorer 02-06, Mustang 01-04



**FD1424B** Black


120



**FD1426B** Black


120

188  
Ford F Series 04>, Explorer 06>..

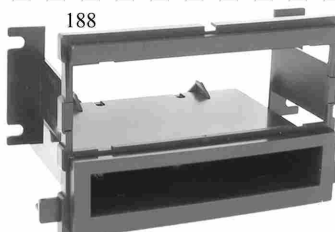


**FD1425B** Black  
F Series  
SuperDuty Pickup  
2005 - 2007

120



**No 19 DP**  
DIN Esc XF Falcon



**No 38 DP**  
DIN Esc EA - EB Falcon  
1988 to 93



**WHF105** Black  
**WHF105G** Grey



**WHP703** (Grey)  
**WHP703B** (Black)

(Recommended) AU Falcon 1997 on



**WHF103**

BA-BF Falcon 2002 - 2008  
Territory 2004 - 2008




**FM-K548** Silver


Ford Ranger  
2007 on




**FP-07-03/BK** - Black  
**FP-07-03/BL** - Blue  
**FP-07-03/G** - Grey  
**FP-07-03/S** - Silver

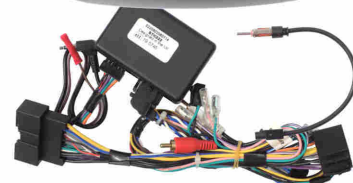

**FM-K5008GK** Graphite  
**FM-K5008BK** Black  
**FM-K5008SK** Silver  
Ford Ranger 2011 on  
Includes Steering wheel remote  
adaptor



**No 372 D**  
DIN Bkt Falcon EF - EL  
1994 to 98

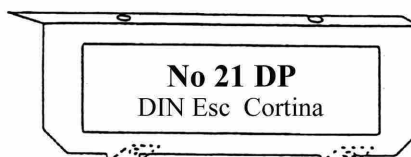

**No 21 DP**  
DIN Esc Cortina

## FORD



**FP-07-00 black**  
**FP-07-00/S silver**

**FD1300B Black**  
Ford Pocket 40mm, 2/3 DIN High  
Mondeo, Escort, Transit 1997 on  
USA Fords



**FMC1370B DIN**  
Black



**FM1375B Black**  
ISO DIN

Ford Focus / Cougar 1998 on


Ford Transit, Focus, CMax, Mondeo,  
Fiesta Mk7 09/2005 on

*Note: for angled sides use FP-07-07*

247 Ford Mondeo 12/2003 on *Note: for straight sided face use FP-07-09*



**FP-07-07 Black**

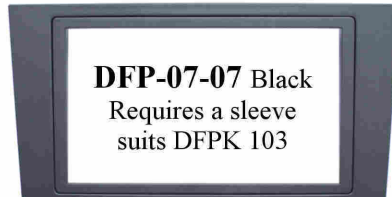

**DFP-07-07 Black**  
Requires a sleeve  
suits DFPK 103



**FP-07-10 Black**

231



**FP-07-09 Black**  
Single/Double DIN

Double DIN needs sleeve  
suits DFPK113



**DFP-07-09 Black**  
**DFP-07-09/S Silver**  
Requires sleeve  
Suits DFPK113

Ford Focus / Mondeo / S-Max 2007 on



**FP-07-12**  
Black Metallic finish



**DFP-07-30 Black**  
Requires sleeve  
suits DFPK103



**DFP-07-30/S Silver**  
Requires sleeve  
suits DFPK103



**DFP-07-20 Silver**

Only fits suitable  
auto airconditioning  
layouts




**DFP-07-17 Silver**  
Ford Focus  
2006 on  
Double DIN needs sleeve  
suits DFPK113



**FP-07-05 Black**  
Single /Double DIN

Fiesta/ Fusion 2002 on

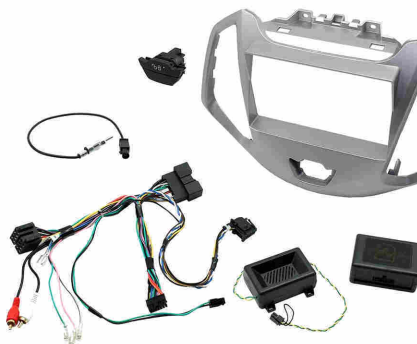

**CTKFD62 Silver**

Ford Ecosport  
2013 on


with Steering Control Adaptor  
Aerial Adaptor, Hazard/Door Lock switch

## FORD




**No 502**

Speaker Hook up  
2 PIN

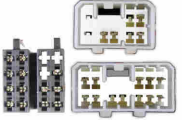

**No 531E**

Mazda to ISO, Ford Ex Japan  
Falcon EF-EL 95-98  
8 PIN & 12 PIN

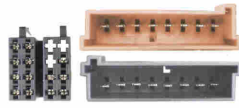

**No 539E**

Ford Mondeo  
Escort Transit to ISO  
8 PIN & 8 PIN



**No 539EABP**

Ford Amp Bypass  
8 PIN & 8 PIN



**No 544**

Mazda/ Ford Japan  
4 & 4 & 3 & 1 PIN



**FD16B**

US Ford to bare wires 1998 on  
16 PIN



**No 554E**

Ford AU to ISO  
20 PIN (4 Large, 4 Med, 12 Small)



**No 555E**

Ford Galaxy  
VW Sharon to ISO  
8 PIN & 14 PIN



**No 556E**

Ford Mondeo to ISO  
2003 >  
20 PIN



**No 557E**

Ford Ranger to ISO 2006 >  
24 PIN (3 Large, 8 Med, 13 Small)



**No 568**

Ford Falcon EA, EB, ED  
1988 - 1994  
13 PIN



**No 570E**

Ford USA to ISO 2003 >  
24 PIN (3 Large, 8 Med, 13 Small)



**No 588E**

Ford Fiesta to ISO 2010 >  
Focus, Ranger to ISO 2012 >  
24 PIN (2 Large, 4 Med, 22 Small)




**No 731**

Mazda Head unit 1990 on  
12 PIN & 18 PIN



**No 754**

Falcon AU Head unit  
20 PIN ( 4 Large, 4 Med, 12 Small )

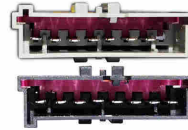

**SOT-074**

Phone kit adaptor lead Ford up to 2000




**SOT-077**

Phone kit adaptor lead Ford Ranger/Mazda BT-50 2007 >



**SOT-085** Phone kit adaptor lead Ford

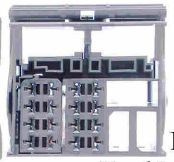


**SOT-092**

Phone kit lead  
Ford Mondeo 2003 >



**SOT-984** Phone kit adaptor lead  
Ford Fiesta 2010 > Focus, Ranger 2012 >

**ED-FD30**  
Pair

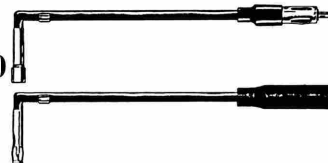

**ED - FD10** Ford USA  
Antenna female to std. male

**ED - FD20** Ford USA  
Radio male to std. female



**ED-CR10** Ford USA  
2007 on Aerial to std.

**ED-CR20** Ford USA  
2007 on Stereo to std. Aerial



**ED-VWA3** Ford Euro  
Aerial to std.




**ED-VWA3R** Ford Euro  
Stereo to std. Aerial



# ED'S AUTO SERVICES

## GM / HOLDEN / ISUZU

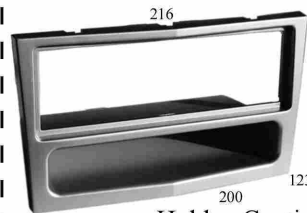


**FP-19-01** Black  
**FP-19-01/CG**  
 - Charcoal Grey  
**FP-19-01/S** Silver  
**FP-19-01/SS** Shiny silver

Holden Captiva 5, Astra, Zafira 03/2004 on



**DFP-19-01** Black  
**DFP-19-01/CG**  
**DFP-19-01/SS**  
 Double DIN requires  
 a sleeve suits DFPK 103

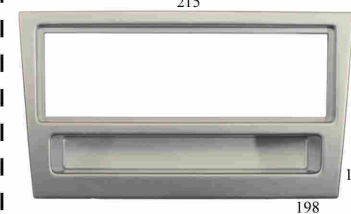

**FP-19-00** Black  
**FP-19-00/GN**  
 - Gun Metal  
**FP-19-00/S** Silver


Barina, Vectra, Omega, Agila, Corsa, Meriva, Tigra, Vivaro 10/2000 on



**DFP-19-00/S** Silver  
 Double DIN requires  
 a sleeve  
 suits DFPK103



**SUZ-K941** Black  
 Holden Barina,  
 Kalos, Viva  
 2006 - 2008

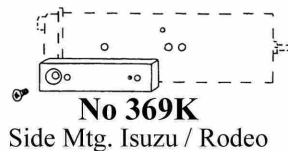

**No 369K**  
 Side Mtg. Isuzu / Rodeo



**FP-27-05** Black




**DFP-27-05** Black  
 Double DIN requires sleeve  
 suits DFPK 113  
**CT23CV10(incl bkts)**

Holden Captiva 7,  
 Epica, Viva  
 Chevrolet Optra, Aveo,  
 Some Barina TK  
 2006 to about 2010




Isuzu D-Max  
 Holden Colorado  
 2012 >

**ISK-9306B** Black  
**ISK-9306G** Grey

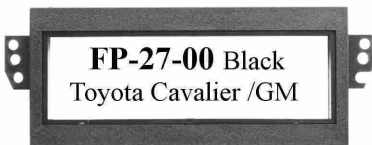

**FP-27-00** Black  
 Toyota Cavalier /GM



**No 4DP** Black  
 Din Esc Camira

216



**GM1516B** Black

Camaro 82 - 96, Firebird 82 >



**GM1500B** Black

GM Multipurpose Kit 1982 on



**GM1508B** Black

GM Expeditior Kit  
 1982 on



**GM1517B** Black

GM Explorer Kit  
 1992 on



**GM1482B** (Black)

GM Full Size Pickup 1988 - 1994  
 (All other colours available 3 weeks)



**GM1518B**

(Pocket)  
 GM Full Size Pickup  
 1988 - 94



**GM1483B** Black

GM Full Size Pickup  
 1995 - 2005



**GM1486B** Black

GM Full Size Pickup 1999 >



**GM1583B** Black

Chev/GM 92> Blazer 99>



**GM1590AB** Black

GM, Hummer, Suzuki, Isuzu  
 1992 on Double DIN Multi Kit



**FP-27-04** Black

H3 Hummer 06 >  
 C6 Corvette 05 >



**GM1595B** Black



# ED'S AUTO SERVICES

## GM /HOLDEN /ISUZU


**WHG269**

VE Commodore Rear Shelf Grille

**WHG169** - Grey VT/VX Commodore

**WHG169B** - Black VZ Commodore

Rear Shelf Grille For 6X9" speakers




DIN Bracket Commodore VN-VS

**ED - GM10** GM mini to std Head unit

**ED - GM30** -Pair  
GM USA mini Aerial Adaptor


**ED - GM20** Std Aerial to GM  
Head unit

**ED-GM12** Aerial Adaptor  
GM Female to ISO DIN Male

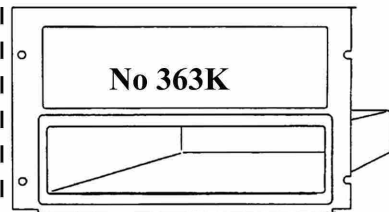

**No 363K**


(Use 363K  
for Single DIN  
Use 373LH/RH  
for Double DIN)



Holden Commodore VT - VX  
1997 on

**No 373 LH/RH**

VT-VX Commodore  
Double DIN Stereo

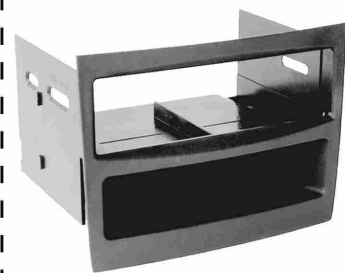

VY/VZ Commodore  
2003 on

**WHF102**

Black

**WHF102G**

Grey ISO DIN

**WHF102GKIT**

Grey + Harness  
& Aerial lead



**WHF104**

Black

**WHF104G**

Grey


**WHF104GKIT**

Grey + Harness  
& Aerial lead  
ISO Double DIN



**No 528E**

Holden Commodore  
VT 97 > to ISO  
18 PIN

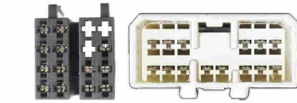

**No 529E**

Holden Commodore  
VR - VS to ISO  
14 PIN



**No 530E**

Holden Commodore  
VN - VP, Isuzu > 96, to ISO  
13 PIN



**No 549E**

Isuzu /Rodeo  
96 > to ISO  
16 PIN



**No 569E**

GM USA  
96-05, to ISO  
21 PIN



**No 585E**

Captiva, Epica  
05 > to ISO  
16 + 14 PIN



**GM03B**

GM 94 > to bare wires  
32 PIN



**No 975K** Dual Zone Aircon for aftermkt Alpine

**No 976K** Dual Zone Aircon for aftermkt Pioneer

**No 980K** Single Zone Aircon for aftermkt Alpine

**No 981K** Single Zone Aircon for aftermkt Pioneer

Must use Double DIN Screen Head unit with rear camera input  
(Used for displaying such data as navigation and air conditioning)



**SOT-093** Isuzu /Rodeo

Phone kit lead 16 PIN



**SOT-122** VE Commodore


Phone kit lead



**GM1598AB**

Black

Single & Double ISO  
Chev Impala 2006 on  
Tahoe 2007 on

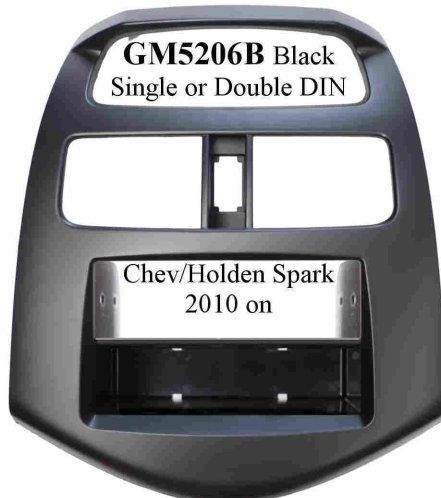

**GM5206B** Black  
Single or Double DIN

Chev/Holden Spark  
2010 on



**SOT-924**

Captiva  
Cruze, Epica



**SOT-963**

GM



## HONDA

**TA-204**

3.2mm DIN Trim

Pack of 10

**HA1563B Black**

Accord 1990 - 1997, CRV 1997 on, Odyssey 1995 on  
Prelude 1992 on

**HA1566B**

Black  
Double ISO DIN

**No 952K**

Honda Accord  
1998 - 2002

**HA1564B**

Honda Accord  
1998 on  
Black

**No 973K Black**

Honda Odyssey  
RB1, RB2 2003- 08

**HA1573B**

Recommend  
using HA09B  
loom to keep  
original  
head unit  
Black

Honda Accord  
2003 on  
Lower dash

**TBXE-H001**

with module for OEM  
head unit to retain all  
functions

**HONK823H**

with breakout loom

**HA1570B Black**

Honda Civic 1996 - 98

204.5

62.5

200

**DFPK-15-03/S**  
(silver)

Honda Civic 2001 on

**HON-K8800**

Honda Civic  
2006 - 10  
Black

**No 969P Black**

Honda Stream  
RN6 - RN9  
2006 on

**CT23HD26**

Honda Accord  
Non-Nav 2003-2007  
Climate Control

**No 974 LH/RH**

Honda Stream  
RN6 - RN9 2006 on

**HONP4**  
Honda Pocket

**HONP3**  
Honda Pocket  
with Lid

**HONP1**

1990's type  
Honda Pocket  
Screws Under Stereo

**No 971 Black**  
Honda Spike  
& Mobilo  
2002- 08

**HA1701B Black**

Honda Element 2003 - 06



## HONDA



**No 953K Black**  
Honda CRV  
RD1 1996 - 01



**HON-K8008**  
Honda City  
2006 on



**FP-15-05 Black**  
Single & Double DIN  
Honda CRV RE1-RE5, RE7 2007 - 2011



**No 964P Black**



**No 950K Black**  
Honda Edix  
2004 - 2009

converts all models with screens  
to standard double DIN




**HA1714B Black**

Honda CRV 2012 on  
Single & Double DIN

**DFP-15-30/J Japanese H/U**

**DFP-15-30 Chinese H/U**

Honda CRV  
2002 - 2012 Black  
Also fits other Hondas

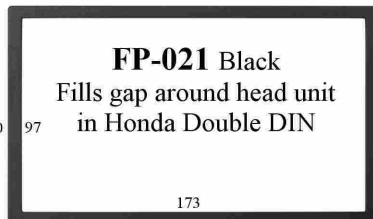


110


**FP-021 Black**  
Fills gap around head unit  
in Honda Double DIN

173

188

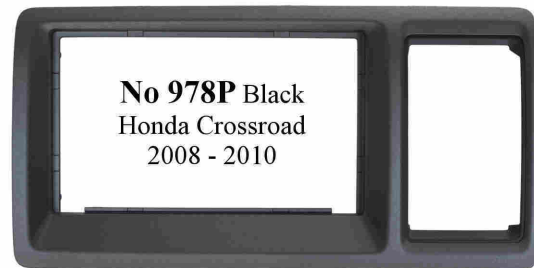

**No 978P Black**  
Honda Crossroad  
2008 - 2010

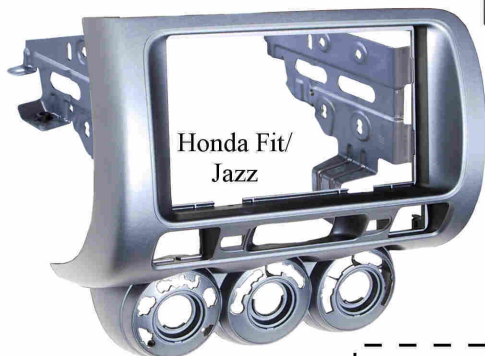

Honda Fit/  
Jazz

**DFP-15-31/J Japanese H/U**

**DFP-15-31 Chinese H/U**

Honda Fit/ Jazz  
2002 - 2012 Black  
Also fits other Hondas



**No 970**

Honda Fit/ Jazz  
2007 - 2013 Bracket

**No 954K Blue Metallic**  
**No 954K/G Grey**



**No 962P Black**  
*Uses original brackets*




**HON-K8006**  
Black

Honda Fit/ Jazz, 2007 on


## HONDA




**No 951LH/RH**  
Honda Accord,  
Stream

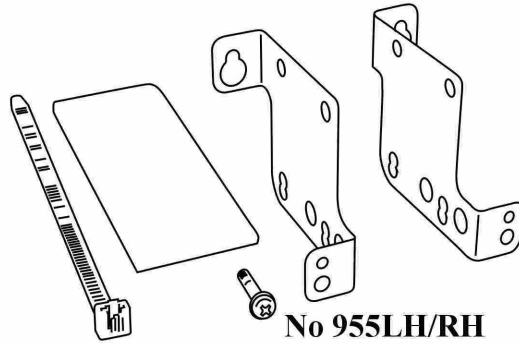


**No 955LH/RH**  
Honda Odyssey  
RB1 2004 on

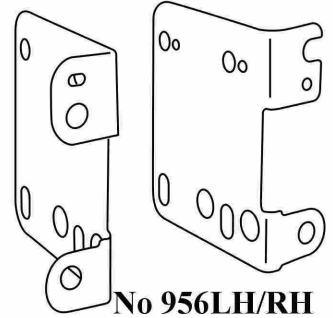


**No 956LH/RH**  
Honda Odyssey  
RA6 /9

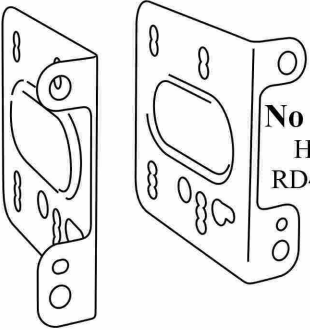


**No 957LH/RH**  
Honda CR-V  
RD4/5/7 2002 on

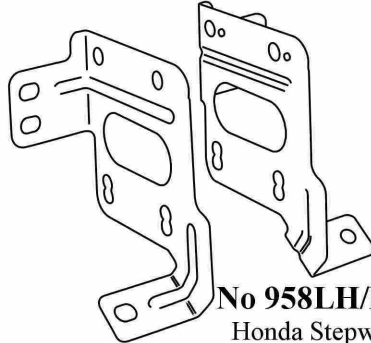


**No 958LH/RH**  
Honda Stepwgn  
RG1

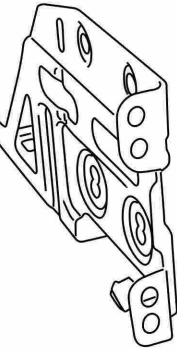

**No 963LH/RH**  
Honda Airwave, Partner  
2005 to 2008

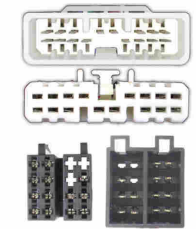

**SOT-064**  
Phone kit/ Accessory  
Lead  
Honda 16 PIN  
1986 on

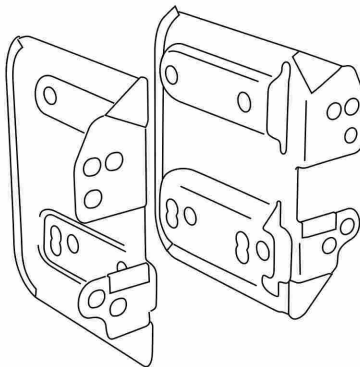

**No 968LH/RH**  
Honda Stream RN1/2/3/4/5  
2000 to 2006



**SOT-071**  
Phone kit/ Accessory  
Lead ( Non-Amplified )  
Honda 20 PIN  
1999 on



**SOT-908**  
Phone kit/ Accessory  
Lead  
Honda Civic  
2006 on



**DNAHO-10**  
Honda 2008 on  
Aerial to std Male



**DNAHO-11**  
2008 on  
Honda Stereo to std Fem



**No 538E**  
Honda to ISO  
1986 on 16 PIN



**No 542E**  
Honda to ISO  
1998 > 20 PIN



**No 572E**  
Honda to ISO  
2005 >  
17 PIN (12 Large, 5 Small)



**No 587E**  
Honda to ISO  
24 PIN (4 Large, 20 Small)



**No 742**  
Honda Head Unit  
1998 on 20 PIN



**CTSHO003.2**  
Steering Remote Adaptor  
Honda  
CR-V 2009 - 2012  
CR-Z 2010 - 2015  
Fit 2007 - 2015  
Insight 2009 - 2015  
Jazz 2008 - 2015




**HA09B**  
Honda Relocation T-Harness  
2003 on  
(Enables the original stereo to  
be left connected in behind dash  
to keep screen working)




**ED-HO30**  
Pair

**ED-HO10**  
Honda 2005 on  
aerial to std male

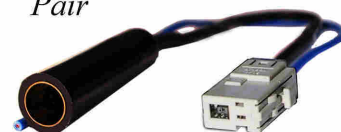


**ED-HO20**  
Honda 2005 on  
stereo to std fem






Plastic. Suits Pioneer. 185

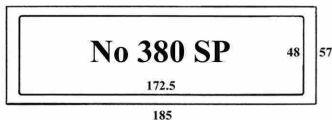


## HYUNDAI



**No 382 LH/RH**

Fits most 1990's Hyundai  
Use ISO trim plate behind panel

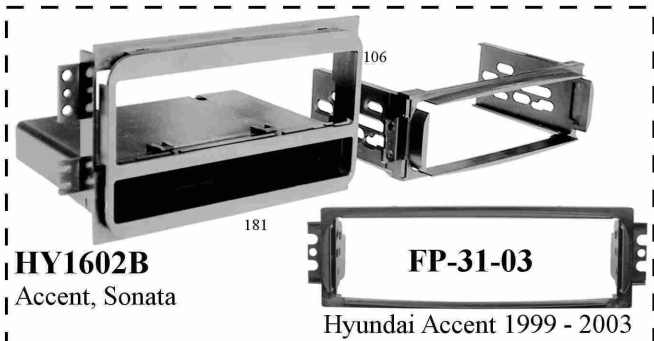


**HY1602B**

Accent, Sonata


**FP-31-03**

Hyundai Accent 1999 - 2003

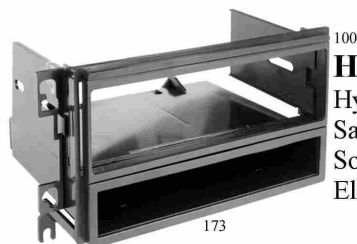

**HY1604B**

Hyundai (OEM D/Din)  
Santa Fe to 2005  
Sonata 01 - 05  
Elantra 01 - 06

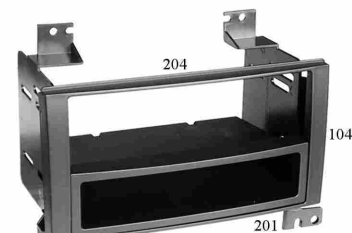

**HY1612B**

Hyundai Santa Fe 2006 on



**HY1614B**

Hyundai Elantra 2006 on



**HY1609B**

Hyundai Sonata

2005 - 2008  
Single/ Double DIN



**HY1611B**

Hyundai Accent 2006 on



**DFP-31-10**

Hyundai Sonata  
2008 on



**CTKHY14**


Hyundai  
Accent/Verna 2010 on  
includes Steering ctrl  
and aerial adaptors



**DFPK-31-41**

Hyundai Elantra  
2011 to 2013  
Double DIN

(Air vents lower than radio)

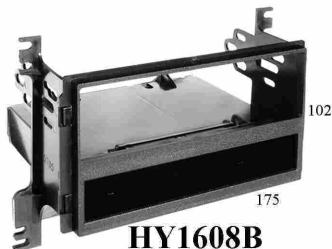


**HY1608B**

Hyundai Tucson 2005 on



**FP-31-13**

Hyundai Granduer, Azera  
2007 on

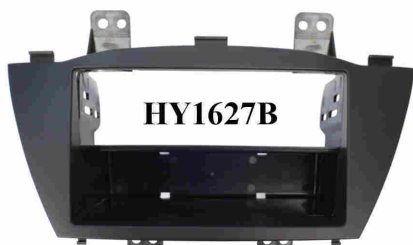

**HY1627B**

Hyundai IX35/Tucson  
2010 on Single & Double DIN












**DFPK-31-40**




Hyundai Elantra  
2013 on  
Double DIN

(Air vents beside radio)

## HYUNDAI

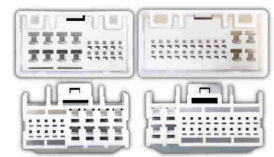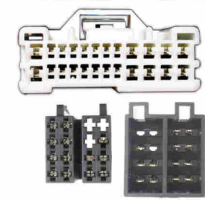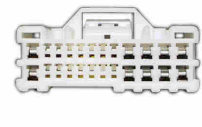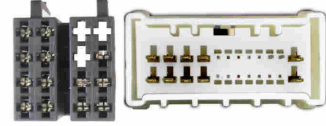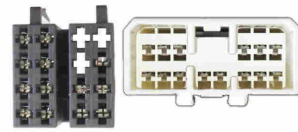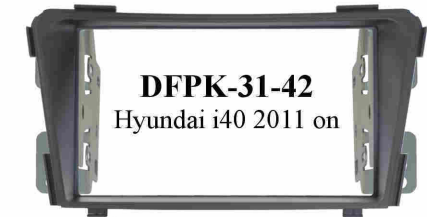


## JAGUAR

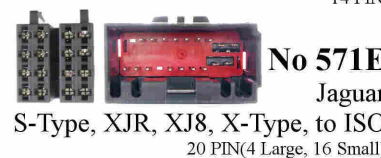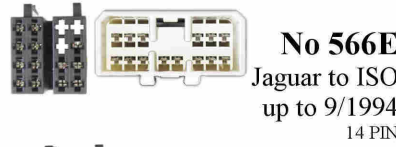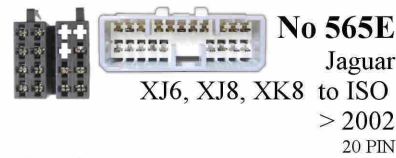


# ED'S AUTO SERVICES

## KIA

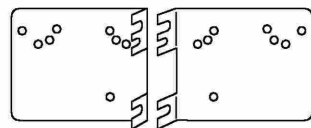

**No 394 LH/RH**

Kia

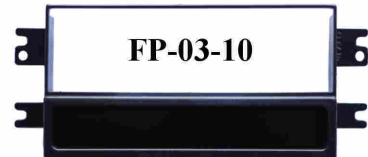


**FP-03-10**

Kia Cerato 2004 - 07



**DFP-03-13**

Kia Cee'd Double  
DIN 2006 on

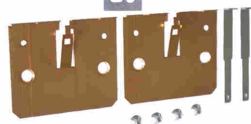

**KI-06**

Kia Aerial to Std. Plug  
Aerial Adaptor



**FP-03-06**

Kia Sportage 07/1999 on



**CT23KI22**

Kia Forte 2008 on  
Cerato 2008-2012  
Manual Aircon



**CT23KI23**

Kia Forte 2008 on  
Cerato 2008-2012  
Auto Aircon

**KI-07**

Kia Head unit to  
Std. Socket Aerial Adaptor




**ED-HY10**

Hyundai/ Kia to Std. Plug  
Aerial Adaptor



**ED-HY20**

Hyundai/ Kia to  
Std. Socket  
Aerial Adaptor

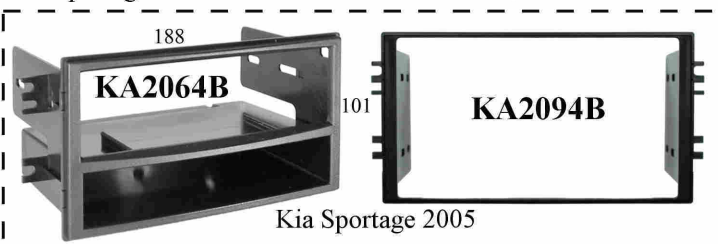

**KA2064B**

**KA2094B**

Kia Sportage 2005



**CT23KI54**

Kia Cerato 2012  
Double DIN Black



**KIA-K53552**

Kia Sportage  
2010 on



**KA2066B**

Kia Sorento 2002 on



**No 548E**

Hyundai/Kia to ISO 1999 on  
16 PIN




**KIA-K53549**

Kia Sorento  
2009 - 2012



**FP-03-09**

Kia Sorento 2006 to 2009 for most cars

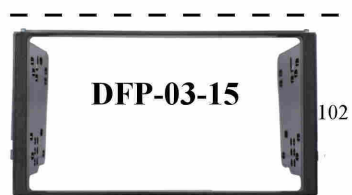

**DFP-03-15**



**No 552E**


Kia/Hyundai to ISO 2010 on  
18 PIN (8 Large 10 Small) & 24 PIN  
(4 Large 20 Small)



**FP-03-11**

**DFP-03-11**

Kia Carnival 2006 on

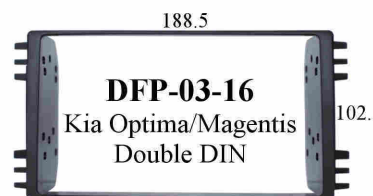

**DFP-03-16**

Kia Optima/Magentis  
Double DIN



**No 562E**

Kia to ISO

20 PIN (4 Large, 16 Small)



**KA2096B**

Kia Soul 2008 to 2011  
Single and Double DIN



**No 582E**

Hyundai/Kia to ISO  
24 PIN (10 Large, 14 Small)

**SOT-901** Phone kit/ Accessory Lead  
Carens/ Rondo 1998 on, Cerato 04 - 09  
Magentis/ Optima 05 on  
Mentor/ Sephia 92 - 2000, Picanto 04 - 08,  
2010 on Rio 06 - 09  
Carnival/ Sedona 05 on




## MAZDA



**DFP-26-09**

Mazda 2/  
Demio  
08/2007 on

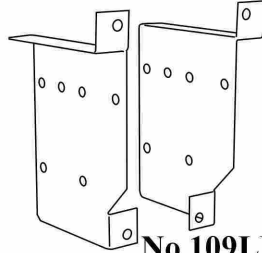

**No 109LH/RH**

Mazda 2/Demio 2008 on Mounting Brackets  
for use with OEM panel *For Single DIN, use SUBP1*

188




**WHP701**

Mazda / Ford Pocket  
92 - 02

**No 114K/BL Black**

**No 114K/BU Blue tint**

Mazda 2/Demio 2002-07 Top of dash  
includes loom and aerial adaptor

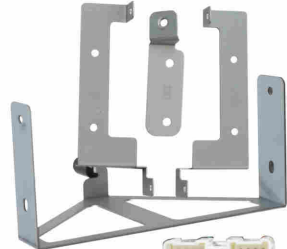

**UA-T55D**

Mazda 2/Demio 2011 on  
Brackets & Loom



**FP-26-00**


120

Mazda MX5, 626, Familia 2000 on



**MA1532B**

Mazda MX5 2006 on  
Single & Double DIN

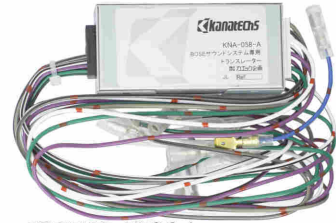

**TBXE-X001** Mazda Bose  
Adaptor for TBXE Kits

Mazda 3/ Axela 2003 on



**MA1536B**

**TBXE-T001** 2003 - 2005

Retains LCD display



**MA1540B**



**TBXE-T005**

2005 on



**TBXE-T004**

Mazda 6 / Atenza  
03/2002 - 09/2005  
Non-Bose Silver




**MA1543B**

Mazda 3/ Axela 2009 on  
Single and Double DIN



**DFP-26-01**

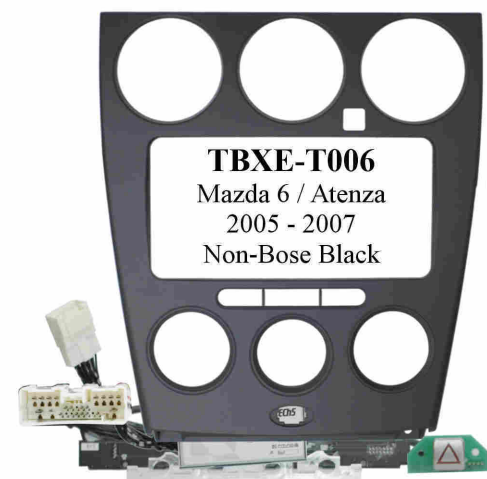

**TBXE-T006**

Mazda 6 / Atenza  
2005 - 2007  
Non-Bose Black



**TBXE-T009**

Mazda 6/  
Atenza  
2008 - 2012  
Mounting  
Brackets



**FP-26-03**  
or **CT24M210**




Single/Double DIN. Double DIN requires sleeve suits DFPK103





**MAZ-K860**  
Single / Double DIN

Mazda 6 / Atenza 2008 on


# MAZDA

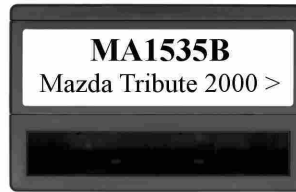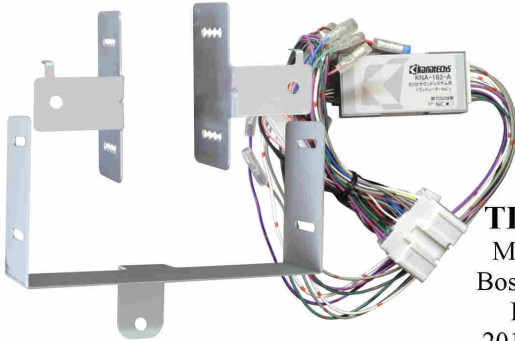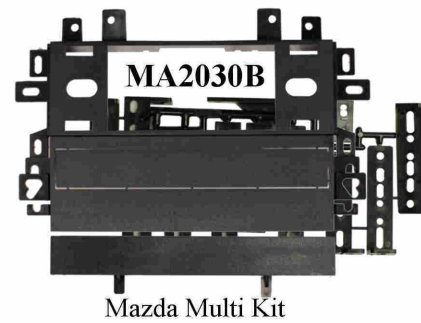

Suits cars with  
Auto Aircon.  
Includes  
wiring & bkts

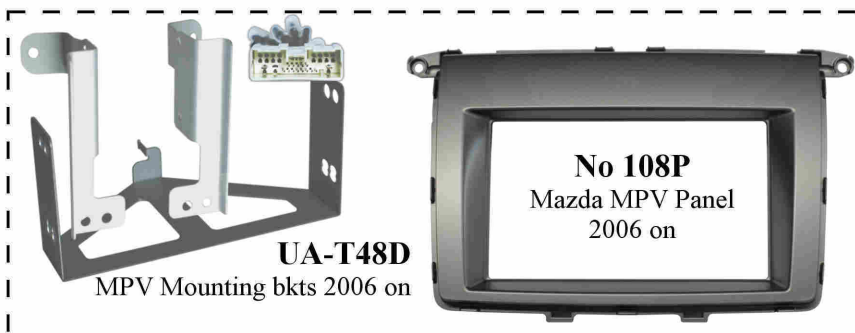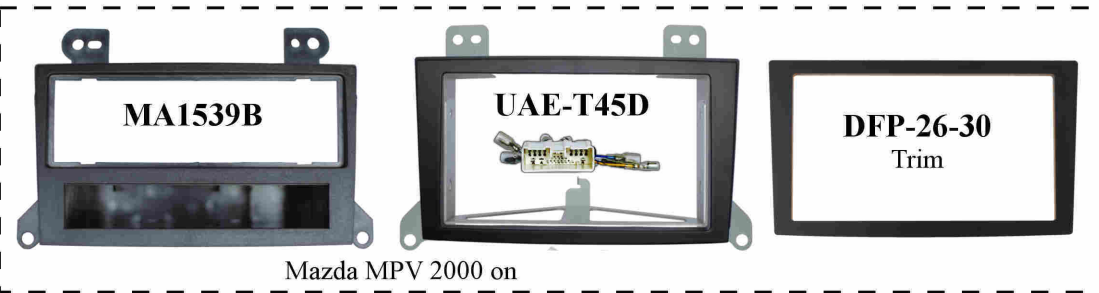

## MAZDA

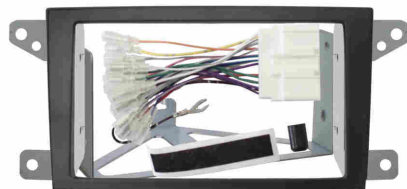

**UA-T44D**


Mazda Premacy 2001-2005



**FP-26-02**

Mazda 5/Premacy

2005-10 Single/Double DIN  
sleeve required for Double DIN  
suits DFPK103

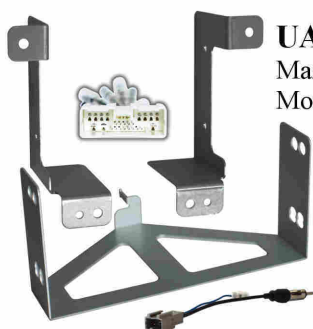

**UA-T53D**

Mazda Premacy 2010 on  
Mounting brackets



**CTAMZBT001**

Mazda Bluetooth Interface  
Mazda 3, 5, 6, MX5, RX8 2006 - 2009




**CT29MZ01**

Mazda Aux in Adaptor  
For head units with Aux facility



**PC9-520**

Mazda 2001 on  
Bose adaptor  
to ISO

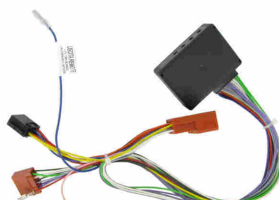

**CT53-MZ01**

Mazda Bose Adaptor  
24 Pin



**No 111P**

Mazda Verisa  
2004 on



**No 502**

Mazda Speaker  
2 PIN



**No 531E**

Mazda to ISO 1990 >  
8 PIN & 12 PIN



**No 544**

Mazda / Ford Japan  
1986 - 89  
4 & 4 & 3 & 1 PIN




**No 557E**

Mazda to ISO 2000 >  
24 PIN (3 Large, 8 Med, 13 Small)



**No 731**

Mazda Head Unit  
1990 >  
8 PIN & 12 PIN

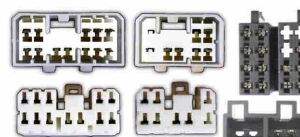

**SOT-067**

Phone kit/ Accessory  
Lead  
Mazda 1990 on




**SOT-077**

Phone kit/ Accessory  
Lead  
Mazda 2001 on



**ED-HO10**

Aerial adaptor  
Some Hondas, Mazda  
Mitsubishi  
2010 on

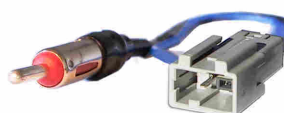

**ED-HO30**

Pair



**ED-HO20**

Reverse Aerial lead  
Some Hondas, Mazda  
Mitsubishi 2010 on



## MERCEDES

**FP-23-00**  
Mercedes Sprinter

08/2000 >

**FP-23-01**

**MZ2340B**  
Single & Double DIN

Mercedes C Class, Vito, Vaneo 11/2000 on



(For fitting Double DIN  
units, cut bar & suits sleeve  
size DFPK113)

**FP-23-04**  
Mercedes  
A/B Class  
Vito 06 >  
Sprinter 06 >



**FP-23-03**



**MZ2347B**

Mercedes C Class 11/2004 on

**CT24MB05**  
Mercedes

A Class W169 2004 - 2012  
B Class W245 2005 - 2011  
Sprinter/Vito W639 2006 on



**FP-23-10**

Mercedes C Class 2008 on



**FP-23-07**  
Mercedes CLK 2006 on

For Double DIN use DFPK103



**CT24MB11**  
Mercedes A-Class W176  
2013 on Black  
CAN-Bus Steering Ctrl,



**FP-23-02**



**MZ2345B**

Mercedes E Class 2003 on




**CT24MB17**  
Mercedes Sprinter 06 on

Single & Double DIN



**FP-23-05**  
Mercedes ML/GL 06 on

(Double DIN fittings requires removing  
centre bar & a sleeve, suits DFPK113)

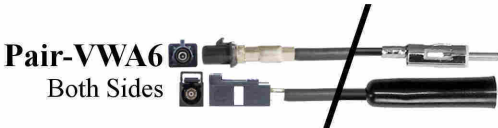

Both Sides


**ED-VWA3** Mercedes aerial to std male  
**ED-VWA3R** Reverse aerial lead  
(OEM head unit to std aerial)



**FP-23-06**  
Mercedes SLK 09/2004 >

Single & Double DIN  
(Double DIN req. cage, suits DFPK103)

**CT24MB13**  
Double DIN suits  
DFPK113 sleeve

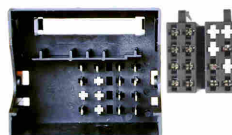

**No 560E**  
Mercedes to ISO



**No 580E**  
Mercedes  
Audio 10 to ISO



**SOT-912**  
Phone kit Lead  
Gateway &  
Harmon Kardon  
Command



**SOT-976**  
Phone kit Lead  
Audio 20  
Basic Command Nav




**SOT-976FB**  
Phone kit Lead  
Fully Populated



**FP-23-08**  
Mercedes R Class 05 on

(For fitting Double DIN stereos, remove centre bar  
and use a sleeve, suits DFPK113 cage)

# MITSUBISHI

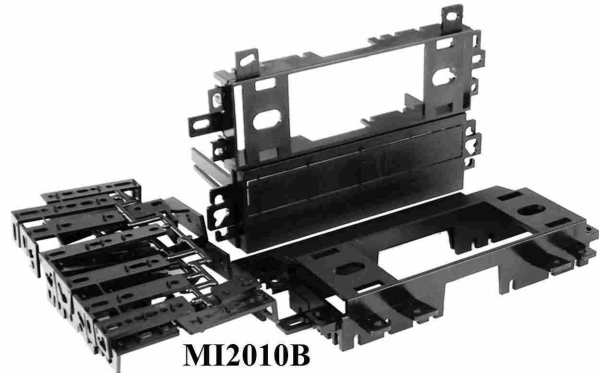

**MIT2010B**

Mitsubishi Multi Kit  
1983 - 1997



**MITPP**

Mitsubishi Pocket



**MIT-K2010B**

Mitsubishi Colt  
2004 on

for single DIN use MITPP  
Remove existing pocket



**DFPK-28-33**

Mitsubishi Colt Plus  
Champagne Silver  
Double DIN



**MIT-K2016**

Mitsubishi Mirage  
2012 on



**DFPK-28-32**

Mitsubishi Outlander  
2005 to 2012  
Double DIN



**FP-28-02**

Mitsubishi Outlander 2005 on  
Single DIN & Double DIN




**MIT-K16332**

Mitsubishi Lancer  
EVO 7 - 9  
Double DIN



**MIT-K800**

Mitsubishi Lancer,  
Galant Fortis  
2007 on

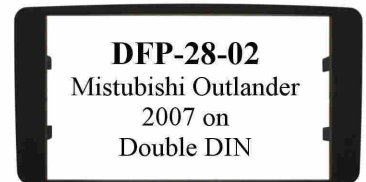

**DFP-28-02**

Mistubishi Outlander  
2007 on  
Double DIN



**DFPK-28-30/  
CT23MT16**

Mistubishi Outlander  
2013 on

Double DIN  
Gloss Black

## MITSUBISHI



**No 642K**  
Mistubishi Delica  
CV5W 2006 on




**UA-M40D**  
Mistubishi Delica D5  
2008 on




**MI3018B**  
Mistubishi 380  
2006 on



**No 532E**  
Mitsubishi  
to ISO Ex - Japan 1985 - 94  
5 PIN & 9 PIN

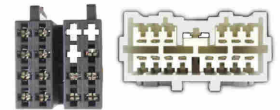

**No 533E**  
Mitsubishi to ISO  
1995 on  
14 PIN



**No 574E**  
Mitsubishi to ISO  
2007 on  
20 PIN



**DFPK-28-20**

Misubishi Pajero  
2007 on




**MIT-K2012**  
Mitsubishi Pajero


Top of Dash Variant 2011 on



**DFPK-28-31**  
Mitsubishi ASX  
2010 on

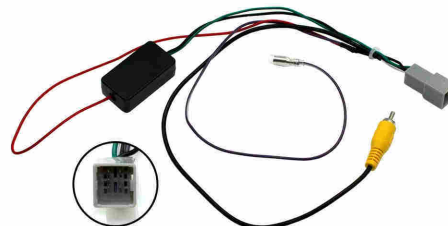

**CAM-MT1-RT**  
Mitsubishi OEM Reverse  
Camera Retention Cable  
2013 on

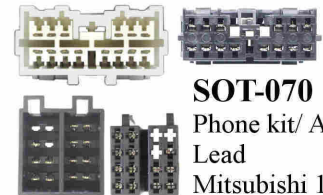

**SOT-070**  
Phone kit/ Accessory  
Lead  
Mitsubishi 1995 on



**CT23MT21**  
Mitsubishi ASX  
Double DIN  
2014 on



**SOT-908**  
Phone kit/ Accessory Lead  
Mitsubishi Navigation,  
Non amplified



**CT23MT22**  
Mitsubishi L200,  
Triton  
Double DIN 2015 on




**ED-HO10**  
Mitsubishi Aerial lead  
Starting 2007



**ED-HO20**  
Mitsubishi Aerial lead  
Starting 2007



**SOT-929**  
Phone kit/ Accessory Lead  
Mitsubishi 2003 on

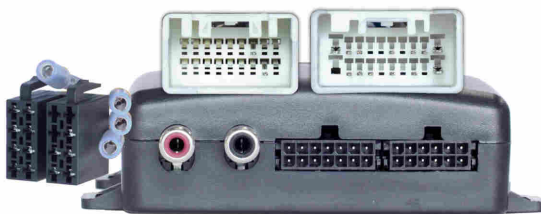


**CTUMT01**

Mitsubishi Select Rockford Fosgate Steering Adaptor and  
Onboard information Display for Aftermarket AV Headunit  
ASX 2010 - 2015 L200, Lancer, Triton 2008 - 2015  
Outlander 2008 - 2013 Pajero Sport 2012 - 2015




## MITSUBISHI

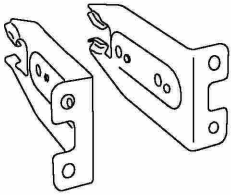


**No 630 LR**

Mitsubishi Pajero V64-78 1998 on  
Chariot N84W  
RVR N61-4, N71/3/4  
RVR

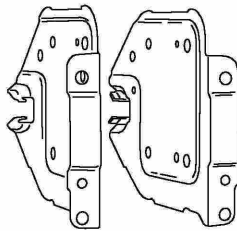


**No 631 LH/RH**

Mitsubishi Lancer, Libero,  
Mirage CJ2A, Evo 4, Evo 6, FTO,  
Delica, L400, RVR N61-4,  
N71-4 1992 on

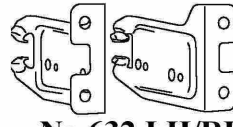


**No 632 LH/RH**

Mitsubishi Evo 7  
2001 on

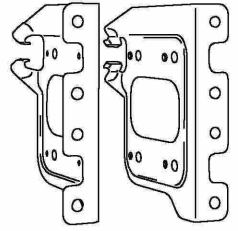

**No 633 LH/RH**

Mitsubishi Airtrek CU4W

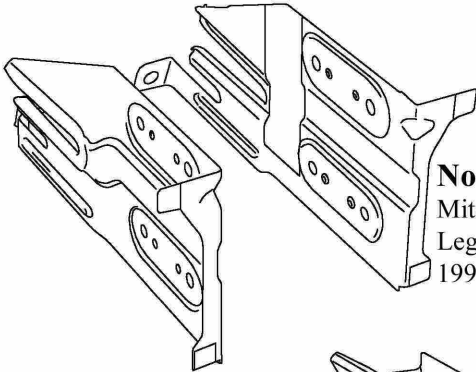


**No 634 LH/RH**

Mitsubishi Galant,  
Legnum  
1996 on




**No 635 LR**

Mitsubishi  
Pajero V45

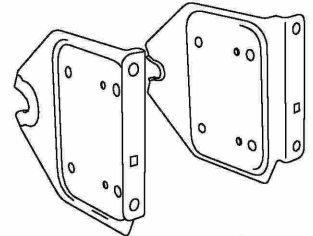


**No 636 LH/RH**

Mitsubishi GTO  
1992 - 2002

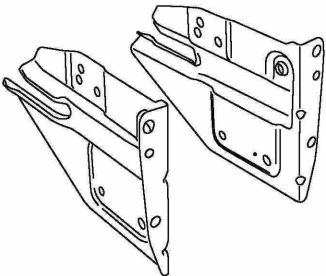


**No 639 LH/RH**

Mitsubishi Magna V3 KR-KS  
1992-1997

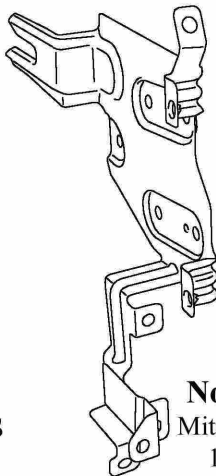


**No 640 LH/RH**

Mitsubishi Diamante  
1994 - 08/2002

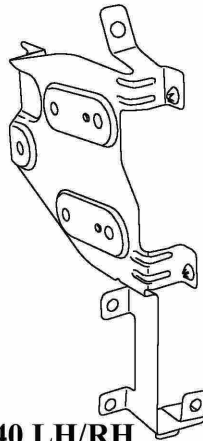


**No 641L/R**

Mitsubishi Challenger  
K96 /7 /9  
1996 - 1999

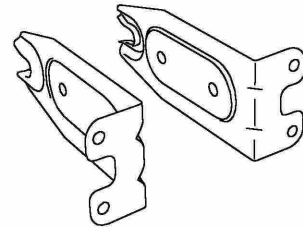


**No 643 L/R**

Mitsubishi i-car HA1W

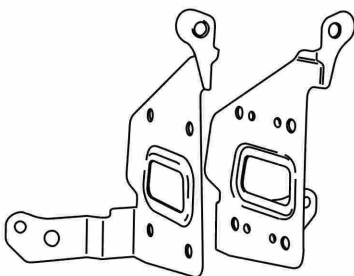


**No 645 LH/RH**

Mitsubishi Grandis/ Chariot  
NA4W 2003 on

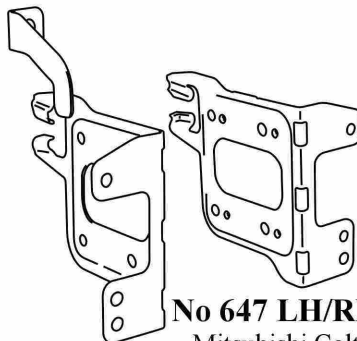

**No 647 LH/RH**

Mitsubishi Colt

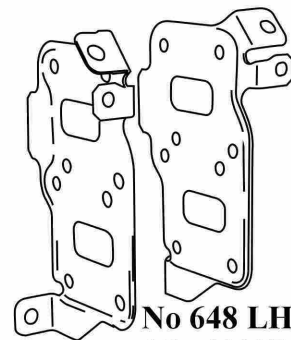

**No 648 LH/RH**


Mitsubishi Evo 10  
Galant Fortis, Lancer  
2007 on

## NISSAN

**NISSP3**  
Nissan Pocket  
newer models

**WHP704**  
Nissan Pocket

**No 361**  
Nissan Trim - Black  
171 48 57 185

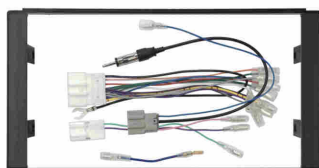

**UA-N59D** Nissan Wide to std  
Double DIN Includes wiring

**DFP-22-30**  
Nissan Wide  
to Double DIN

**FP-22-30**  
Nissan Wide to DIN

**FP-22-03**

**ND-K742**

**FP-22-09**  
Nissan 350Z 06-09

**CT24NS19**  
Nissan 350Z 06-09  
Double DIN

Single  
& Double DIN

185 Nissan 350Z 2003-2005

**FP-22-02**  
Nissan Almera

**No 401B**  
Nissan FB15  
Pulsar / Sentra  
Blank Panel  
Upper position

**No 178K**

Nissan FB15  
Pulsar/Sentra  
Includes Side  
Mount brackets

**No 402D**  
Nissan FB15

Pulsar / Sentra  
Lower Dash - Replaces Pocket

**No 145K**  
Nissan Dualis/Qashqai  
2007 - 2013

**No 152K**  
Nissan Pulsar C12  
2013 on  
Includes side trim & wiring

**No 161K**  
Nissan Skyline V35,

Stagea M35  
Trim and  
Heater controls  
Trimcode G & J,  
For trimcode S, use 167K

**CT23NS20**  
Nissan Qashqai 2014 on

Single/Double DIN

**CTKNS10** Metallic Gloss Black  
Nissan Navara 2016 on  
with Steering Control Adaptor  
Aerial lead

**No 159P**  
Nissan Elgrand  
2005 - 2010

**No 473K**  
Nissan Cefiro  
Maxima A33  
For single DIN use NISSP

**NN1664B**

Nissan Maxima 2009-2011

# ED'S AUTO SERVICES

## NISSAN

**No 147K**  
Nissan  
Bluebird Sylphy  
2005 - 2012

**No 153K**  
Nissan  
Micra/March K12  
Trimcode J

**DFP-22-13**  
Nissan Micra  
1998 - 2003  
Double DIN

**DFP-22-08**  
Nissan X-Trail  
2007 on

**SAK-3302**  
Nissan Micra  
130mm Speaker Adaptor  
Rear Door

**CT24NS25**  
Nissan Altima 2013 on

Single & Double DIN

**No 66DP**  
Nissan 280Z

**CT25NS01**  
Nissan Micra  
165mm Speaker  
Adaptor  
Front Door

**No 45DK**  
Nissan Bluebird U11

**No 20DK**  
Nissan Navara, Pathfinder, Terrano  
to 1996

**No 464P**  
Nissan Tino

**No 501**  
Nissan Speaker  
2 PIN White Plug

**No 503**  
Nissan Speaker  
2 PIN Brown Plug

**No 535E**  
Nissan to ISO  
10 PIN & 6 PIN

**No 536E**  
Nissan to ISO 95 >  
Ex - Japan  
10 PIN & 6 PIN

**No 547E**  
Nissan to ISO 01 >  
Ex - Europe  
16 PIN

**No 573E**  
Nissan to ISO 06 >  
Subaru to ISO 03 >  
20 PIN

**PC9-423**  
Nissan Premium Sound  
Bose/ Infiniti

**SOT-075**  
Phone kit/ Accessory  
Lead Nissan Ex - Europe  
2002 on

**SOT-096**  
Phone kit/ Accessory  
Lead Nissan 1995 on

**SOT-918**  
Phone kit/ Accessory  
Lead Nissan 2006 on

**CT20NS07**  
Nissan Amp Retention  
20 PIN

**No 735**  
Nissan OE Head Unit  
10 PIN & 6 PIN

**No 736**  
Nissan OE Head Unit  
10 PIN & 6 PIN

**CAM-NS1-RT**  
Reverse Camera Adaptor  
Nissan  
Navara, Note, Pathfinder  
2010-2015  
Qashqai, X-Trail 2010-2014

**ED-NI12**  
Nissan Aerial Adaptor  
2007 on

**ED-NI22**  
Nissan Reverse Aerial Adaptor  
2007 on

**ED-NI31**  
Pair  
Nissan Aerial to std. Aerial plug


**ED-NI21**  
Std. Aerial to Nissan Head unit  
**ED - NI10 (EXT - 300N)**  
Nissan female to std. male  
and female diversity leads

**ED-NI30**  
Pair  
**ED-NI20**  
Std. diversity leads  
to Nissan Head unit




# ED'S AUTO SERVICES


## NISSAN SIDE MOUNT BRACKETS

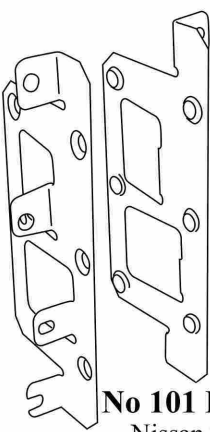


**No 101 LH/RH**  
Nissan Sentra  
to 1991

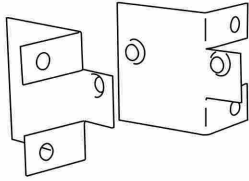


**No 102 LH/RH**  
Nissan Sentra 988, 955  
1991 on

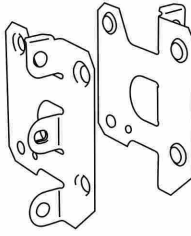


**No 119 LH/RH**  
Nissan Maxima  
1989 - 1993

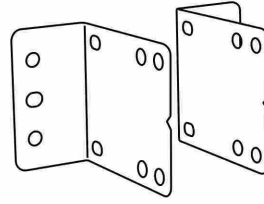


**No 156LR**  
Nissan Sylphy KG11  
2005 to 2012

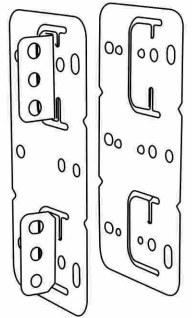


**No 158 LH/RH**  
Nissan Cube Z11  
05/2005 - 11/2008

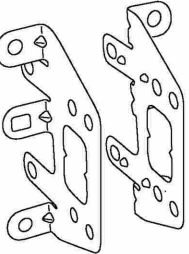


**No 162 LH/RH**  
Nissan Wingroad  
Y12 2006 on

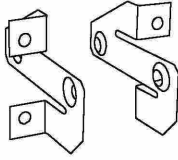


**No 163 LH/RH**  
Nissan Serena C23  
07/1991 - 08/1993

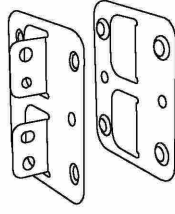


**No 164 LR**  
Nissan Caravan  
WME25 2001 on

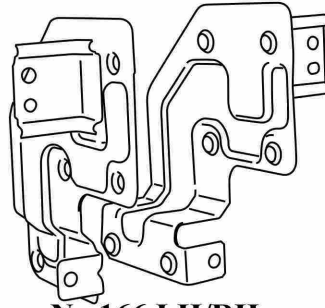


**No 166 LH/RH**  
Nissan Pressage U30  
1998 - Mid 2006

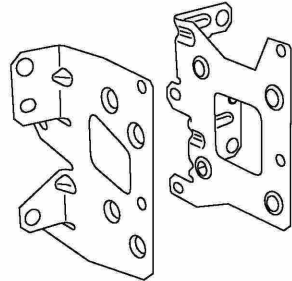


**No 168 LH/RH**  
Nissan Bluebird U12

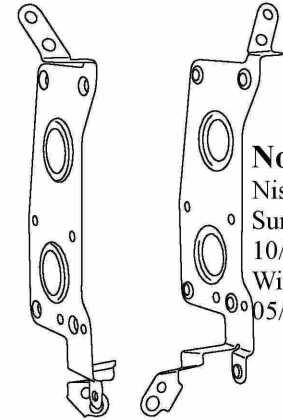


**No 169 LH/RH**  
Nissan Sentra  
Sunny B15  
10/98 on  
Wingroad Y11  
05/99-2005

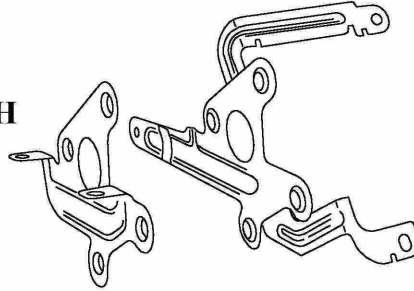


**No 170 LH/RH**  
Nissan Serena C24  
06/1999-08/2005

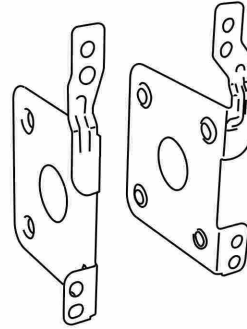


**No 172 LH/RH**  
Nissan Wingroad Y11  
1999-2006  
Top Mount Brackets  
Behind Air-vents

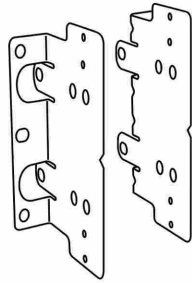


**No 173 LH/RH**  
Nissan Note E11  
01/2005 on

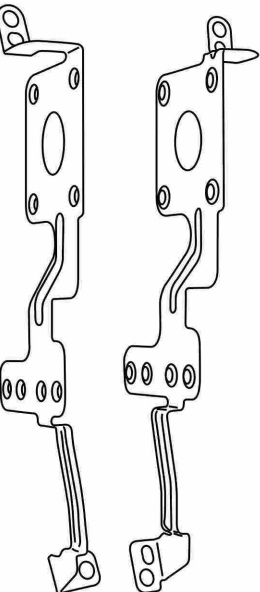


**No 181 LH/RH**  
Nissan Sylphy G10




**No 182 LH/RH**  
Nissan Tiida C11

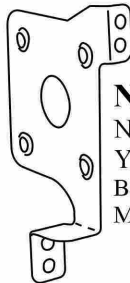


**No 174 LH/RH**  
Nissan Wingroad  
Y11 G Spec 2001-2005  
Bottom Brackets  
Mounts under Head Unit

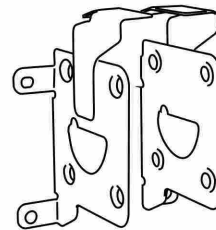



**No 179 LH/RH**  
Nissan X-Trail  
up to 11/2003

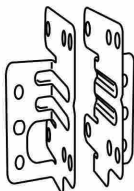

**No 185 LH/RH**  
Nissan Avenir W11  
2005 on

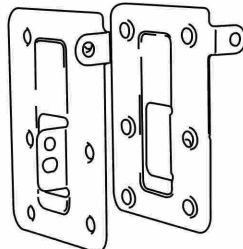


**No 186 LH/RH**  
Nissan Cube Z11  
10/2002 to 05/2005

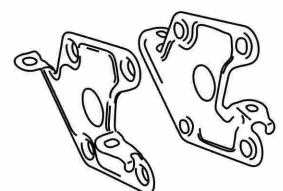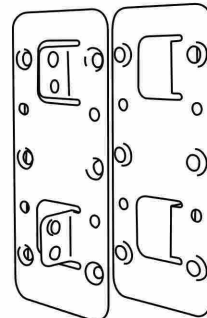


**No 187 LH/RH**  
Nissan Serena C24  
12/2001 to 05/2005

# ED'S AUTO SERVICES


## NISSAN SIDE MOUNT BRACKETS

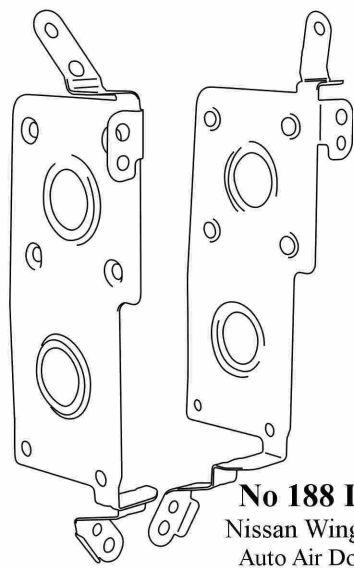


**No 188 LH/RH**  
Nissan Wingroad Y11  
Auto Air Double DIN  
With Heater Control  
at Bottom

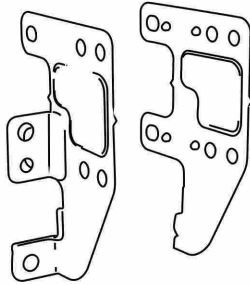


**No 189 LH/RH**  
Nissan Caravan E25  
09/2007 on

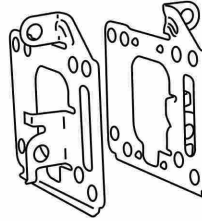


**No 193 LH/RH**  
Nissan Dualis, Qashqai  
2007 on

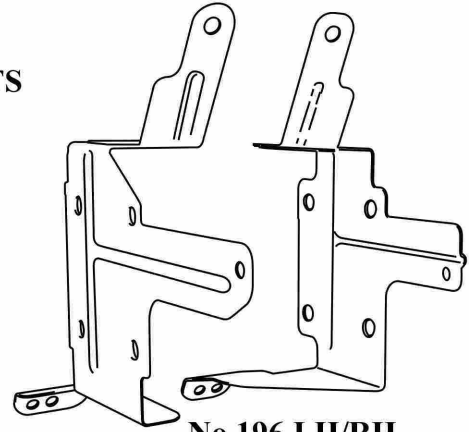


**No 196 LH/RH**  
Nissan Elgrand  
E51 2002 on

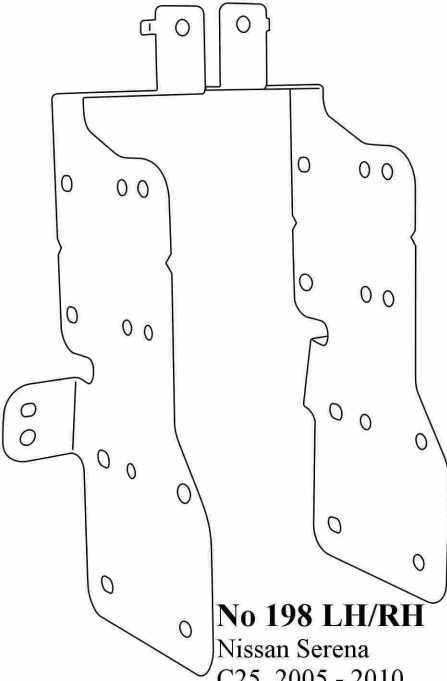


**No 198 LH/RH**  
Nissan Serena  
C25 2005 - 2010

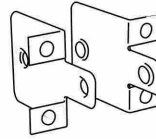


**No 381 LR**  
Nissan Primera P10

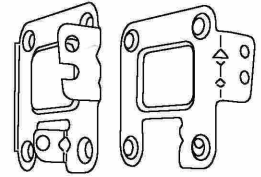


**No 387 LH/RH**  
Nissan Navara D21, D22 10/1992-06/1999  
Pathfinder / Terrano WD21 10/1993-1996

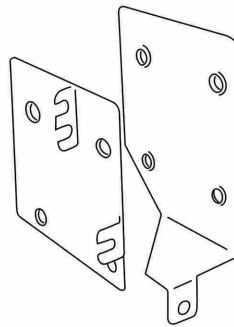


**No 388 LH/RH**  
Nissan Primera P11 09/1995 - 2002  
Avenir/ Expert PW11 08/1998 - 2004

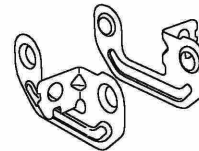


**No 389 LH/RH**  
Nissan Pulsar N15  
Lower Brackets

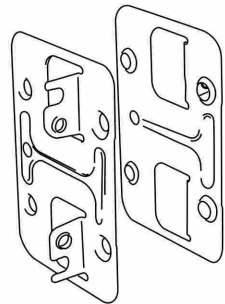


**No 392 LH/RH**  
Nissan Pathfinder  
Terrano R50 1995 on

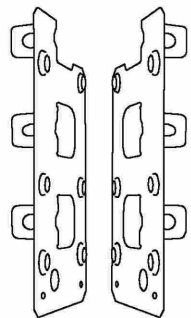


**No 403 LH/RH**  
Nissan Bluebird U13  
1991-1996

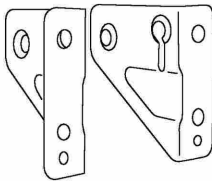


**No 404 LH/RH**  
Nissan Mistral

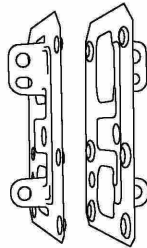


**No 406 LH/RH**  
Nissan Pulsar N15  
1995-2000  
Lucino B14 1994 on

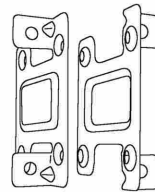


**No 407 LR**  
Nissan Largo W30 1993 on  
Serena C23 1993 - 99

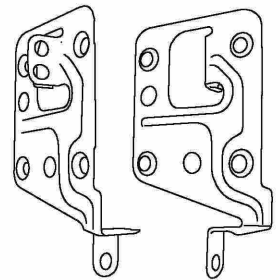


**No 408 LH/RH**  
Nissan Bluebird B14  
1997-2002

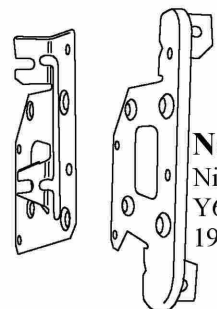

**No 409 LH/RH**  
Nissan Safari/Patrol  
Y60  
1987-1994

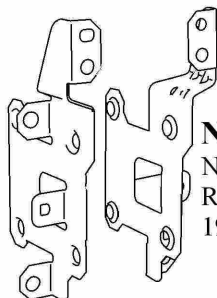


**No 410 LH/RH**  
Nissan Skyline  
R32  
1989-1994

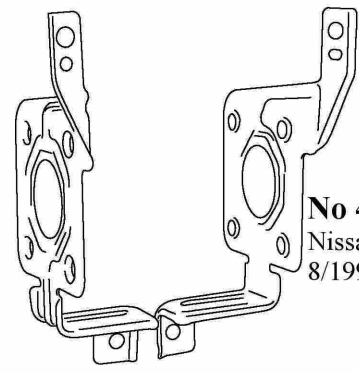


**No 411 LH/RH**  
Nissan Skyline R33  
8/1993-11/1998

# ED'S AUTO SERVICES


## NISSAN SIDE MOUNT BRACKETS

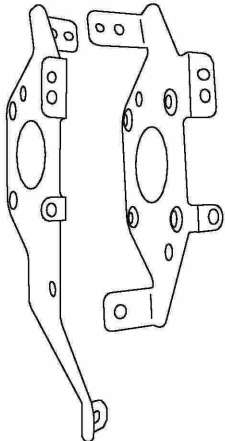


**No 413 LH/RH**  
Nissan Sylvia S14  
10/1993-12/1998

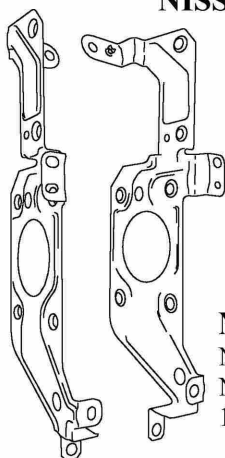


**No 461 LH/RH**  
Nissan Maxima A32  
NZ Model  
11/1994-1998

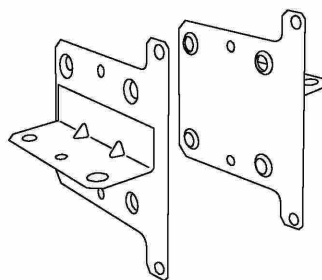


**No 462 LH/RH**  
Nissan Prairie PM11

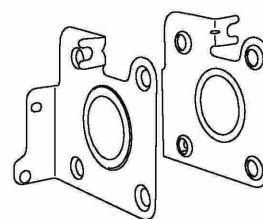


**No 463 LH/RH**  
Nissan Avenir/Wingroad  
WFY10




**No 465 LH/RH**  
Nissan Sentra/Pulsar  
N14 Upper Bracket

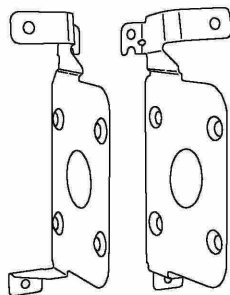


**No 466 LH/RH**  
Nissan Micra/March  
K12

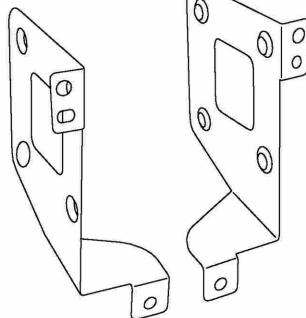


**No 468 LH/RH**  
Nissan 200SX RS13

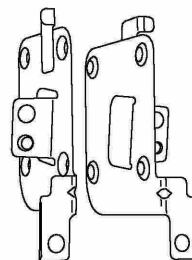


**No 469 LH/RH**  
Nissan Sylvia/200SX  
S15 1999-2002

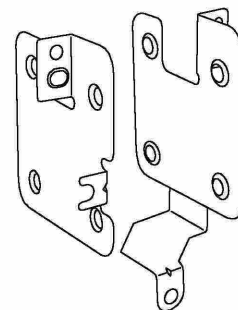


**No 471 LH/RH**  
Nissan Avenir PW11  
08/1998 on

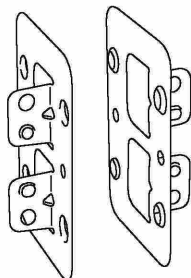


**No 472 LR**  
Nissan Patrol/Safari Y61 11/1997 on  
Elgrand AVE50 1997-02/2005  
Liberty/Prairie PM12 11/1998-2004  
Navara D22 1999on

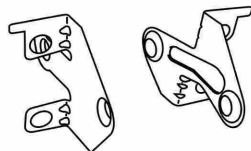


**No 474 LH/RH**  
Nissan Caravan  
ARME24

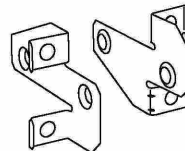


**No 475 LH/RH**  
Nissan Avenir  
W10 Wagon  
1990-1998

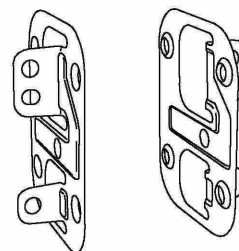


**No 476 LH/RH**  
Nissan Micra/March K11  
Presea R11  
Cube Z10

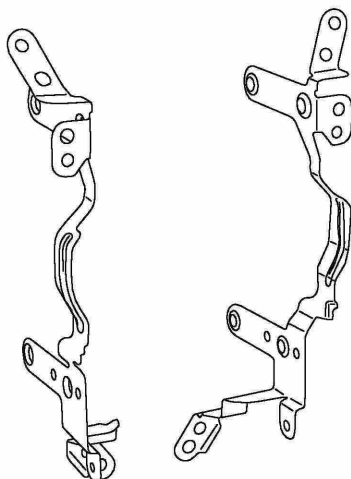

**No 477 LH/RH**  
Nissan Pulsar Y11  
Manual Aircon (NZ Model)

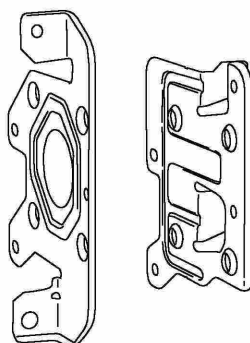

**No 481 LH/RH**  
Nissan Patrol/Safari Y60  
10/1994-10/1997

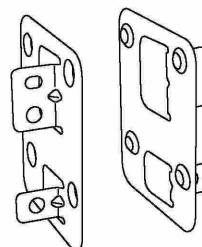

**No 482 LH/RH**  
Nissan X-Trail



## PEUGEOT

**DFP-01-13**

Double DIN  
requires a sleeve  
suits DFPK113

Peugeot Boxer, Fiat Ducato  
Citroën Jumper/Relay 09/2006 on

**FP-01-13**

**FP-04-00**  
Peugeot 106

10/1991  
to 06/1996

**FP-04-02**  
Peugeot 406

**FP-04-06** Black  
**FP-04-06/S** Silver

Peugeot 308 2007 on  
Single / Double DIN

**FP-04-01**

Peugeot 306 (RHD) 93>

**FP-04-03**

Peugeot 206 10/1998 on

**FP-04-04**

Peugeot 407  
Citroën C5 2004 on

**No 564E**

Citroën/  
Peugeot to ISO  
2005 >  
16 PIN

**No 572E**

Peugeot 4007 to ISO  
Double DIN Nav  
2008 >  
17 PIN (12 Large 5 Small)

**ED-VWA4**

Peugeot/Audi Aerial adaptor with  
phantom power

**ED-PF10** Peugeot/Fiat Aerial adaptor

## PORSCHE

**CT23PO03**

Porsche Double DIN  
Silver Grey (Anthracite)  
911 (997) 2004 - 2008

Boxster (987) 2004 - 2008  
Cayman (987) 2005 - 2009

**FP-34-00**

Porsche Cayenne 2003 on  
Double DIN requires sleeve  
Suits DFPK103

**DFPK-34-01/  
CT23PO02**

Porsche 911 (966)  
1998-2004

**SOT-936**

Phone kit/ Accessory Lead  
Porsche up to 2005  
PM & PCM Systems

**SOT-921**

Phone kit/ Accessory Lead  
Porsche 2005 on  
PM2 & PCM 2.1 Systems

**SOT-976**

Phone kit/  
Accessory  
Interface Lead CDR30

## RENAULT

**FP-08-00** Black  
**FP-08-00G** Grey

Renault Mégane,  
Scénic  
04/1996 - 01/2002

**FP-08-01**

for OEM single DIN

Renault Mégane II,  
Scénic  
2002 - 2008

**DFP-08-03**

Requires Sleeve, suit DFPK 113

**FP-08-20/BG** Beige  
**FP-08-20/G** Dark Grey

Renault Mégane  
2009 on

**No 556E**

Mégane Sat Classic  
V160 Security Stereo  
2008 > to ISO  
16 PIN

**No 584E**

Renault  
2/3/400/740  
to ISO 13 PIN

# ED'S AUTO SERVICES

## ROVER/LAND ROVER

### FP-21-00

Stereo Fitting Trims  
Range Rover  
10/1997 - 09/2002

### FP-06-00

Range Rover 09/2002 on

### FP-29-01

Land Rover Discovery 2000 - 2004

### FP-29-00

Freelander 11/2005 >

### FP-29-02

DIN/ Double DIN

### DFPK-29-02

Freelander 2 2007 >  
Discovery 3,  
Sport 2005 >

### FP-24-00

Rover 75 1999 on

### No 550E

Defender  
Freelander  
some

### No 560E

Defender,  
Smart  
ForFour,  
Skoda

### No 570E

Freelander 1  
some

### No 571E

Discovery 3  
non-amped  
some

### SOT-082

Phone kit Lead  
Discovery 3 05-09  
non-amped  
Freelander 2 2007 >non-amped

### SOT-060

Phone kit Lead  
Defender,  
Freelander 1  
some Discovery 3 99-04  
non-amped

### CTSLR06.2

Steering Ctrl Adaptor  
Land Rover  
Discovery 2006 - 2015  
Freelander Mk2 2006 - 2015  
Range Rover Sport 2005 - 2013

## SMART CAR

### FP-13-04

Smart ForFour 2004 on

### FP-13-02

Smart Car  
(Grey)

### FP-13-03

Smart Roadster 03/2002 on

### No 560E

Smart  
ForFour,

### SOT-976

Phone kit Lead  
Smart ForFour 04-06

# ED'S AUTO SERVICES ROVER/LAND ROVER

## ŠKODA

**FP-20-04**  
Škoda Yeti

**FP-20-01**  
Škoda Octavia 2004 on

**FP-17-03**

**CT23SK04**  
Škoda Yeti

**FP-20-00**  
Škoda Fabia 03/2000 on

**DFPK-17-30/ST**

Škoda  
Fabia 07-14, Octavia 09-13  
Superb 08-13, Yeti 09-16



**ED-VWA7** VW/Audi/Seat/Škoda  
Powered Diversity Aerial Adaptor 05 on



**SOT-976**

Phone kit Lead

Smart ForFour 04-06, Škoda Fabia 07 on  
Škoda Octavia 04-09, Škoda Roomster, Yeti

## SSANGYONG

**DFPK-35-21**  
Ssangyong Korando  
2010 on

**DFPK-35-02**  
Ssangyong Rexton II  
2006 on

**SSA-K2318**  
Ssangyong Actyon Sports  
2006 on

**CT23SY04**  
Double DIN Fascia  
Ssangyong Actyon 2006 on

**DFP-35-04**  
Ssangyong Kyron  
2005 - 06

**DFPK-35-30/  
CT23SY10**  
Ssangyong Rexton III  
2013 on


**No 545**  
Ssangyong Musso

**No 546E**  
Ssangyong Korando,  
Rexton to ISO


**SOT-072** Daewoo, Ssangyong



## SUBARU

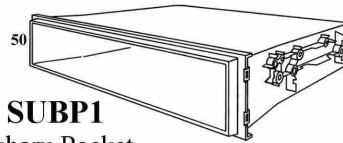

**SUBP1**  
Subaru Pocket

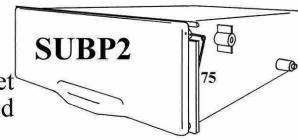


75mm Subaru Pocket  
with lid




**SUBP3**  
Subaru Pocket  
50mm with Lid



**SB-K926/FP-36-00**<sup>201</sup>  
Subaru Impreza/ WRX 2008 on

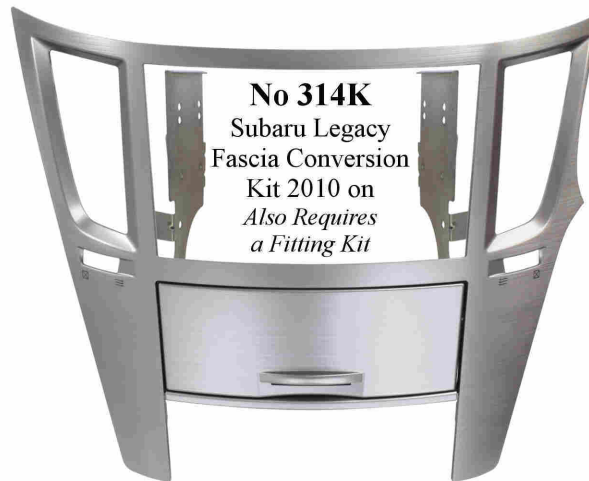


## SUBARU

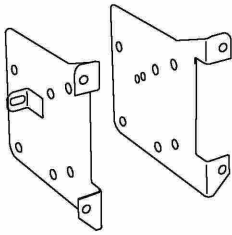


### No 75 LEGACY

Subaru Legacy  
local model with clock  
up to 1993

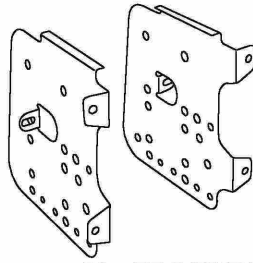


### No 75 LH/RH

Subaru Legacy  
for model with drink tray  
up to 1993

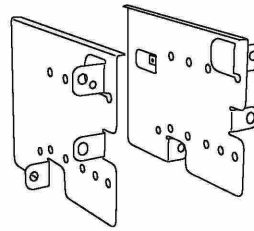


### No 301 LH/RH

Subaru  
Impreza WRX  
GD - GC 2000 - 04

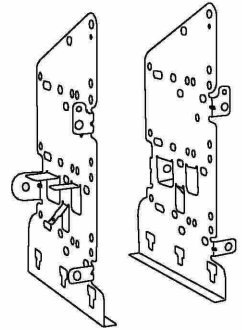


### No 302 LH/RH

Subaru Impreza  
GF - GC 2000 - 2004

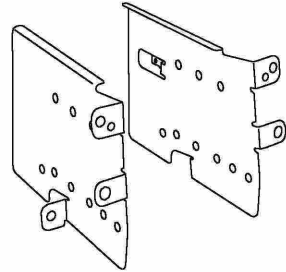


### No 304 LH/RH

Subaru WRX GD - GC  
2004 - 2007

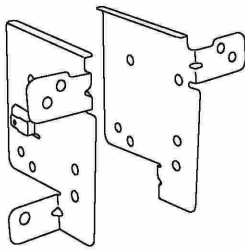


### No 305 LH/RH

Subaru Impreza  
2007 on

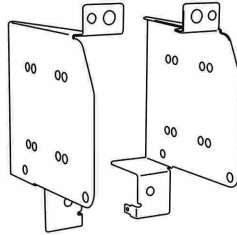


### No 307 LH/RH

Subaru Forester  
2002 to 2006

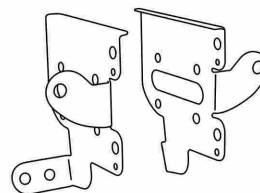


### No 312 LH/RH

Subaru BRZ/Toyota 86  
2012 on

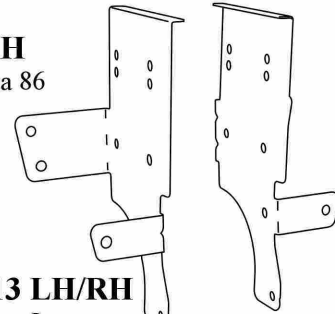


### No 313 LH/RH

Subaru Legacy  
2010 on

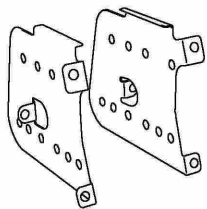


### No 390 LH/RH

Subaru Legacy BD & BG  
1993 - 1998

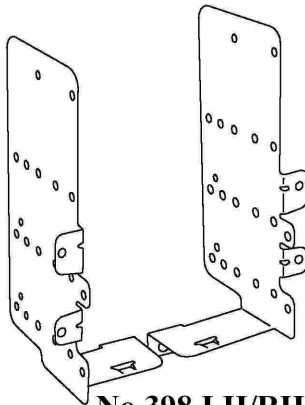

### No 398 LH/RH

Subaru Legacy BE/ BH  
1999 - 2003

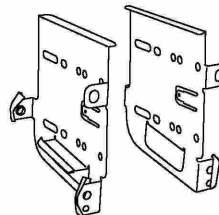


### No 399 LH/RH

Subaru Impreza WRX  
GC-GF Airbag models  
1996 - 1999  
Forester S10 - SS 96-02




### No 537E

Subaru to ISO  
1993 on  
14 PIN



### No 541

Subaru  
Pre 1993  
9 PIN & 7 PIN

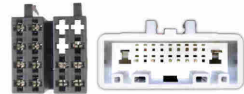

### No 573E

Subaru to ISO  
From 2003  
20 PIN



### SOT-069

Phone kit/  
Accessory Lead Subaru 1993 on



### SOT-918

Phone kit/  
Accessory Lead Subaru starting 2006




### No 737

Subaru stereo 1993 on  
14 PIN



### No 741

Subaru stereo pre 1993 9 PIN & 7 PIN

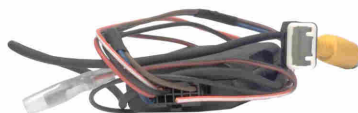

### CAM-SU1-RT

Subaru OEM Camera to aftermarket head unit  
Outback, Forester, Impreza, XV 2015 on



### ED-SU10

Subaru 05 on  
Aerial lead

### ED-SU30

Pair



### ED-SU20

Subaru 05 on  
Reverse lead

# ED'S AUTO SERVICES

**FP-19-05**

Suzuki Splash  
Opel Agila 2008 on

**DFP-19-05**

Requires sleeve  
suits DFPK103

**SUZUKI**

**FP-01-09**

Fiat Sedici / Suzuki SX4  
(For Double DIN units, sleeve required  
Suits DFPK103)

**No 679**

Suzuki SX4 Mounting Bracket

**SUZ-K946**

Suzuki Grand Vitara  
2003 - 2005

**CTK-SZ04**

Suzuki Kasahi 2010 on  
Single & Double DIN

Incl. Resistive Steering Control  
with universal patch lead,  
Aerial adaptor

**No 676**

Suzuki Cultus  
GC41W  
Mounting Bracket

**SUZ-K09501**

Suzuki Swift  
RS415 2005 on

**FP-33-01**

217  
Suzuki Grand Vitara  
2005 on

**DFP-33-01**

Requires Sleeve  
suits DFPK 103

**No 675P**

**No 675K** (esc. + bkts)

Suzuki Swift  
RS415 2005 on

**No 677**

**No 682P**

Suzuki Swift AZH414  
2011 on  
Single DIN suits MITPP pocket

**No 512E**

Suzuki to ISO  
1995 >  
12 PIN

**No 542E**

Honda to ISO 1998 on  
Suzuki to ISO 2001 on  
20 PIN (8 Large, 12 Small)

**SOT-071**

Phone kit/ Accessory  
Lead  
Suzuki 2001 on

**No 858USB**

Suzuki Swift  
AZH214 2010 on  
USB Input Adapter for OEM Audio

**No 683 LH/RH**

Suzuki Swift AZH414  
2011 on

**ED-HO10**

Suzuki  
Aerial adaptor lead

**ED-HO20**

Suzuki  
Reverse Aerial adaptor lead-  
to plug into original stereo



## TOYOTA/ LEXUS




**No 447P**  
Use Toyota Pocket  
for single DIN fittings  
(uses original mounting brackets)


Toyota Altezza  
Lexus IS  
XE10 1998 - 2005



**LS2075B**

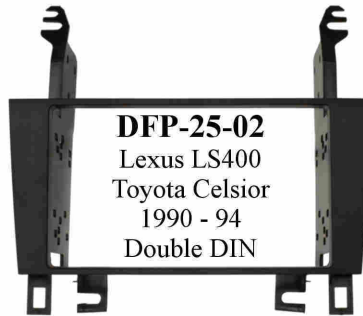

**DFP-25-02**  
Lexus LS400  
Toyota Celsior  
1990 - 94  
Double DIN

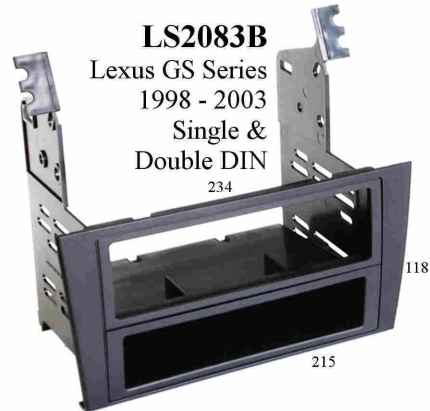

**LS2083B**  
Lexus GS Series  
1998 - 2003  
Single &  
Double DIN



**LS2085B**  
Single/Double ISO



**DFP-25-03**  
Double DIN


Lexus LS400 Toyota Celsior 1995 - 2000



**LS2080B**  
Lexus ES Series/  
Toyota Windom  
1992 - 1996  
Single & Double DIN



**No 270K**  
Toyota Avalon  
Mk I, II  
2000 to 2003

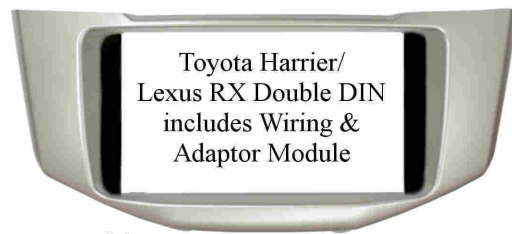

Toyota Harrier/  
Lexus RX Double DIN  
includes Wiring &  
Adaptor Module

**MVX-89** 2006-13 Sat-Nav & 11 Speakers

**MVX-89R** 2006-13 Sat-Nav & 6 Speakers

Toyota Harrier 30 Series

**SLX-82A** 2003-13 Non-nav & 11 Speakers

**SLX-82R** 2003-13 Non-nav & 6 Speakers

Toyota Harrier 30 Series & Lexus RX 2004 - 2009



**SLX-82AAD** - Toyot Harrier  
11 SpeakerNon-nav Wiring adaptor Module



**LS2081B** Single & Double DIN



**No 432P**  
Use Toyota pocket  
for single DIN fittings

Lexus ES Series 1996 - 2000  
Toyota Windom MCV21 1996 - 2001




**No 223K**  
Toyota Windom  
MCV30  
2000 - 2005


Includes Mounting brackets




**WHP702E**  
Toyota to standard  
Double DIN  
2000 on

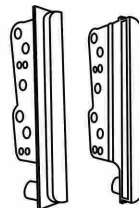

**WHP702**  
Toyota pocket and side trims

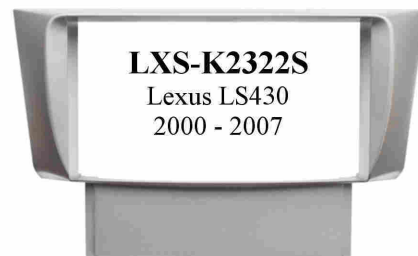

**LXS-K2322S**  
Lexus LS430  
2000 - 2007

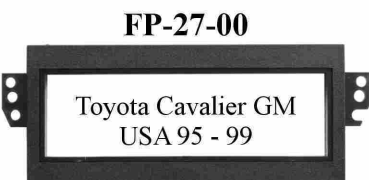

**FP-27-00**

Toyota Cavalier GM  
USA 95 - 99



**UA-Y39D**  
Toyota Double DIN  
to std Double DIN  
Trim

**TOYP2**  
Toyota Pocket  
with Lid



# TOYOTA



**No 298K**  
Toyota Harrier XU60  
2014 on  
Gloss Black



**No 275K**  
Toyota Hilux 07/2011 on  
Auto aircon  
Use Toyota pocket  
for single DIN fittings




**No 600K**  
Toyota Hilux Manual  
Airconditiong  
07/2011 - 2015




**CT23TY52**  
Toyota Highlander  
2014 on  
Black

## TOYOTA

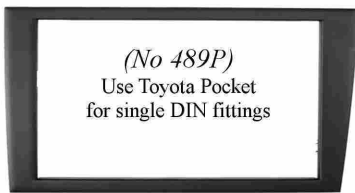


(No 489P)  
Use Toyota Pocket  
for single DIN fittings

**No 489K** (esc. & bkts)  
Toyota Aristo 1991 - 1997

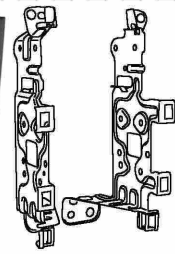


(No 209LH/RH)

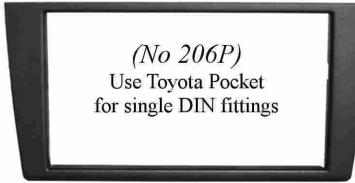

(No 206P)  
Use Toyota Pocket  
for single DIN fittings

**No 206K** (esc. & bkts)  
Toyota Aristo JZS# 1997 on

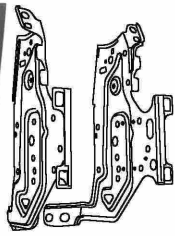

(No 214LH/RH)




### WHP702E

Toyota Corolla, Hilux etc Standard Toyota Stereo  
2000 on (200mm wide) to Double DIN  
Use WHP702 for single DIN fittings



215

**TA2048B**  
Toyota Corolla Variant (215mm wide panel)  
2001 - 2008

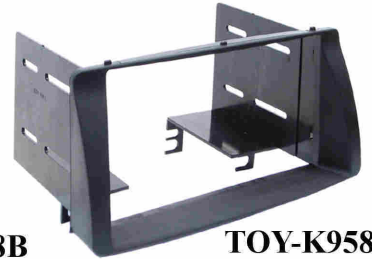

**TOY-K958**



214

110

**TOY-K979**  
DIN / Double DIN

Toyota Camry 2002 - 06



**No 211K**  
Toyota Fun Cargo  
NCP2# 1999 on




134

**No 216K**  
(Black)

228

247

Toyota Corolla  
CE140  
NZE141/ ZZE14#  
ZRE152  
2007 on

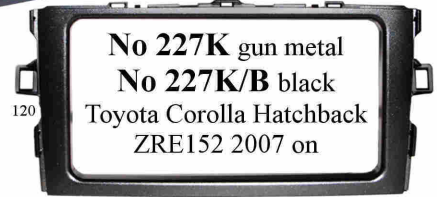

120

**No 227K** gun metal  
**No 227K/B** black  
Toyota Corolla Hatchback  
ZRE152 2007 on

234



**No 217K**  
Toyota Aurion/ Camry  
ACV40, GSV40  
06/2006 on



**No 239K**  
Toyota Blade AZE15#  
GRE15# 2006 on



**DFP-11-40**  
Toyota Corolla  
2013 on



**No 280K**  
Toyota Camry  
V50 2011 on




**No 242K**  
Toyota Spacio  
NZE121, ZZE12#  
05/2001 on




**No 226K**  
Toyota bB  
Daihatsu Materia  
2006 on



**No 251K**  
Toyota Mk II JZX110  
Blit, Verosa 1997 - 2001

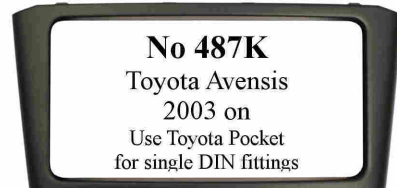

**No 487K**  
Toyota Avensis  
2003 on  
Use Toyota Pocket  
for single DIN fittings

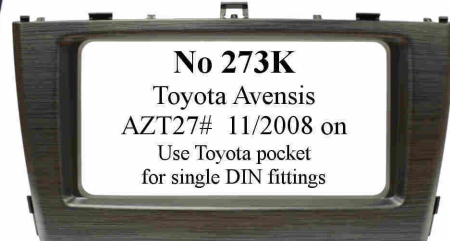

**No 273K**  
Toyota Avensis  
AZT27# 11/2008 on  
Use Toyota pocket  
for single DIN fittings







TOYOTA



Toyota Prius  
20 Series 03 - 09

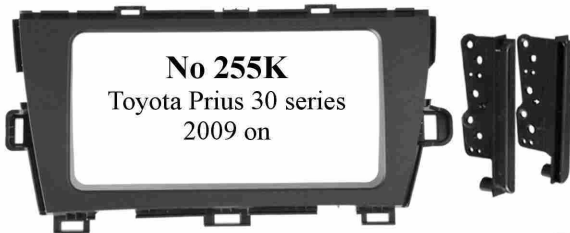

Use Toyota pocket for single DIN fittings

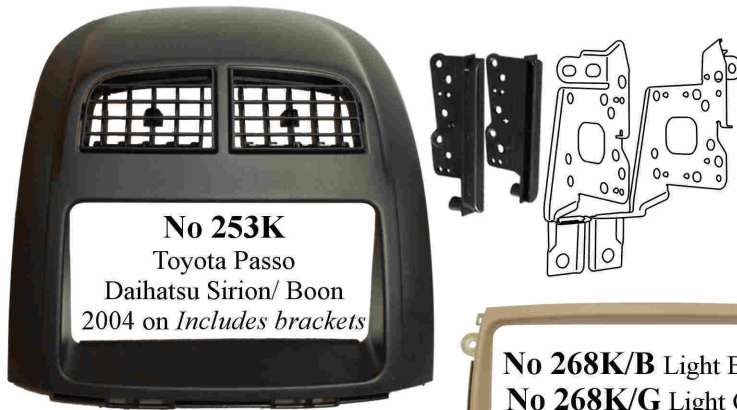

Use Toyota pocket for single DIN fittings



## TOYOTA

### No 278K

Toyota Ractis  
NCP10# 2005 to 2010  
Use Toyota pocket  
for single DIN fittings

### No 283K

Toyota ISIS  
NM10 2004 - 2014  
Vertical sides, curves forwards

### No 497K

Toyota Vista/Vista Ardeo  
AZ5#, SV5#, ZZ50  
1998 - 2003  
Use Toyota Pocket for single DIN

### No 456K

Toyota Echo, Vitz  
S/NCP1# 1999 on  
Use Toyota pocket  
for single DIN fittings

### No 237K

Toyota Vitz 2005 on  
Gloss Black Escutcheon  
Dark Grey side panels

Use Toyota  
pocket  
for single DIN  
fittings

### No 427K

Toyota MRS  
1999 on  
Use Toyota pocket  
for single DIN fittings

### No 493K

Toyota Caldina  
ST246, AZT24#, ZZT241  
09/2002 - 11/2003

Use Toyota Pocket for single DIN fittings

### No 292K

Toyota Vitz/ Yaris  
2010 on  
With Round hazard switch

### No 293K

Toyota Vitz/Yaris  
2010 on  
With Rectangular hazard switch

### No 459P

Toyota Land Cruiser  
100 Series  
1998 - 2002  
Use Toyota Pocket  
for single DIN fittings

### No 499K

Toyota Land Cruiser VX  
08/2002 on  
Use Toyota Pocket  
for single DIN fittings

### NO236K

Toyota Land Cruiser  
UZ3/ VZ3200  
Double DIN 09/2007 on  
Use Toyota pocket for single DIN

### No 245K

Toyota Prado  
09/2002 to 02/2010  
Use Toyota Pocket  
for single DIN

### TOY-K702

Toyota Prado 2014 on  
Use Toyota Pocket  
for single DIN fitting



# ED'S AUTO SERVICES



**S-TOY**  
Toyota Door Pin  
Switch

## TOYOTA


**CAM-TY2-RT** 24 pin plug  
Reverse Camera Retention Cable  
2014 on



**CAM-TY2-AD** 16 pin plug  
Add aftermarket Reversing Camera  
to Toyota OEM Head Unit



**CAM-TY1-AD** 24 pin plug  
Add aftermarket Reversing Camera  
to Toyota OEM Head Unit

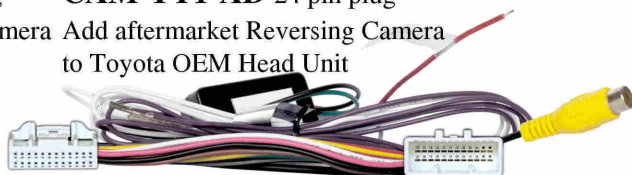

## CAM-TY1-RT

Reverse Camera Adaptor Toyota  
Camry, Fortuner, Innova, Prado 2014 - 15, Hilux 2013 - 15




### TBX-Y007

Toyota Amplified adaptor - 20 Pin  
Celica - 8 Speaker 1999 - 2007  
HiAce - 9 Speaker 1999 - 2002  
Land Cruiser Prado - 6 Speaker 2000 - 2002  
Kluger V - 8 Speaker 2000 - 2003



### CTVTYX002

Toyota 3.5mm Aux in Adaptor  
Avensis, Corolla, RAV4, Yaris 2004 - 2015

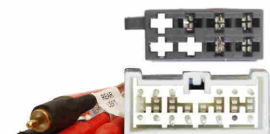

### PC9-406

Toyota 14 pin to RCA  
For Toyota with fully  
active speaker system



### CTATYUSB001

Toyota 12 pin Aux in & USB Adaptor  
2001-2004 12 pin Changer Plug

### No 540E

Stereo Hook up  
Toyota to ISO 1987 > 10 PIN & 6 PIN



### No 740

Toyota OE Head unit  
1987 > 10 PIN & 6 PIN



### PC9-411

Toyota 15 pin to RCA  
For Toyota with fully  
active speaker system



### CT51-TY01

Toyota 15 pin Active System Adaptor  
MR2 1994-2005  
Celica 1994-2006



### TA03HB

Toyota 20 pin to RCA

### PC9-422

Toyota 20 pin  
to RCA & ISO



### No 860E

Toyota Altezza  
Amp bypass to ISO (1 Metre)



### No 861E

Toyota Lexus  
Amp bypass to ISO

### TA07SR

Toyota / Lexus

For fitting aftermarket stereos to  
vehicles with Active JBL systems

2004 on

20 PIN. 2 Large, 18 Small



### SOT-062

Phone kit/ Accessory  
lead Toyota 1987 >



### SOT-910

ISO Phone kit Adaptor lead  
Lexus IS/RX Series  
2005 on



### SOT-913

ISO Phone kit Adaptor lead  
Lexus



### LX-06

Lexus to Std. Male Aerial



### LX-07

Lexus to Std. Female Aerial



**TY-6** Toyota to Std. Male  
Aerial for some Toyotas 2010 on



**TY-7** Toyota stereo to Std. Female  
Aerial adaptor for some Toyotas  
2010 on

### ED-GM30 (Pair)

### ED - GM10


Toyota Cavalier

### ED - GM20







## TOYOTA SIDE MOUNT BRACKETS

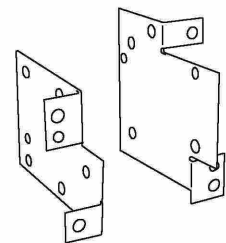


**No 82 LH/RH**  
Toyota Camry 1992

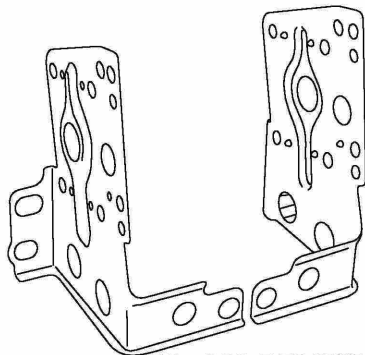


**No 200 LH/RH**  
Toyota Hilux Surf  
210 Series  
11/2002 on

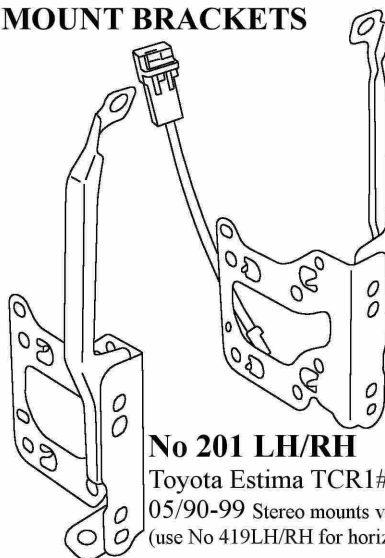



**No 201 LH/RH**  
Toyota Estima TCR1#, 2#  
05/90-99 Stereo mounts vertically  
(use No 419LH/RH for horizontal mount)

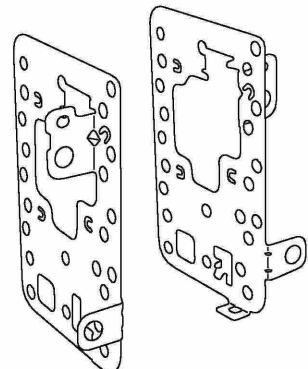


**No 202 LH/RH**  
Toyota Corolla  
AE91  
Levin AE90

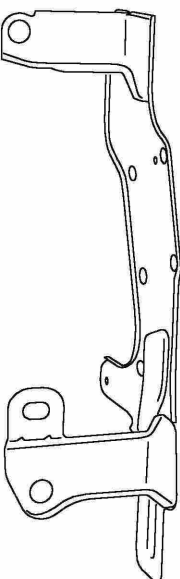


**No 204 LH/RH**  
Toyota  
Land Cruiser  
HDJ101  
08/2002 on

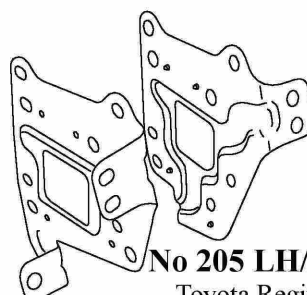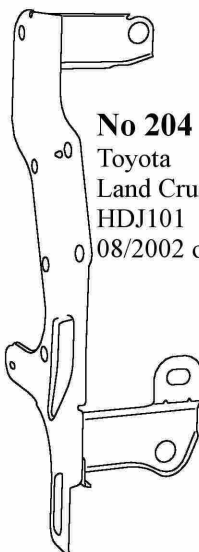


**No 205 LH/RH**  
Toyota Regius  
Touring HiAce 97-99

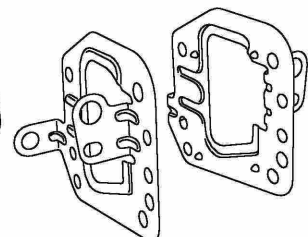


**No 207 LH/RH**  
Toyota Raum  
EXZ10 97-99  
(If stereo mounts on angle  
to brackets use  
No 490 Lh/rh)

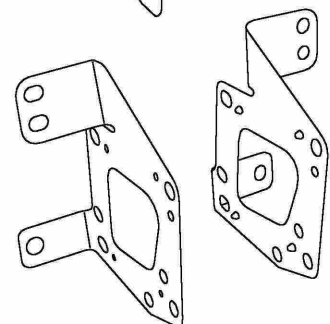


**No 208 LH/RH**  
Toyota WILL VI  
2000 - 2001

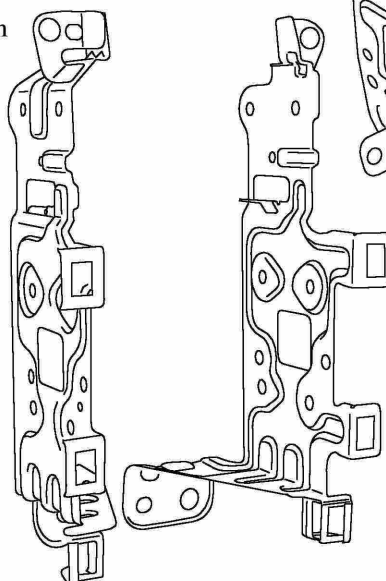


**No 209 LH/RH**  
Toyota Aristo ZS147/UZS143  
1991-1997  
Use with No 489P

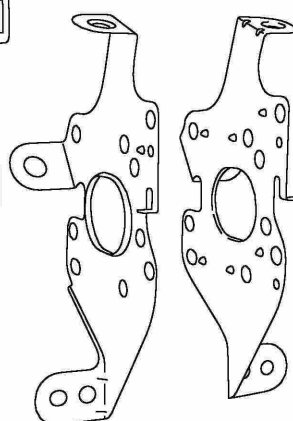


**No 210 LH/RH**  
Toyota Fun Cargo  
NCP2# 1999 on

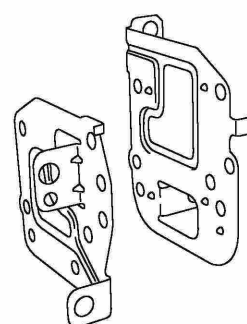


**No 212 LH/RH**  
Toyota Sceptor  
SXV / VCV 10 / 15  
07/1992 - 08/1996

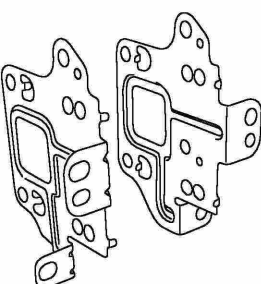



**No 213 LH/RH**  
Toyota Duet M1#  
Daihatsu Sirion 09/1998 on

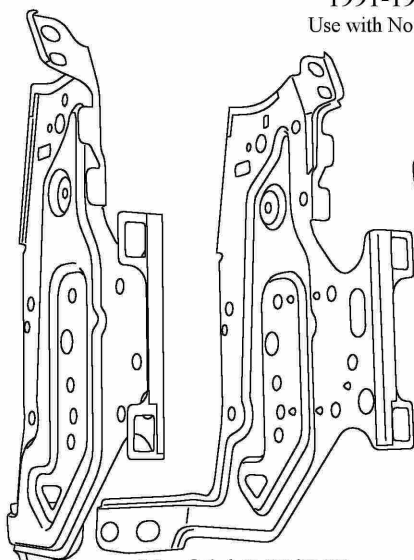

**No 214 LH/RH**  
Toyota Aristo JZS16# 1997 on  
Use with No 206P

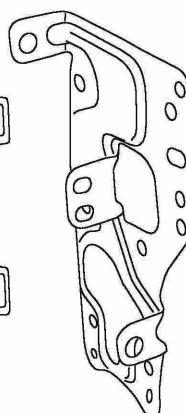


**No 215 LH/RH**  
Toyota Gaia/Picnic/Ipsium M1#  
1998-2001

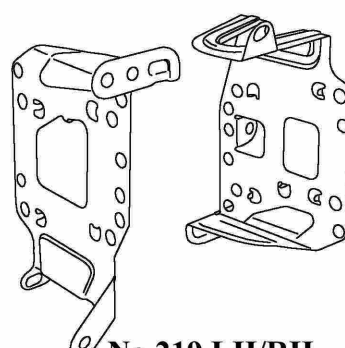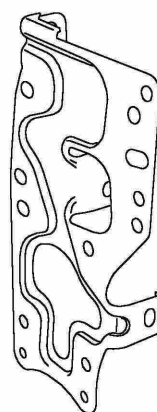


**No 219 LH/RH**  
Toyota Corona / Carina 2  
AT17#, ST171 1988 - 92  
050816 page 45


## TOYOTA SIDE MOUNT BRACKETS

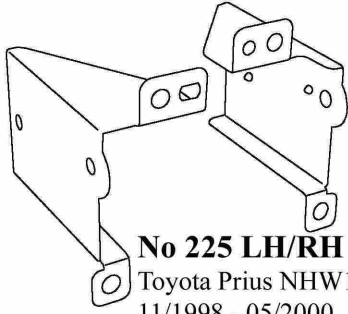


**No 225 LH/RH**  
Toyota Prius NHW1#  
11/1998 - 05/2000

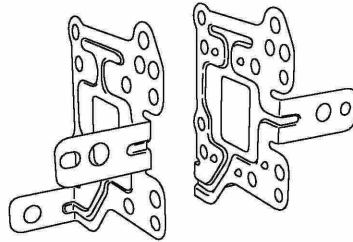


**No 230 LH/RH**  
Toyota Liteace /  
Townace Noah  
CR/SR 40/50  
12/1998 - 11/2001

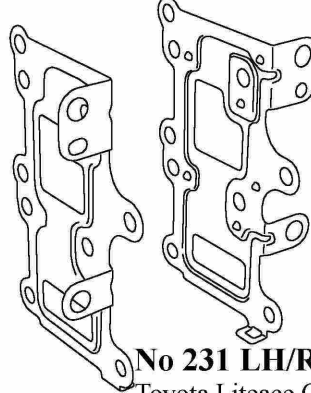


**No 231 LH/RH**  
Toyota Liteace C/K/SR 40/50  
10/1996 - 1998

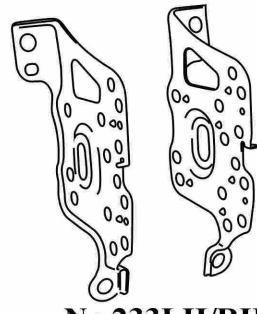


**No 233 LH/RH**  
Toyota Yaris  
NCP9# 08/2005 on

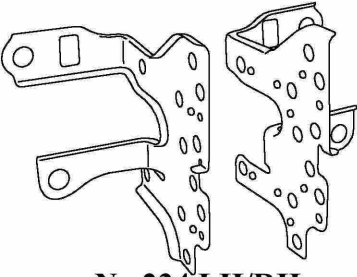


**No 234 LH/RH**  
Toyota Corolla  
CE140, NZE141, ZZE14#, ZRE152  
Sedan, Wagon, Hatch 03/2007 on

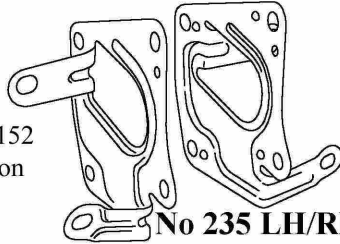


**No 235 LH/RH**  
Toyota Opa, ACT10, ZCT1#  
04/2000 on

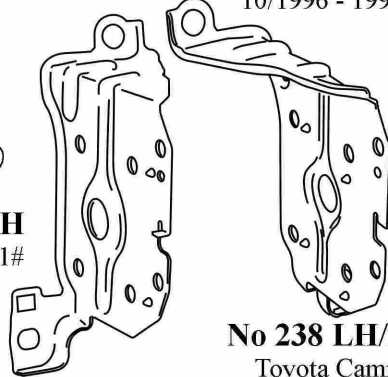


**No 238 LH/RH**  
Toyota Camry  
A/MCV36 (Australia)  
08/2002 on

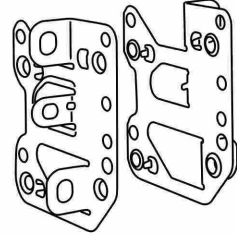


**No 240 LH/RH**  
Toyota Corolla  
AE8#, EE/CE80  
1983 - 1988

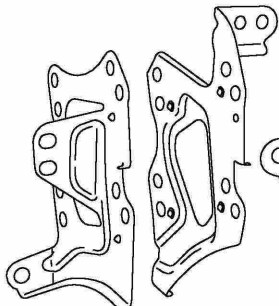

**No 241 LH/RH**  
Toyota Wish 2003 on

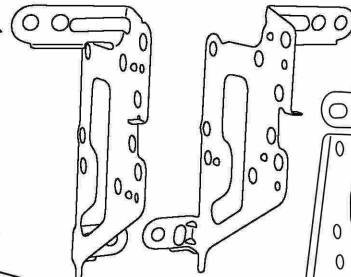


**No 243 LH/RH**  
Toyota Corolla Spacio  
NZE121, ZZE12#  
05/2001 on

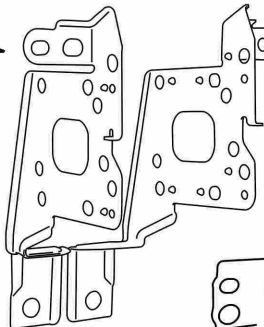


**No 248 LH/RH**  
Toyota Voltz, ZZE13#  
2002 on

**No 246 LH/RH**  
Toyota Passo, Daihatsu  
Sirion/ Boon 2004 on

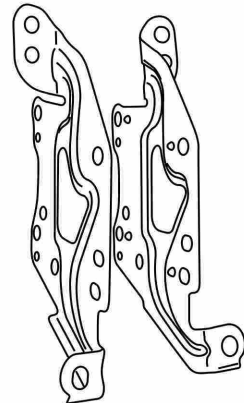


**No 249 LH/RH**  
Toyota Alphard 2002 on  
MH1#, ANH1#, MNB1#

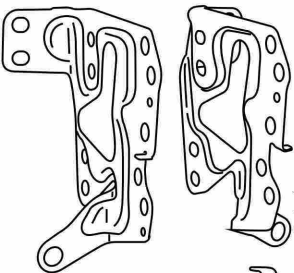


**No 250 LH/RH**  
Toyota Hilux 08/2004 on




**No 256 LH/RH**  
Toyota Camry  
AVC30  
2001 - 2006

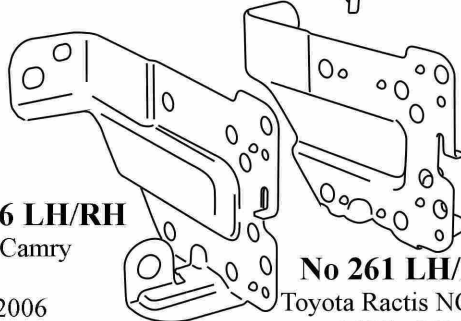


**No 261 LH/RH**  
Toyota Ractis NCP100  
2005 - 2010

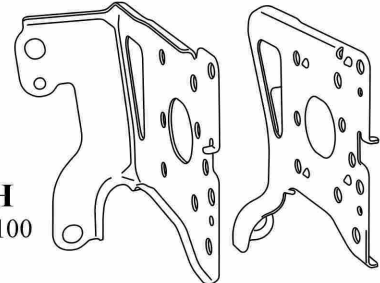


**No 262 LH/RH** Toyota IQ 2008 on

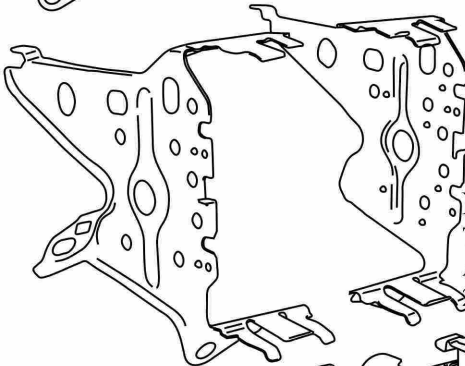

**No 263 LH/RH**  
Toyota Raum  
Z20  
2003 on

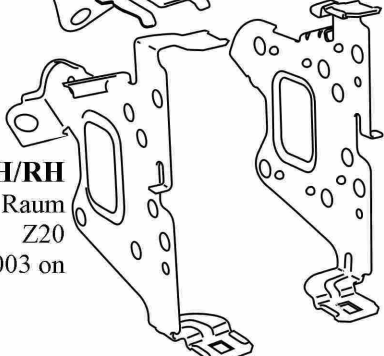


**No 264 LH/RH**  
Toyota Estima XA50  
2006 on

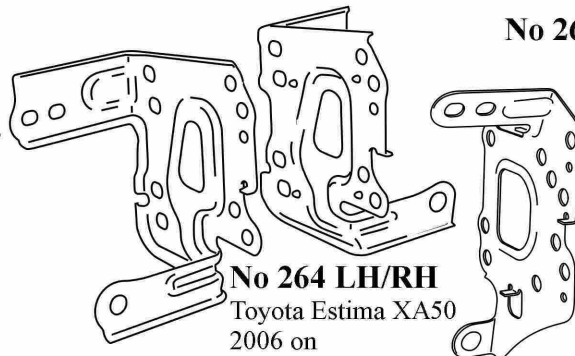


**No 265 LH/RH**  
Toyota Isis  
2004 on




## TOYOTA SIDE MOUNT BRACKETS

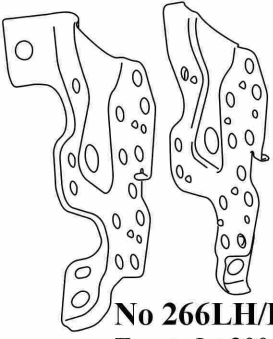


**No 266 LH/RH**  
Toyota Ist 2006 on

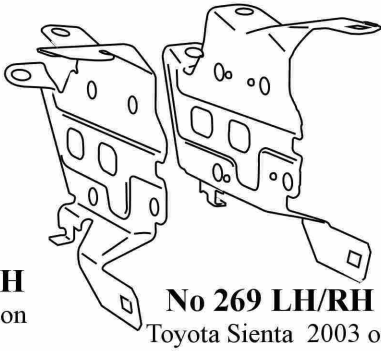


**No 269 LH/RH**  
Toyota Sienta 2003 on

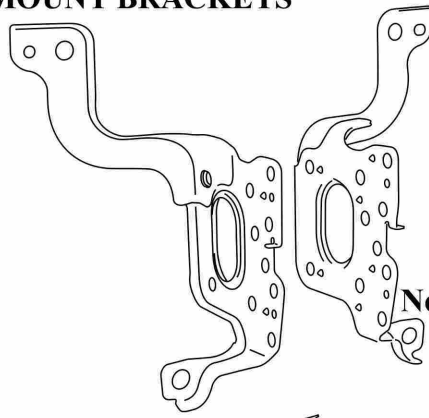


**No 271 LH/RH**  
Toyota Belta  
2005 - 2012

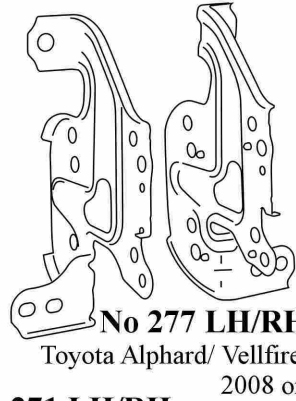


**No 277 LH/RH**  
Toyota Alphard/ Vellfire  
2008 on

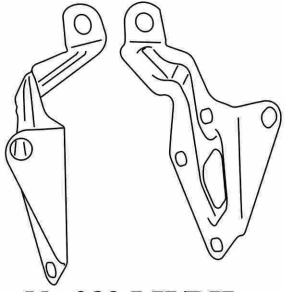


**No 282 LH/RH**  
Toyota Harrier 2003 on  
Lexus RX Series 03-08

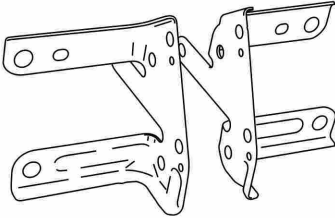


**No 285 LH/RH**  
Toyota MkX Z10 2007-2013

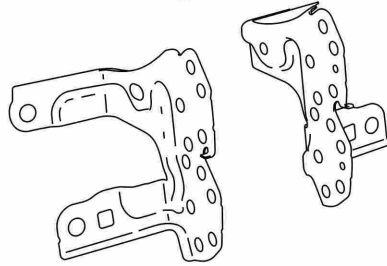


**No 286 LH/RH**  
Toyota Vitz/Yaris 2011 on

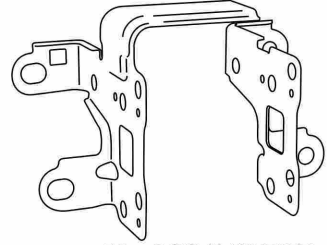


**No 288 LH/RH**  
Toyota Wish E20  
2009 on

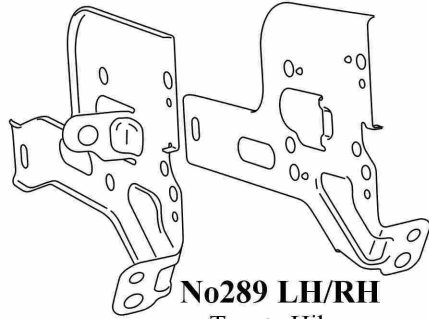


**No 289 LH/RH**  
Toyota Hilux  
09/2011 on

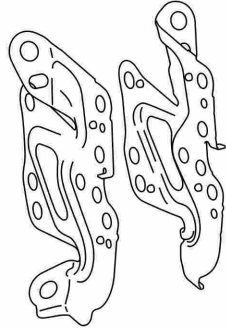


**No 294 LH/RH**  
Toyota Landcruiser 70 Series  
08/2014 on

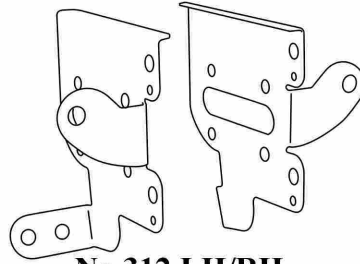


**No 312 LH/RH**  
Toyota 86/Subaru BRZ  
2012 on

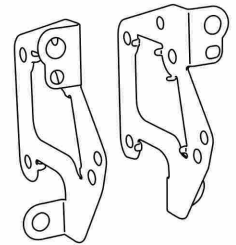


**No 375 LH/RH**  
Toyota Surf/ Hilux  
1988 - 2001

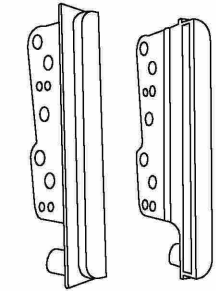


**WHP702E**  
/ **No 412 LH/RH**  
Toyota Side Trim Filler Spacers  
most models 2000 on

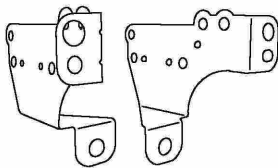


**No 414 LH/RH**  
Toyota RAV4 (Upper)  
10 Series  
1994 - 2000  
(Lower No 416 LH/RH)

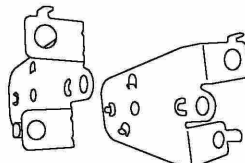


**No 415 LH/RH**  
Toyota Corolla  
AAE92 & EE92  
(Upper) 1988 - 93  
(Lower No 446 LH/RH)

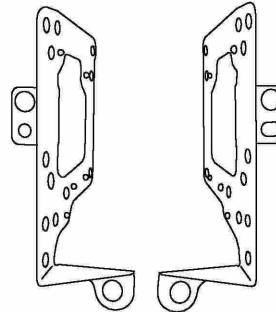


**No 416 LH/RH**  
Toyota RAV4 (Lower)  
1994 - 2000 10 Series  
(Upper No 414 LH/RH)

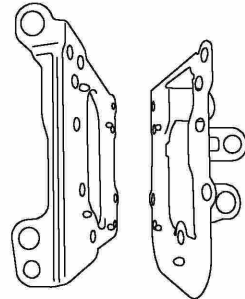

**No 417 LH/RH**  
Toyota Celica, Carina ED,  
Curren, Corona EXIV  
ST20 Series 1993 - 99

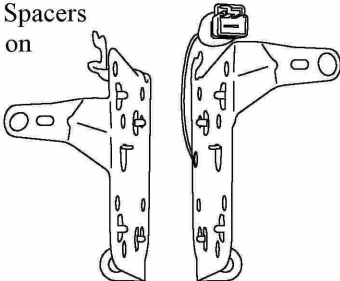


**No 419 LH/RH**  
Toyota Previa/ Estima  
Emina/ Lucida

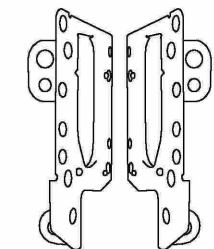


**No 418 LH/RH**  
Toyota Levin/ Trueno  
AE111 95-2000


For horizontally mounted stereo  
(Use No 211 LH/RH for  
vertical mount)

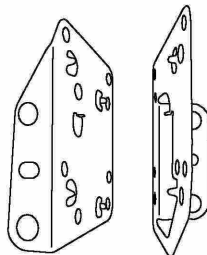

**No 420 LH/RH**  
Toyota Hiace  
1989 - 2005

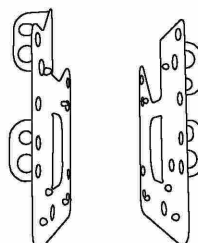


**No 421 LH/RH**  
Toyota Corona/ Caldina  
19# Series 92-02/96

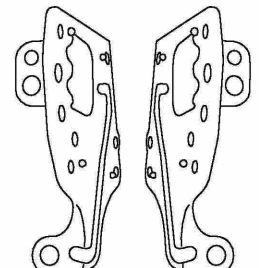

**No 422 LH/RH**  
Toyota Caldina/ Corona  
210 Series  
1997-2002




## TOYOTA SIDE MOUNT BRACKETS

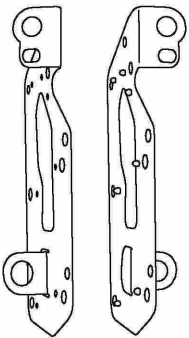



### No 423 LH/RH

Toyota Surf 185 Series  
11/1995 on

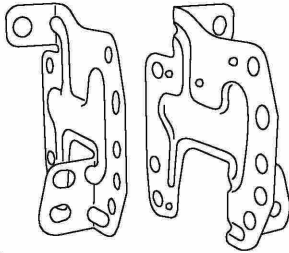


### No 424 LH/RH

Toyota Caldina  
AT194, ET196  
CT/ST19# 01/96-06/02  
Carina FF AT/CT21#  
ST215 08/96-08/98  
Corona 21# Series  
01/96-12/97

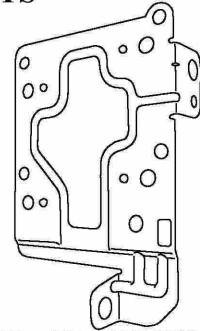

### No 425 LH/RH

Toyota Levin/ Treuno/ Marino  
AE10# Series 06/91 - 08/98


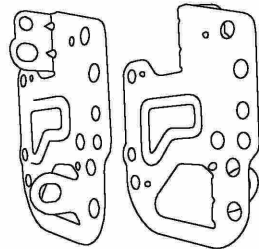


### No 426 LH/RH

Toyota MR2 1989-99


### No 428 LH/RH

Toyota Prado  
KZJ/RZJ/VZJ/KDJ 9#  
1996-02

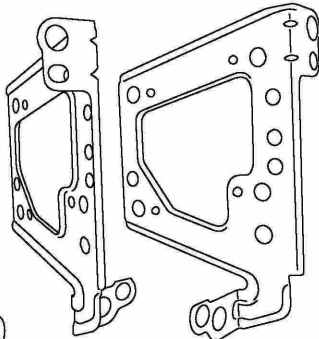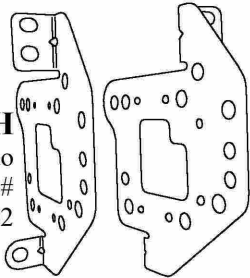


### No 429 LH/RH

Toyota Starlet/ Glanza EP9#, NP90  
96-07/99  
Cynos EL5# 08/95-07/99  
Corsa, Tercel, Corolla 2 EL5#  
09/94-07/99

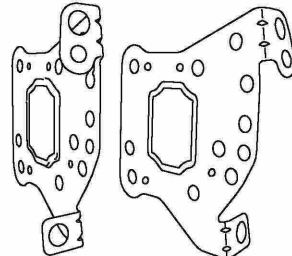


### No 430 LH/RH

Toyota Camry  
CV4# SV4#  
06/1994 - 05/1996  
MCV SXV2#  
12/1996 - 2001

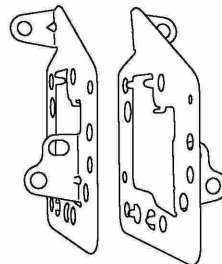


### No 433 LH/RH

Toyota Land Cruiser  
80 Series 1990 - 1998

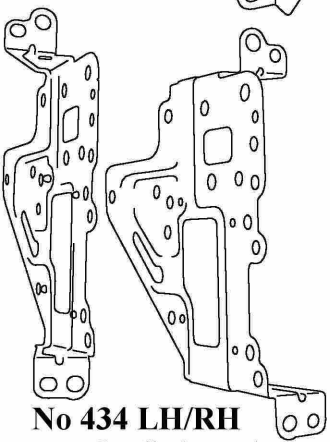


### No 434 LH/RH

Toyota Corolla (Lower)  
AE/EE 100 1992-2000  
(Upper uses No 441 LH/RH)

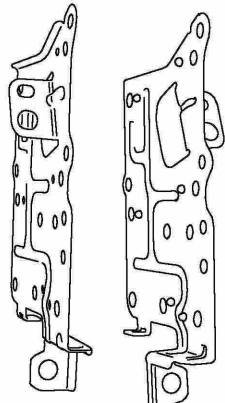


### No 435 LH/RH

Toyota Carib, Corolla  
AE110 - 115 Series  
(Lower)  
08/1995 - 04/1997  
(Upper No 454 LH/RH)

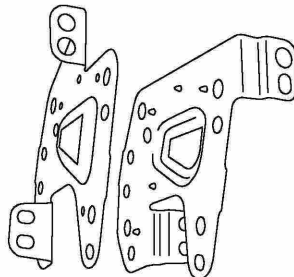


### No 436 LH/RH

Toyota Granvia  
KCH 10/16 W 1995 - 05/99

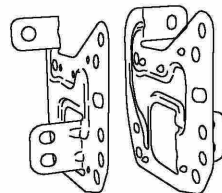


### No 437 LH/RH

Toyota Ipsum / Picnic  
1996 - 1998

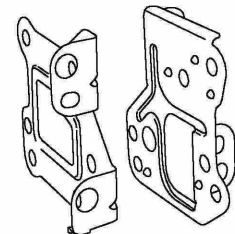


### No 438 LH/RH

Toyota Camry  
SV3#, CU30, VZY3#  
7/1990 - 6/1994 Japan Model

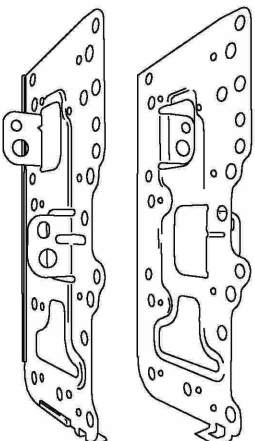


### No 439 LH/RH

Toyota Cynos  
01/1990 - 12/1992

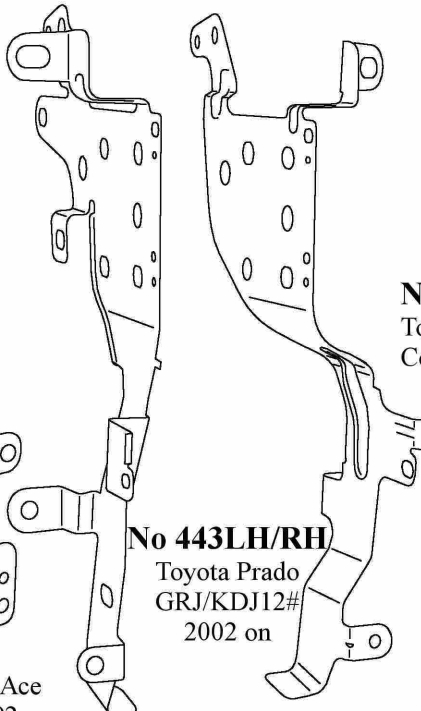


### No 442 LH/RH

Toyota Master Ace/Town Ace  
CK/KR 20-30 1998-1992

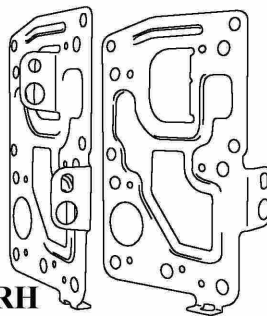


### No 440 LH/RH

Toyota Celica, Carina ED  
Corona EXIV ST18 Series 09/1989-09/1994

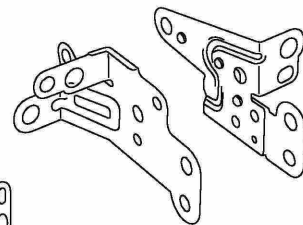


### No 441 LH/RH

Toyota Corolla (Upper)  
AE/EE100 1992-2000  
(Lower uses No 434 LH/RH)

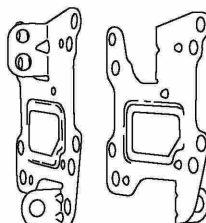


### No 444 LH/RH

Toyota Starlet  
EP80 /1 /2  
1992 - 1/1996

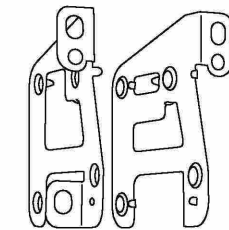

### No 445 LH/RH

Toyota Hilux / Surf  
YM / LM, 50 / 60,  
1984 - 1989

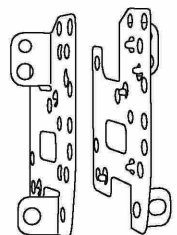


### No 446 LH/RH

Toyota Corolla (Lower)  
AE92 & EE90  
1988 - 1993  
(Upper No 415 LH/RH)


# ED'S AUTO SERVICES

## TOYOTA SIDE MOUNT BRACKETS

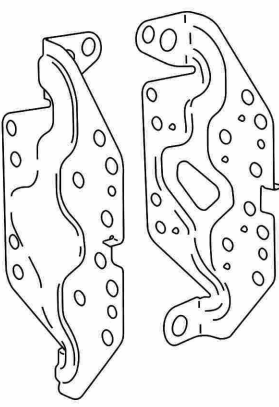


### No 449 LH/RH

Toyota Celica T231 08/1998 on  
Will E127 VS 2001 - 2004

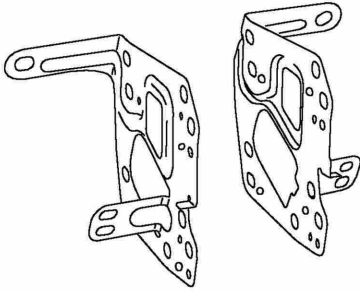


### No 450 LH/RH

Toyota Ipsum/Picnic  
CM21 05/2002 on

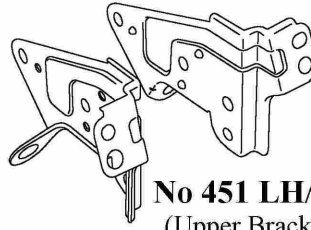


### No 451 LH/RH

(Upper Brackets)  
Toyota Carib  
AE111 1996-2002  
Corolla  
AE110 1997-2002  
(Lower uses No 452 LH/RH)

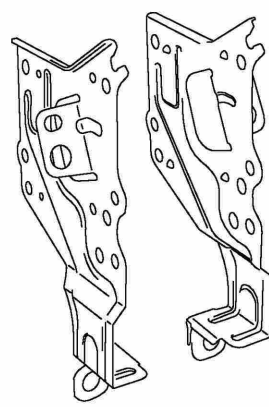

### No 452 LH/RH


(Lower Brackets)  
Toyota Carib  
AE111 1996-2002  
Corolla  
AE110 1997-2002  
(Upper uses No 451 LH/RH)

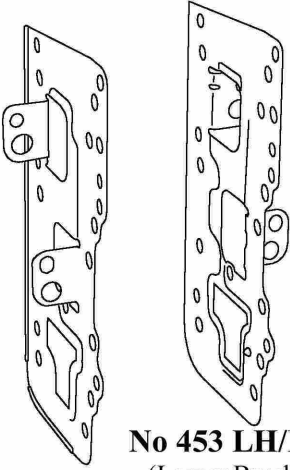

### No 453 LH/RH


(Lower Brackets)

Toyota Corsa, Tercel, EL4# NL40,  
Corolla 2 08/1992 - 09/1994  
Cynos EL44 12/1992 - 08/1995

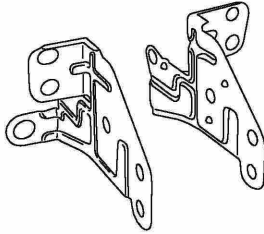


### No 454 LH/RH

Toyota Corolla (Upper)  
AE110-115 1995-1997  
(Lower uses No 435 LH/RH)

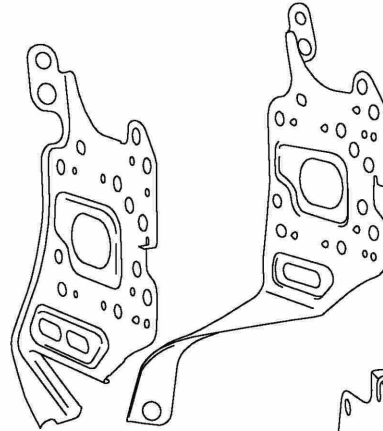


### No 455 LH/RH

Toyota Echo, Vitz  
N/SCP1# 1999-2002

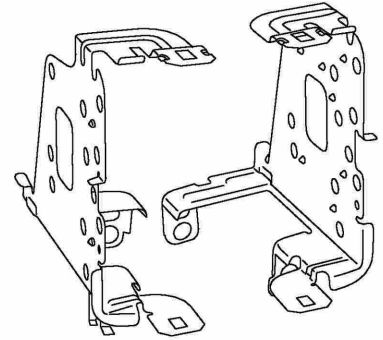


### No 483 LH/RH

Toyota Corolla  
Fielder  
Runx Fielder  
CE121, NZE12#, ZZE12#  
08/2000-09/2006

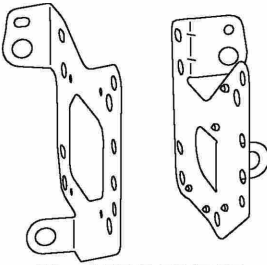


### No 457 LH/RH

Toyota Carina  
ST190 series 1992 - 96

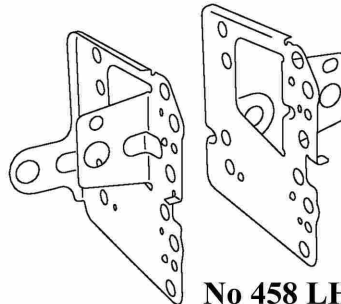


### No 458 LH/RH

Toyota RAV 4 20 series 05/2000 on

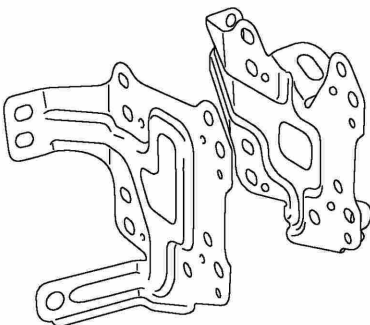


### No 484 LH/RH

Toyota Estima / Lucida / Previa  
ACR/MCR 30/40 AHR10 Series  
12/1999 on

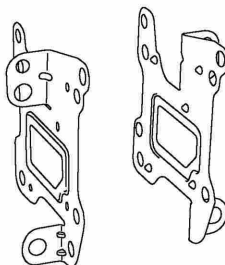

### No 485 LH/RH


Toyota Starlet  
EP80/ 1/ 2  
12/1989 - 1992

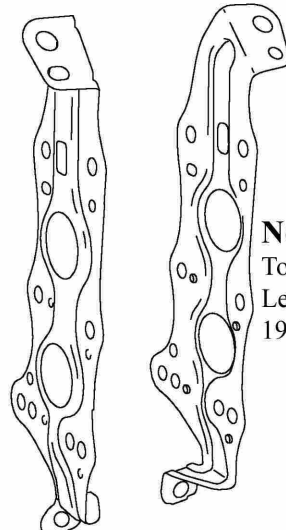

### No 486 LH/RH


Toyota Altezza  
Lexus IS300  
1998 on

## TOYOTA SIDE MOUNT BRACKETS

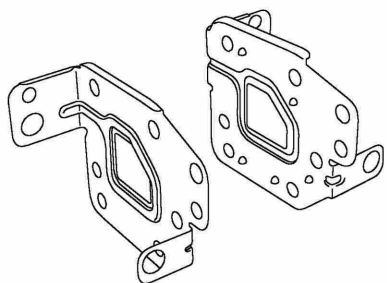


### No 488 LH/RH

Toyota Vista  
1994-05/1996

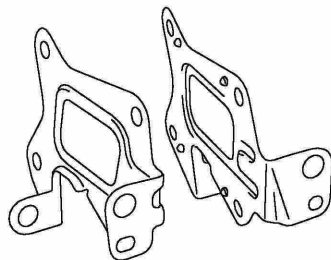


### No 490 LH/RH

Toyota Raum EXZ10 1997-2002  
Stereo mounts on angle to mounting point  
(Use No 207 LH/RH for other model)

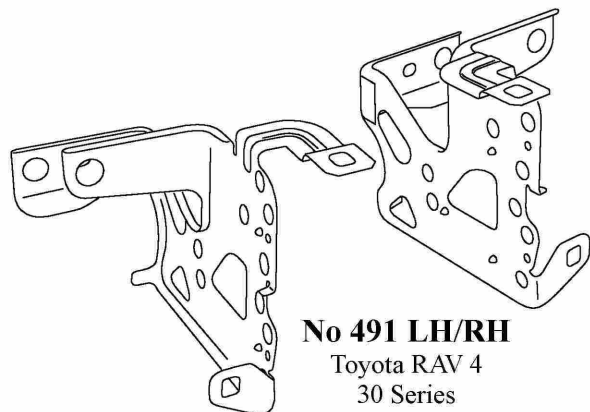


### No 491 LH/RH

Toyota RAV 4  
30 Series  
11/2005 on

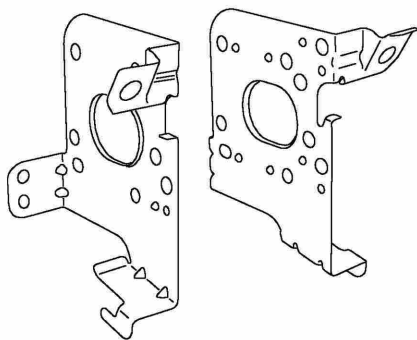


### No 492 LH/RH

Toyota Ist NCP60  
04/2002 on

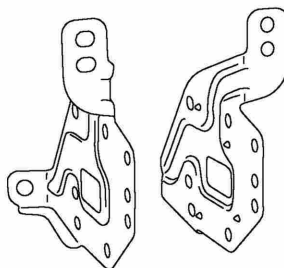


### No 494 LH/RH

Toyota Nadia  
SNX10 1998 - 2001

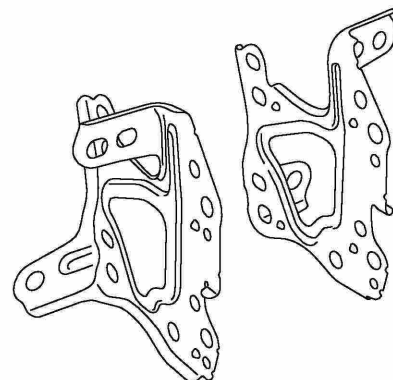


### No 495 LH/RH

Toyota Hiace  
TRH201, KDE200  
2005 on

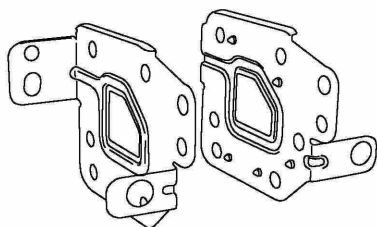

### No 496 LH/RH

Toyota Vista  
CV4#, SV4#  
05/1996-06/1998

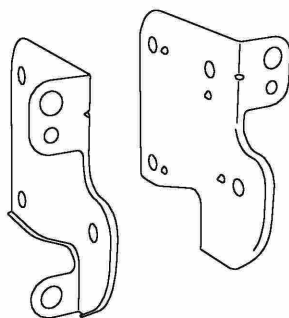

### No 498 LH/RH

Toyota Corolla Spacio A11#  
01/1997-05/2000



## VOLVO



**FP-10-04**  
Volvo V70, S60 2000 - 04




**FP-10-01**  
Volvo 740, 760, 940, 960



**FP-10-06**  
Volvo S60 2004-06 V70, XC70 2004-08  
For Double DIN use DFPK113



**FP-10-05**  
Volvo S80

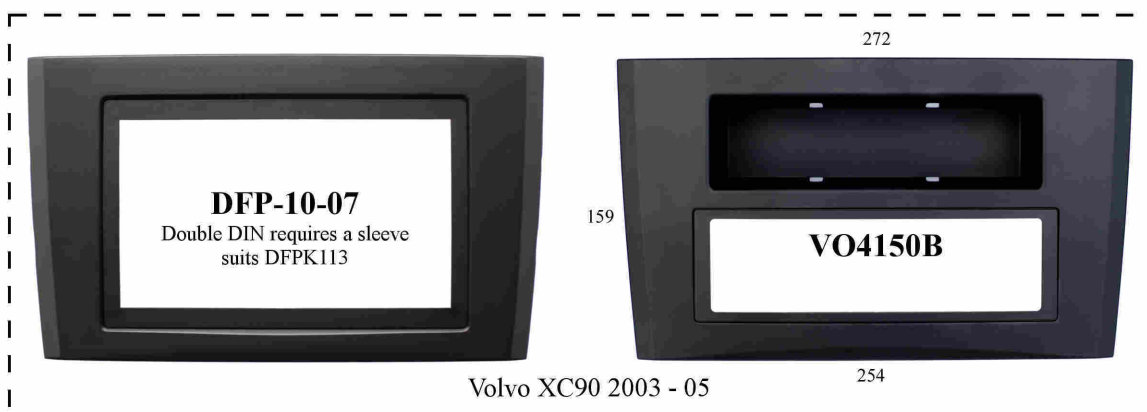

**DFP-10-07**  
Double DIN requires a sleeve  
suits DFPK113

**VO4150B**

Volvo XC90 2003 - 05




**CT23VL03**  
VolvoXC90  
2006 - 15  
Double DIN  
Black



**No 563E**  
Stereo Hook up Volvo  
to ISO  
S40, V40, S60, S70,  
V70, S80  
12 PIN + 12 PIN



**PC9-414**  
Volvo Amplified  
6 pin DIN to RCA

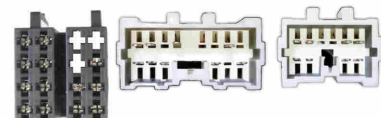

**No 567E**  
Stereo Hook up Volvo  
to ISO  
850, 960  
14 PIN + 10 PIN




**ED-VO10**  
Volvo aerial  
to std male

**ED-VO30**  
Pair



**ED-VO20**  
Volvo aerial  
to std fem

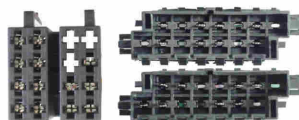

**No 586E**  
Stereo Hook up Volvo  
to ISO  
740 88>90, 760 91>93  
850 92>93, 940 90>94  
960 90>93  
14 PIN + 14 PIN

## VW



**VW2310B**  
ISO



**FP-17-01/  
CT24VW02** DIN

VW Beetle 1998 on



**FP-17-02**  
Secure Kit



**FP-17-00**  
Double DIN




**FP-016**  
Single DIN

VW Golf Mk IV  
1999 - 2003



**DFP-17-04**  
Double DIN  
Requires Sleeve,  
Suits DFPK103

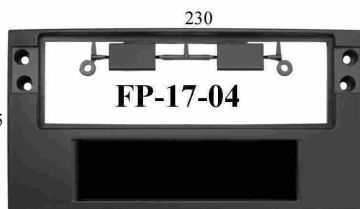

**FP-17-04**

VW Touareg



**FP-17-03**

VW Golf Mk V 2004 on  
VW Touran 2003 on  
Single and Double DIN


(Double DIN requires sleeve - suits DFPK113)



**FP-17-30**  
Soft Touch Finish




**VW2317AB**

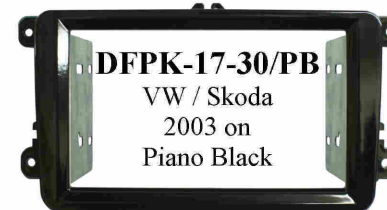

**DFPK-17-30/PB**  
VW / Skoda  
2003 on  
Piano Black



**DFPK-17-30/ST**  
VW / Skoda  
2003 on  
Soft Touch

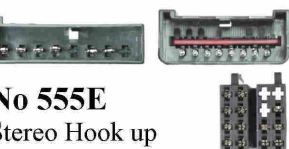

**No 555E**  
Stereo Hook up  
Ford Galaxy/ VW Sharan  
to ISO  
8 PIN + 14 PIN



**SAK-3103**  
VW Beetle, Golf,  
Polo 1999 >  
Passat 97 - 99  
Front and  
Rear Doors 165mm



**No 560E**  
Stereo Hook up  
BMW/ VW  
to ISO  
16 PIN



**ED-VWA2**  
Amplified Aerial Lead Audi/ VW



**ED-VWA4**  
Amplified Aerial Lead Audi/ VW 2000 on

**ED-VWA3**

**ED-VWA3R**

Audi/BMW/VW/Mercedes  
2002 on Aerial to std

**SOT-976**



Phone kit/ Accessory Lead  
VW



**CTVVGX004**

VW 3.5mm Aux in Adaptor  
VW EOS, Jetta 2006 - 2015 VW Golf 2004 - 2013  
Passat 2004 - 2015 Scirocco 2008 - 2015  
Sharan 2009 - 2015 Tiguan 2007 - 2015



**ED-VWA3**  
**ED-VWA6 (Pair)**  
**ED-VWA3R**




**ED-VWA7**  
Phantom Active Diversity Aerial Adaptor  
Audi / VW / Seat / Skoda 2005 on

# ED'S AUTOSERVICES


## ELECTRONIC DEVELOPMENTS FM CONVERTERS




**PB1000-10** std aerial plugs  
Filtered and amplified  
to full signal at 10MHz shift

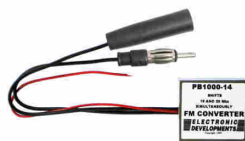

**PB1000-14** std aerial plugs  
Filtered and amplified  
to full signal at 14MHz shift

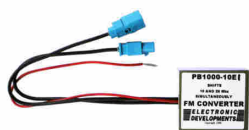

**PB1000-10E1**  
Euro 2000 on with power bypass  
Filtered and amplified  
to full signal at 10MHz shift

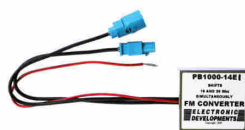

**PB1000-14E1**  
Euro 2000 on with power bypass  
Filtered and amplified  
to full signal at 14MHz shift



**PB1000-10EVW**  
Euro button with power bypass  
Filtered and amplified  
to full signal at 10MHz shift



**PB1000-14EVW**  
Euro button with power bypass  
Filtered and amplified  
to full signal at 14MHz shift




**PB1000-10H1** Honda, Mistubishi  
Mazda, Suzuki 2005 on  
Filtered and amplified  
to full signal at 10MHz shift



**PB1000-14H1** Honda, Mistubishi  
Mazda, Suzuki 2005 on  
Filtered and amplified  
to full signal at 14MHz shift



**PB1000-10N**  
Old style Nissan 2 pin  
Filtered and amplified  
to full signal at 10MHz shift

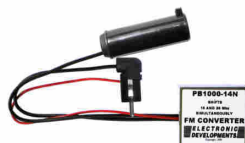


**PB1000-14N**  
Old style Nissan 2 pin  
Filtered and amplified  
to full signal at 14MHz shift



**PB1000-10N1** Nissan 2007 on  
Filtered and amplified  
to full signal at 10MHz shift



**PB1000-14N1** Nissan 2007 on  
Filtered and amplified  
to full signal at 14MHz shift

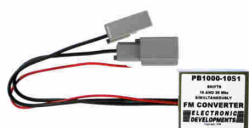

**PB1000-10S1** Subaru 2005 on  
Filtered and amplified  
to full signal at 10MHz shift



**PB1000-14S1** Subaru 2005 on  
Filtered and amplified  
to full signal at 14MHz shift



**PB1500** US to Std FM  
0.1 MHz shift



**PB2000E1** Euro 2000 on  
Filtered and amplified  
to full signal at 10/14MHz  
& 20/28MHz shift



**PB2000S1** Subaru 2005 on  
Filtered and amplified  
to full signal at 10/14MHz  
& 20/28MHz shift




**PB1500E1** US with Euro plugs to Std FM  
0.1 MHz shift




# CELL PHONE ACCESSORIES

# ED'S AUTO SERVICES


HA-102

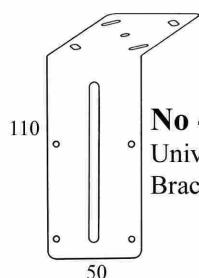

**No 400**  
Universal Cell Phone  
Bracket

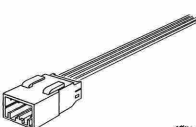

**No 576**  
Cell Phone Hook up  
VT - VX Commodore  
4 PIN

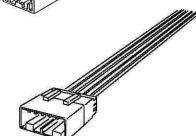


**No 577**  
Cell Phone Hook up  
VY - VZ Commodore  
6 PIN



**No 779**  
Cell Phone Hook up  
VE/WM Commodore  
2006 on

## ALARM SWITCH BRACKETS



**No 86/100**



**S-SDSW**  
Sliding Door  
Contact Set



**S-TOY**  
Toyota Door Pin Switch

## ALARM SWITCHES



**S-FMP**  
Flange Mount  
Pin Switch



**SWPVFM**  
Vertical  
Flange Mount  
Pin Switch




**WPS102**  
Pin Switch



**WPS101**  
Pin Switch

**ASC691B black**  
**ASC691 grey**

9 x 6 Box (Pair)  
Carpeted Speaker Box  
*Wide range of sub boxes available  
see [dnaaudio.com.au](http://dnaaudio.com.au) for details*

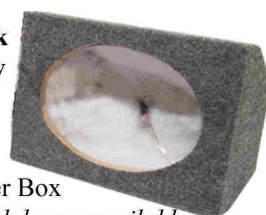

**AG300**  
Cell Phone Stick-on Aerial  
900/1800/1900MHz  
GSM/CDMA  
3db Gain, FME Connector



**PC1-620**  
Ground loop  
isolator



**PC8-101**  
RCA noise filter



**A-LCHOKE**  
Noise Filter / Line Choke  
For removing noise from  
Stereo Power Leads


**SPL1000**  
Sound Pressure  
Meter  
135dB Max



**HA-101**

**No 34**


Tailstrap



**CAMVOLT**  
Camera Voltage Regulator  
Adjustable  
For powering OEM cameras



**No 734-534 5M**  
ISO - ISO 5 Metre  
Extension lead

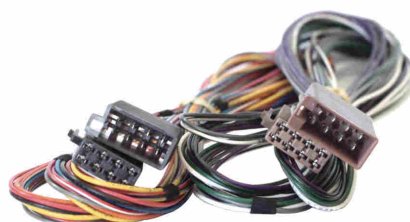

**No 734-534 2.5M**  
ISO - ISO 2.5 Metre  
Extension lead



**MAC001**  
Marine Stereo Enclosure  
Top/ Bottom mount

## MARINE ENCLOSURE



**AM35**  
3.5mm Marine Housing  
to RCA / 3.5mm jack



**MRH001**  
Marine Stereo Enclosure  
with Speakers  
DIN/ TW. Shaft



**PC4-35**  
2nd Battery  
Split Charge Kit



**MAF003**  
Marine Stereo Front



## ACCESSORIES

**IPOD-DOCK**  
30 Pin iPod Docking Station



**G4-37**  
3.5" Gold  
Binding Post  
80mm square



**UMB-10**  
Universal L-Shaped  
Stereo Mounting Brackets  
(Pair)



**58cm LED light strips**  
Can be cut into groups of 3 or more LEDs  
**LED36W** White **LED36B** Blue  
**LED36O** Orange **LED36P** Pink  
**LED36R** Red



**PC9-460**  
Low Level Booster  
1V to 4V Line Driver



**06-SENSE**  
Phantom Ignition Source



**PC1-615**  
Amplifier Level Control



**PC1-625**  
Active Subwoofer  
Crossover












**PC1-616**  
Remote Amplifier  
Balance Control -  
Frequency & Volume





**PC1-617**  
Remote Amplifier  
Front to Rear Fader



## SPEAKER SPACERS

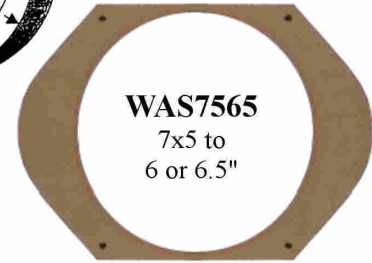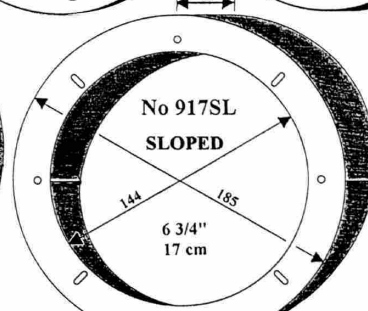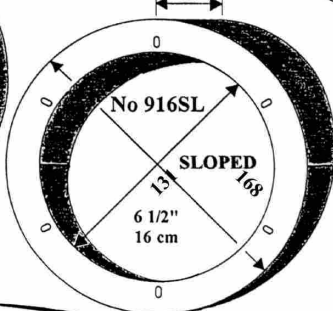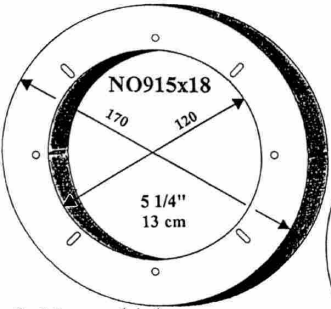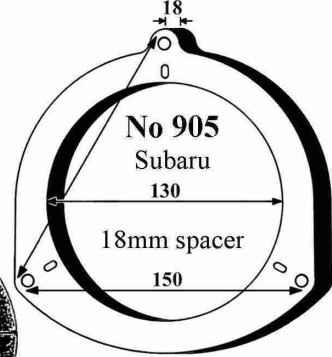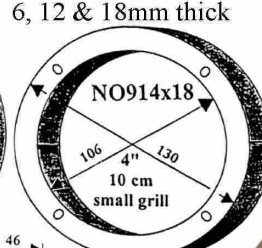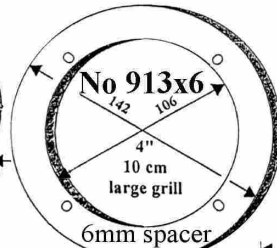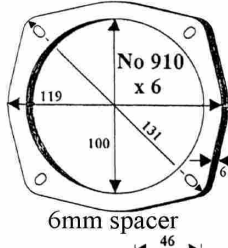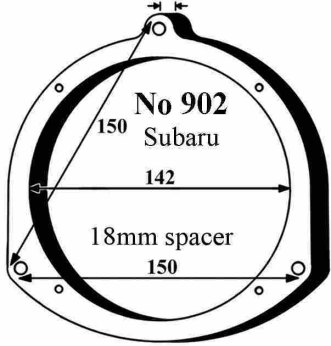

6, 18mm thick

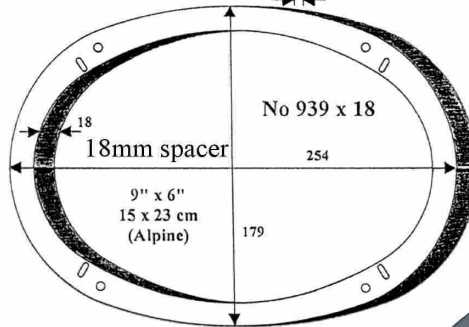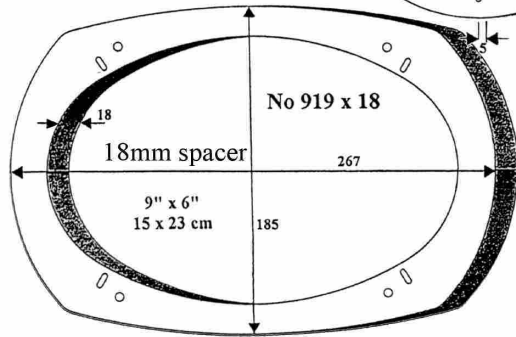

SAK-1104/CT25AU03



Front and Rear Doors



## SPEAKER SPACERS




**CT25AU05**  
Speaker Spacer  
Audi 165mm

A3 Front Door  
2003-2012  
A4 Front & Rear Door  
2000-2004  
A4 Avant Rear Door  
2001-2004



**CT25AU07**  
Audi A4/A5 2009 on  
200mm Front Door  
Speaker Spacer Pair

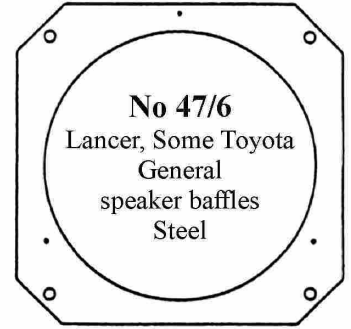

**No 47/6**  
Lancer, Some Toyota  
General  
speaker baffles  
Steel



**CT25AU08**  
Audi A4 2009 on  
165mm Front Door  
Speaker Spacer Pair



**CT25VX09**  
Holden/Opel Astra  
Speaker Adaptor Pair  
2010 on



**No 501**  
Nissan Speaker Hook up  
2 PIN White plug



**No 502**  
Speaker Hook up  
2 PIN



**No 503**  
Nissan Speaker Hook up  
2 PIN



**No 504**  
Audi / VW Speaker Hook up  
2 PIN




**No 505**  
Honda (pair) Speaker Hook up  
2 PIN + 2 PIN



**No 512E**  
Suzuki 1995 on, to ISO  
12 PIN



**No 527E**  
Toyota Pre 1987, to ISO  
5 PIN + 9 PIN

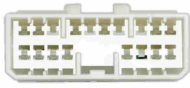

**No 528E**  
Holden Commodore  
VT 1997 on, to ISO  
18 PIN



**No 529E**  
Holden Commodore  
VR - VS 1993 - 1998 to ISO  
14 PIN



**No 530E**  
Holden Commodore VN - VP 1988 - 1993  
Isuzu 1987 - 1995 to ISO  
13 PIN



**No 531**  
Mazda, Ford Ex Japan to ISO  
Falcon EF - EL 1995 - 98  
8 PIN + 12 PIN



**No 532**  
Mitsubishi 1985 - 1994  
Ex - Japan  
5 PIN + 9 PIN





**No 533E**  
Mitsubishi 1995 on, to ISO  
14 PIN



**No 534**  
European  
16 PIN



**No 535**  
Nissan  
10 PIN + 6 PIN

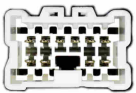


**No 536**  
Nissan 1995 on  
Ex - Japan  
10 PIN + 6 PIN




**No 537**  
Subaru 1993 on  
14 PIN



**No 538E**  
Honda 1986 on  
16 PIN



**No 539E**  
Ford Mondeo /  
Escort / Transit to ISO  
8 PIN + 8 PIN

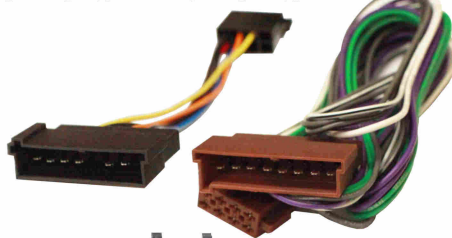

**No 539EABP**  
Ford  
With Amp Bypass  
8 PIN + 8 PIN





**No 540E**  
Toyota 1987 on, to ISO  
10 PIN + 6 PIN



**No 541**  
Subaru pre 1993  
9 PIN + 7 PIN



**No 542**  
Honda 1998 on  
Suzuki 2001 on  
20 PIN ( 8 Large, 12 Small )

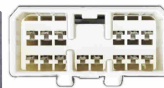


**No 543E**  
Hyundai 1992 - 99 to ISO  
14 PIN




**No 544**  
Mazda / Ford Japan  
1986 - 89  
4 + 4 + 3 + 1 PIN



**No 545**  
Ssangyong Musso  
18 PIN

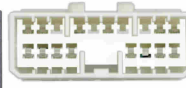

**No 546E**  
Ssangyong Korando, Rexton  
Daewoo  
18 PIN

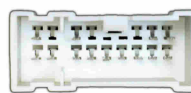

**No 547**  
Nissan 2001 on  
16 PIN



**No 548**  
Hyundai 1999 on  
Kia  
16 PIN




**No 549E**  
Isuzu / Rodeo  
1996 on, to ISO  
16 PIN



**No 550E**  
BMW  
3 / 5 Series to ISO  
17 PIN




**No 552E**  
Hyundai/Kia 2010 on  
18 PIN ( 8 large 10 small ) & 20 PIN  
( 4 large 20 small )



**No 554E**  
Ford Falcon  
1997 on, to ISO  
20 PIN ( 4 Large, 4 Med, 12 Small )



**No 555E**  
Ford Galaxy / VW Sharon  
to ISO  
14 PIN + 8 PIN

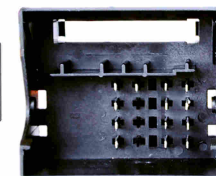


**No 556E**  
Ford Mondeo 2003 on  
to ISO  
16 PIN ( DO NOT USE WITH VW  
OR BMW - WIRING DIFFERENT )




# ED'S AUTO SERVICES

## LEADS TO MATCH ORIGINAL CAR WIRING HARNESSES

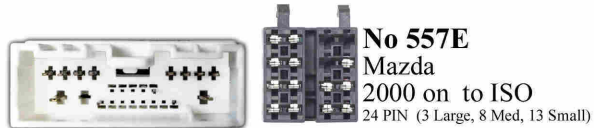

**No 557E**  
Mazda  
2000 on to ISO  
24 PIN (3 Large, 8 Med, 13 Small)

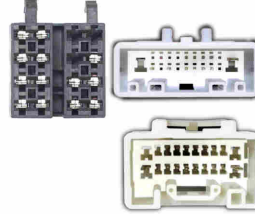

**No 573E**  
Nissan 06 >, Subaru 03 >  
to ISO  
20 PIN (2 Large, 18 Small)




**No 558E**  
Chrysler 1984 on to ISO  
7 + 7 PIN




**No 559E**  
Chrysler / Jeep 2002 > to ISO  
22 PIN (6 Large, 6 Small)




**No 560E**  
BMW 3/ 5 Series  
2000 on to ISO  
16 PIN (DO NOT USE  
ON MONDEO,  
WIRING DIFFERENT)

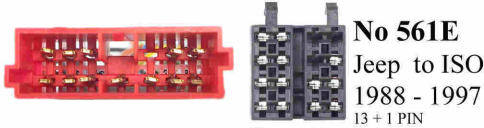

**No 561E**  
Jeep to ISO  
1988 - 1997  
13 + 1 PIN

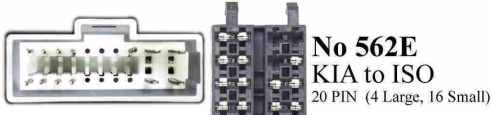

**No 562E**  
KIA to ISO  
20 PIN (4 Large, 16 Small)

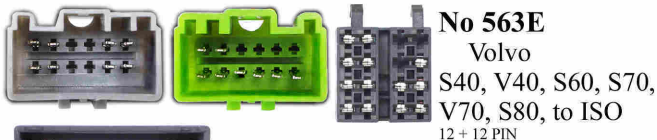

**No 563E**  
Volvo  
S40, V40, S60, S70,  
V70, S80, to ISO  
12 + 12 PIN




**No 564E**  
Citroën/ Peugeot  
2005 > to ISO  
16 PIN



**No 565E**  
Jaguar to ISO  
XJ6, XJ8, XK8, up to 7/2002  
20 PIN



**No 566E**  
Jaguar  
up to 9/1994 to ISO  
14 PIN

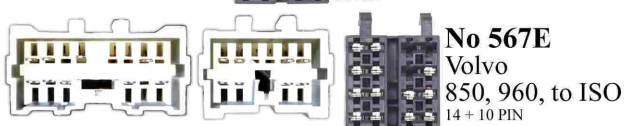

**No 567E**  
Volvo  
850, 960, to ISO  
14 + 10 PIN



**No 568**  
Falcon EA, EB, ED 1988-94  
13 PIN



**No 569E**  
GM (USA) & Toyota Cavalier  
up to 2002 to ISO  
21 PIN




**No 570E**  
Ford USA 2002 on to ISO  
24 PIN (3 Large, 8 Med, 13 Small)



**No 571E**  
Jaguar S-Type, XJR, XJ8,  
X-Type to ISO  
20 PIN (4 Large, 16 Small)




**No 572E**  
Honda 2005 on  
17 PIN (12 Large, 5 Small)

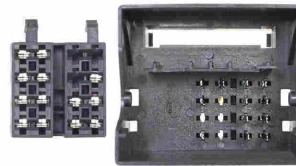

**No 580E**  
Mercedes Audio 10  
2004 > to ISO



**No 581E**  
Astra 2004 > to ISO

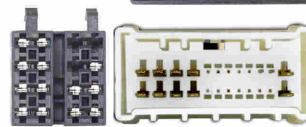


**No 582E**  
Hyundai/ Kea to ISO  
24 PIN (10 Large, 14 Small)



**No 585E**  
Captiva 2005 > to ISO  
16 + 14 PIN (16 Small, 2 Large, 12 Small)



**No 586E**  
Volvo 6 Speaker  
740 88>90, 760 91>93, 850 92>93  
940 90>94, 960 90>93  
14 PIN + 14 PIN

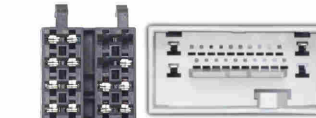

**No 587E**  
Honda 24 Pin to ISO  
24 PIN (4 Large, 20 Small)



**No 588E**  
Ford Fiesta 2010 >  
Focus, Ranger 2012 > to ISO  
24 PIN (2 Large, 22 Small)



**CR04B**  
Some Chrysler/ Jeep 2007 >  
to ISO, 22 PIN (2 Large, 20 Small)




**FD16B**  
Ford 1998 >  
to ISO, 16 PIN



**HA09B**  
Honda Split loom 2003 >  
Add aftermarket unit and keep  
OEM unit for dash controls



**GM03B**  
General Motors 1994 >  
to ISO, 32 PIN

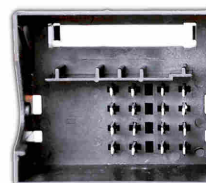

**VW03B**  
VW 2002 >  
to ISO, 16 PIN





**PC3-09**  
10 Male-pin housing to RCA kit




**PC9-401**  
Audi Rear Amplified adaptor  
Audi A3, A4, A6, A8




**PC9-404**  
Audi Rear Amplified adaptor  
RCA output ( suits 4V)  
Audi A3, A4, A6, A8, TT



**PC9-405**  
BMW  
4 Channel  
Amplified to RCA

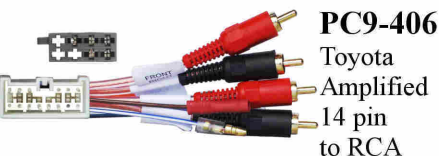

**PC9-406**  
Toyota  
Amplified  
14 pin  
to RCA




**PC9-407**  
Chrysler Amplified  
Jeep Grand Cherokee  
Voyager LE & Grand



**FDK1B**  
Ford USA  
Low level Hook up  
1989 - 1994  
8 + 8 PIN



**FDK2B**  
Ford USA  
High level Hook up  
8 + 14 + 11 + 8 PIN



**FDK7B**  
Ford USA  
Low level Hook up  
1995 on  
16 + 8 PIN



**FDK8B**  
Ford USA  
High level Hook up  
1995 on  
16 + 14 + 8 + 8 PIN



**SLC-4**  
4 Channel Speaker  
to Line Level Converter  
80 watts per channel Adjustable

to Line Level Converter 80 watts per channel Adjustable

## ED'S AUTO SERVICES Active System Adaptors & Amp Bypass Adaptors



**PC9-408**  
Audi / Porsche  
Fully Amplified  
Speaker level to Line level



**PC9-410**  
Audi / Porsche Fully Amplified RCA out




**PC9-411**  
Toyota  
Amplified  
15 pin to RCA



**PC9-414**  
Volvo Amplified  
6 pin DIN to RCA



**PC9-415**  
Saab 05>

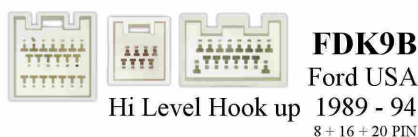

**FDK9B**  
Ford USA  
Hi Level Hook up  
1989 - 94  
8 + 16 + 20 PIN



**FDK10B**  
Ford USA  
Hi Level Hook up  
1988 - 97  
16 + 8 + 8 PIN



**FDK11B**  
Ford USA  
Select  
2003 on  
24 + 8 PIN



**FDK13B**  
Ford USA  
Select  
2000 on  
16 + 8 PIN

## SPEAKER LEVEL CONVERTERS



**LOC-80**  
2 Channel Speaker  
Level Converter  
80 watts per channel  
Adjustable



**PC9-460**  
Low Level Booster  
1v to 4v Line Driver  
Individually Adjustable Gain




**PC9-416**  
Audi 2005 on  
Front and Rear  
Amplified



**PC9-417**  
Audi 2005 on  
Rear Amplified



**PC9-422**  
Toyota 20 pin  
to RCA & ISO

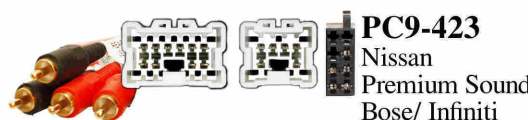

**PC9-423**  
Nissan  
Premium Sound  
Bose/ Infiniti



**PC9-514**  
BMW Harman Kardon Amplified Systems



**PC9-520**  
Mazda 2001 on  
Bose adaptor  
to ISO



**No 539EABP**  
Ford with  
Amp bypass  
8 + 8 PIN



**TA03HB**  
Toyota  
Amplified 2000 on  
20 PIN: (4 Large, 16 Small)



**TA07SR**  
Toyota/Lexus  
OEM JBL Amped 2004 on  
20 PIN: 2 Large, 18 Small



**No 861E**  
Toyota Lexus  
Amp bypass Harness to ISO



**H2L**  
Active  
speaker to  
line level converter  
with time sequence  
control to reduce  
turn on pop

# ED'S AUTO SERVICES


## Active System Adaptors & Amp Bypass Adaptors



### **CT20NS07**

Amplified hook up lead

Nissan Armada, Pathfinder, Qashqai, Rogue, Sentra, X-Trail 2007 on  
Juke 2010

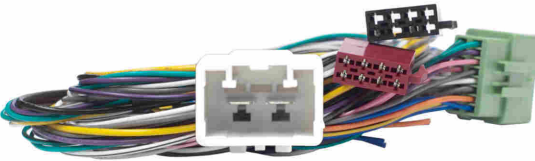

### **CT51-LR01**

Land Rover Amp Bypass Lead

Harman Kardon, NOT Logic 7

Land Rover Discovery 2004 - 2009

Range Rover Sport 2005 - 2013



### **CT51-TY01**




Toyota 15 pin Active System Adaptor

MR2 1994-2005

Celica 1994-2006

## VEHICLE SPECIFIC STEERING WHEEL CONTROL ADAPTORS

Use Patch Lead to match your stereo to control adaptor, which plugs directly into car

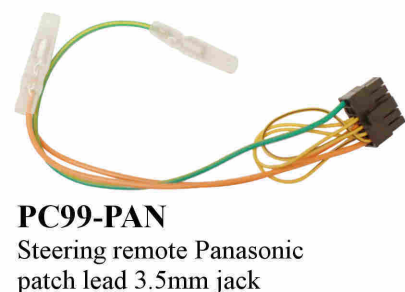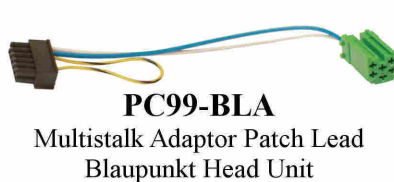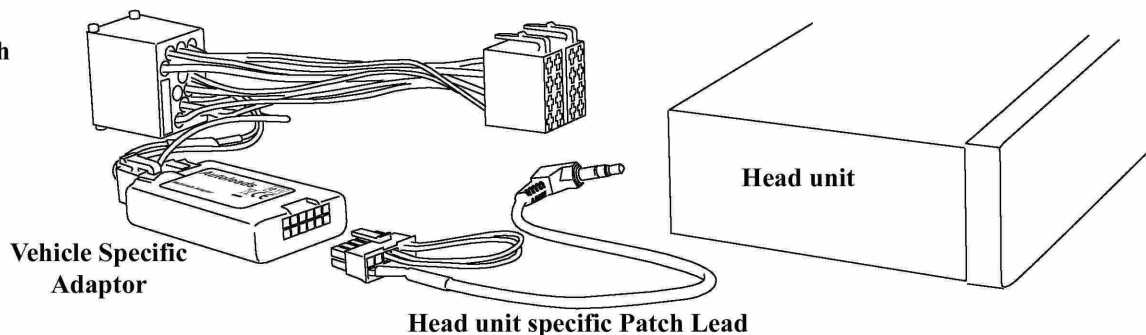

### CONTROL ADAPTOR PLUG CONFIGURATIONS





# ED'S AUTO SERVICES

## VEHICLE SPECIFIC STEERING WHEEL CONTROL ADAPTORS

( Require Stereo specific patch leads shown on the previous page)




**PC99-X46**

Mazda 3/6/RX8




**PC99-X50**

Ford  
Focus C-Max,  
Mondeo 2004 >  
Focus 2005 >

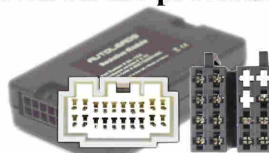


**PC99-X60**

Honda CRV 05/2005 >

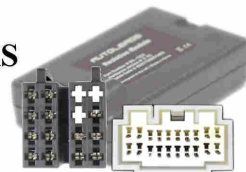


**PC99-X61**

Honda S2000

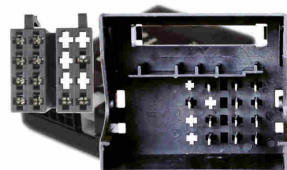

**PC99-X80** Astra 2004 >

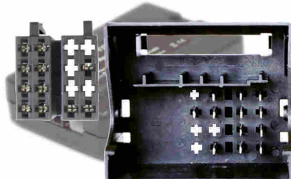

**PC99-X85**

BMW CAN bus 3 Series 2005 on




**PC99-201**

Mitsubishi Colt 2005 >, L200 2010 >



**PC99-208**

Hyundai Santa Fe

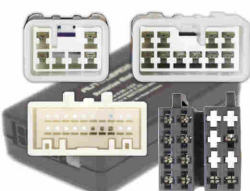

**PC99-209**

Toyota



**PC99-213**

Peugeot, Citroën  
with separate control stalk



**PC99-215**

Nissan X-Trail 2007 on



**PC99-216**

Nissan X Micra 2006 on




**PC99-218**

Suzuki




**PC99-220**

Nissan Dualis/Qashqai

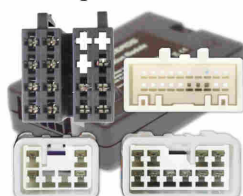


**PC99-223**

Toyota RAV4 Prius  
Auris Yaris

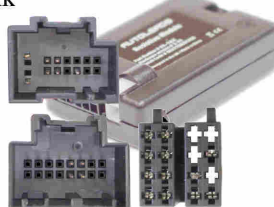


**PC99-224**

Holden Captiva 7

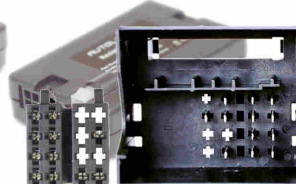


**PC99-501**

BMW E90, E91  
NOT IDRIVE

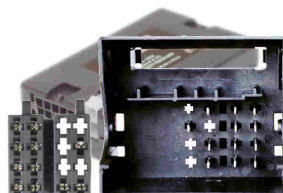


**PC99-502**

VW Passat 2005 on  
- Not CC

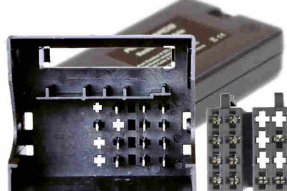


**PC99-503**

Audi A4 2007 on

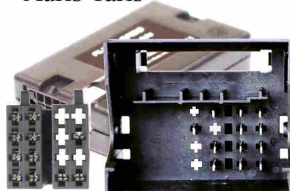


**PC99-504**

Audi A3

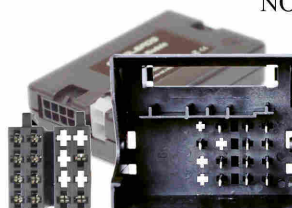


**PC99-505**

VW Golf MkIV 8 Button control

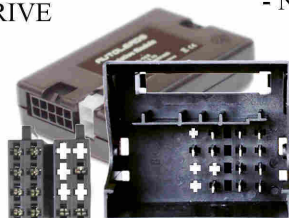

**PC99-511**

Mercedes B,C,E Class

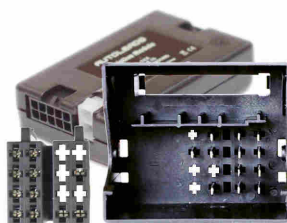


**PC99-521**

Mercedes Sprinter 2008 on

**Units for other  
European cars  
can be procured  
on request**

See [Autoleads.co.uk](http://Autoleads.co.uk)  
for Products not  
shown

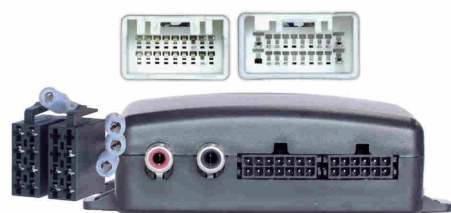

**CTUMT01**

Mitsubishi Select Rockford Fosgate Steering Adaptor and  
Onboard information Display for Aftermarket AV Headunit  
ASX 2010 - 2015 L200, Lancer, Triton 2008 - 2015  
Outlander 2008 - 2013 Pajero Sport 2012 - 2015



**SWCHL03**

Holden Steering Wheel Control Adaptor  
Holden Calais VT, VX 1997-2002  
Caprice, Statesman WH Series 1&2 1999-2003  
Monaro V2 2001-2002



# ED'S AUTO SERVICES

## CT CAN-BUS STEERING REMOTE ADAPTORS

Require Head unit specific Patch Leads on next page



**CTSAD005.2**

Audi A2/A3/A4/TT  
Rear Amplified Quadlock  
CAN-Bus Steering Control  
Adaptor lead



**CTSAD006.2**

Audi A2/A3/A4/TT  
Fully Amplified Quadlock  
CAN-Bus Steering Control  
Adaptor lead




**CTSAD007.2**

Audi A2/A3/A4/TT  
Rear Amplified ISO  
CAN-Bus Steering Control  
Adaptor lead



**CTSAD008.2**

Audi A2/A3/A4/  
A6/A8/TT  
Fully Amplified  
CAN-Bus Steering  
Control Adaptor lead

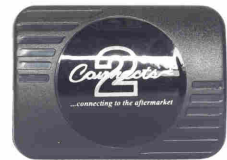


**CTSAR003.2**

Alfa Romeo 147  
2007-2010  
GT 2008-10  
CAN-Bus Steering  
Control Adaptor lead



**CTSBM004.2**

BMW 3-Series E46 1998-2005  
E39 2000-2004  
Mini Pre CAN/I-Bus 2001-2006  
X3 2004-2010  
X5 E53 2000-2006  
Z4 E85 2002-2008  
Steering Control Adaptor lead

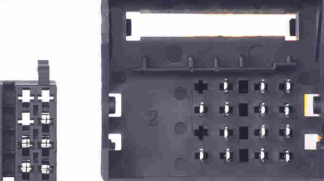

**CTSBM005.2**

BMW 1-Series E8\* 04-13  
3-Series E9\* 2005-2012  
5-Series E6\* 2004-2010  
6-Series E6\* 2003-2010  
7-Series E6\* 2001-2008  
Mini CAN-Bus 2006-2013  
Z4 E89 2009 on  
CAN-Bus Steering  
Control Adaptor lead





**CTSCH00C**

Chrysler/Jeep/Dodge  
CAN-Bus Steering  
Control  
Adaptor lead



**CTSCV001.2**

Chevrolet Aveo,  
Captiva 2007 on  
Steering Control  
Adaptor

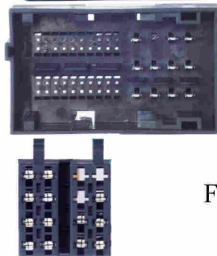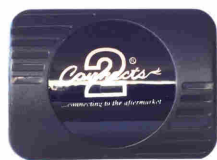


**CTSFA015.2**

Fiat Ducato  
2015 on  
CAN-Bus  
Steering Control  
Adaptor



**CTSFO003.2**

FORD C-Max 1st Gen 2003-2010  
Fiesta 2005-2008  
Focus Mk2 2004-2011  
Fusion 2005-2012  
Galaxy Mk3 2006 on  
Kuga 1st Gen 2008-2012  
Mondeo Mk4 2007-2014  
Transit 4th Gen (Facelift) 2006-2013  
Transit Connect 1st Gen 2004-2013  
CAN-Bus Steering Control Adaptor

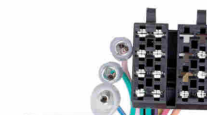


**CTSHO003.2**

Honda  
CR-V 2009 - 2012  
CR-Z 2010 - 2015  
Fit 2007 - 2015  
Insight 2009 - 2015  
Jazz 2008 - 2015  
Steering Control Adaptor



**CTSHO006.2**

Honda CR-V 2012 on  
Civic Tourer 2014 on  
Civic 2012 on  
Non-Nav, Non-amped  
CAN-Bus Steering  
Control Adaptor

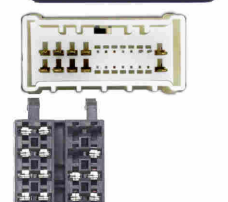

**CTSHY002.2**

Hyundai Santa Fe  
2006-2010  
Non-amped  
Steering  
Control Adaptor

# ED'S AUTO SERVICES

## CT CAN-BUS STEERING REMOTE ADAPTORS

Require Head unit specific Patch Leads on next page



### CTSIZ001.2

Chevrolet/ Holden Colorado  
2012-2014  
Isuzu D-Max 2012 on  
Isuzu MU-X 2014 on  
Steering Control Adaptor lead



### CTSJG001.2

Jaguar XJ8 1998 - 2003  
Steering Control  
Adaptor lead



### CTSKI004.2

Kia Sportage 2010 on  
Picanto, Rio 2011 on  
Cee'd, Forte, Soul 2012 on  
Steering Control  
Adaptor lead



### CTLR006.2

Land Rover Range Rover Sport  
2005-2013  
Land Rover Freelander TD4 MK20  
2006-2014  
Land Rover Discovery 2005-2014  
Not for fibre optic amplified systems  
CAN-Bus Steering Control  
Adaptor lead



### CTSMC001.2

Mercedes Audio 20  
A-Class W169 2004-2012  
B-Class 2005-2011  
C-Class W203 2004-2007  
R-Class 2006-2013  
Sprinter 2006  
Viano 2006-2015  
ML Non-Amped 2005-2011  
CLK W209 2004-2009  
VW Crafter 2012-2014  
CAN-Bus  
Steering Control Adaptor lead



### CTSMC004.2

Mercedes E-Class W211  
Audio 20 2002-2009  
SLK R171 2004-2011  
SL R230 2004-2014  
CAN-Bus Steering  
Control Adaptor lead



### CTSMC006.2

Mercedes Benz  
C Class W203 2001-04  
CLK W209 2001-04  
CAN-Bus Steering  
Control Adaptor lead



### CTSMC013.2

Mercedes Benz  
E-Class W211  
Fibre-Amp 2002-2009  
CAN-Bus Steering  
Control Adaptor lead



### CTSMT005.2

Mitsubishi  
L200 2012-2015  
Triton 2012 on  
Strada, Sportero 2014 on  
CAN-Bus Steering  
Control Adaptor



### CTSMT007.2

Mitsubishi  
Shogun, Pajero  
2010 - 2013  
CAN-Bus Steering  
Control Adaptor



### CTSMT009.2

Mitsubishi  
Rockford Fosgate  
Outlander, Pajero,  
Shogun 2013 on  
ASX 2015 on  
CAN-Bus Steering  
Control Adaptor



### CTSMZ005.2

MAZDA Bose  
3 2009-2013  
5 2010 on  
6 2010-2013  
CAN-Bus Steering  
Control Adaptor



### CTSMZ007.2

MAZDA Bose  
24 Pin Plug  
CX-7 2008-2012  
CX-5 2013 on  
6 2013 on  
CAN-Bus Steering  
Control Adaptor



# ED'S AUTO SERVICES

## CT CAN-BUS STEERING REMOTE ADAPTORS

Require Head unit specific Patch Leads on next page



**CTSIZ001.2**

Chevrolet/ Holden Colorado  
2012-2014

Isuzu D-Max 2012 on  
Isuzu MU-X 2014 on  
Steering Control Adaptor lead



**CTSJG001.2**

Jaguar XJ8 1998 - 2003  
Steering Control  
Adaptor lead



**CTSKI004.2**

Kia Sportage 2010 on  
Picanto, Rio 2011 on  
Cee'd, Forte, Soul 2012 on  
Steering Control  
Adaptor lead



**CTLR006.2**

Land Rover Range Rover Sport  
2005-2013  
Land Rover Freelander TD4 MK20  
2006-2014  
Land Rover Discovery 2005-2014  
Not for fibre optic amplified systems  
CAN-Bus Steering Control  
Adaptor lead



**CTSMC001.2**

Mercedes Audio 20  
A-Class W169 2004-2012  
B-Class 2005-2011  
C-Class W203 2004-2007  
R-Class 2006-2013  
Sprinter 2006  
Viano 2006-2015  
ML Non-Amped 2005-2011  
CLK W209 2004-2009  
VW Crafter 2012-2014  
CAN-Bus  
Steering Control Adaptor lead



**CTSMC004.2**

Mercedes E-Class W211  
Audio 20 2002-2009  
SLK R171 2004-2011  
SL R230 2004-2014  
CAN-Bus Steering  
Control Adaptor lead



**CTSMC006.2**

Mercedes Benz  
C Class W203 2001-04  
CLK W209 2001-04  
CAN-Bus Steering  
Control Adaptor lead



**CTSMC013.2**

Mercedes Benz  
E-Class W211  
Fibre-Amp 2002-2009  
CAN-Bus Steering  
Control Adaptor lead



**CTSMT005.2**

Mitsubishi  
L200 2012-2015  
Triton 2012 on  
Strada, Sportero 2014 on  
CAN-Bus Steering  
Control Adaptor



**CTSMT007.2**

Mitsubishi  
Shogun, Pajero  
2010 - 2013  
CAN-Bus Steering  
Control Adaptor



**CTSMT009.2**

Mitsubishi  
Rockford Fosgate  
Outlander, Pajero,  
Shogun 2013 on  
ASX 2015 on  
CAN-Bus Steering  
Control Adaptor



**CTSMZ005.2**

MAZDA Bose  
3 2009-2013  
5 2010 on  
6 2010-2013  
CAN-Bus Steering  
Control Adaptor




**CTSMZ007.2**

MAZDA Bose  
24 Pin Plug  
CX-7 2008-2012  
CX-5 2013 on  
6 2013 on  
CAN-Bus Steering  
Control Adaptor

# ED'S AUTO SERVICES

## CT CAN-BUS STEERING REMOTE ADAPTORS

Require Head unit specific Patch Leads on next page

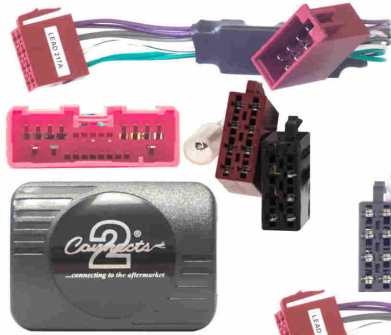

### CTSMZ010.2

MAZDA Bose  
CX-9 2007-2015  
3 2013 on  
CAN-Bus Steering  
Control Adaptor



### CTSMZ012.2

MAZDA Bose  
MX5 1999 on  
Steering Control Adaptor



### CTSNS003.2

Nissan 2009 on  
Resistive Steering  
Control adaptor



### CTSNS010.2

Nissan Analogue 2009 on  
With Bluetooth Phone Button  
Cube, Titan 2009 on  
Xterra 2009-2016  
Navarra Blaupunkt/Clarion 2009 on  
Sentra 2013 on  
Cabstar 2014 on  
Resistive Steering  
Control adaptor



### CTSNS012.2

Nissan Altima 2014 on  
Steering Adaptor lead



### CTSTY002.2

Toyota Avensis, Corolla, Rav 4,  
Rush, Verso, Yaris 2011 on  
28 Pin  
Steering Control  
Adaptor lead



### CTSVL003.2

Volvo XC90 Amplified  
2004-2014  
CAN-Bus Steering Control  
Adaptor



### CTSVW001.2

VW Beetle 1998 - 2010  
Bora, Lupo 1998 - 2005  
Golf 1998 - 2003  
Passat 1996 - 2005  
Sharan 2000 - 2005  
Transporter T4 1990 - 2003  
Resistive Steering Control  
Adaptor



## Head unit Specific Patch Leads for CT Steering Control Adaptor Leads



**CTALPINELEAD**  
Apline  
Steering wheel control  
adaptor Patch lead



**CTBLAUPUNKTLEAD**  
Blaupunkt Steering wheel control  
adaptor Patch lead



**CTCHINAHULEAD**  
Steering wheel control Patch lead  
for Chinese brand head units



**CTCLARIONLEAD**  
Clarion  
Steering wheel control Patch lead



**CTJVC2LEAD**  
JVC  
Steering wheel control  
adaptor Patch lead




**CTJVC3LEAD**  
JVC KWAVX Series  
Steering wheel control  
adaptor Patch lead



**CTKENWOODLEAD2**  
Steering Control Patch Lead  
Kenwood single control wire




**CTNAKAMICHILEAD**  
Steering Control Patch Lead  
Nakamichi

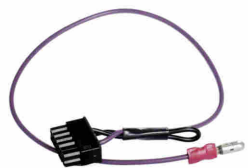

**CTPHILIPSLEAD**  
Philips  
Steering wheel control Patch lead




**CTSONYLEAD**  
Sony  
Steering wheel control Patch lead

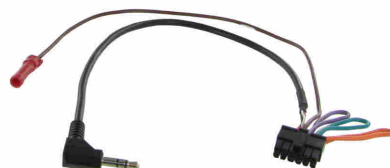

**CTMULTILEAD**  
Universal  
Steering wheel control Patch lead

## UNIVERSAL STEERING WHEEL CONTROL ADAPTORS

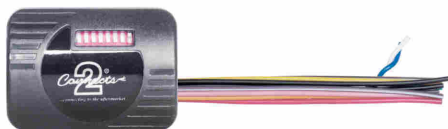

**UNI-SWC.2**  
Universal Steering Wheel Control Adaptor  
CAN-Bus and Resistive  
-Use CT patch lead for head unit connection



**UNI-JACK.2**  
Universal Steering Wheel Control Adaptor  
Resistive only  
-Use CT patch lead for head unit connection



**SWI-RC**  
Programmable  
Steering wheel control adaptor



**S3-1**  
CAN-Bus and  
Steering remote adaptor



**S3CR02**  
Select Chrysler 05 on  
plug for S3-1



**S3CR04**  
Select Chrysler 07 on  
plug for S3-1



**S3GMCL2**  
GM Patch Lead for S3-1



**S3GMLAN**  
Select GM LAN 06 on  
plug for S3-1



# ED'S AUTO SERVICES

## UNIVERSAL IPOD / MP3 ADAPTORS AND LEADS



**ALR031R**  
Retractable 3.5 Jack  
to 3.5 Jack Lead  
75cm



**ALR035R**  
Retractable  
3.5 jack to RCA  
75cm



**ALR231**  
Flush mount 3.5mm Jack Fem  
to 3.5mm Plug



**ALR231USB**  
Flush mount  
3.5mm Jack Fem  
& USB to  
3.5mm & USB Plug



**ALR232**  
Flush mount  
3.5 jack - USB lead



**ALR233**  
USB Flush or under mount  
to USB lead



**ALR234**  
USB Flush or under mount  
to bare wires



**ALR235USB**  
Flush mount  
3.5 jack - RCA  
& USB - USB



**ALR236**  
3.5 jack Flush or under mount  
to RCA lead




**PC7-200**  
RCA to 3.5mm Jack  
Head Unit Adaptor  
1.4 metre cable



**PC7-235**  
3.5mm Jack to 3.5mm Jack  
1.5 metre cable



**AM35**  
3.5mm Marine Housing  
to RCA / 3.5mm jack

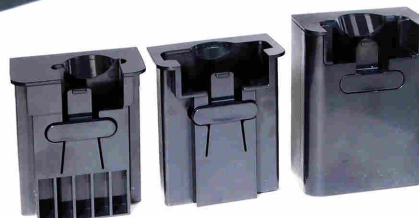

**iPOD-DOCK**  
iPod Docking Station with Adaptor Housings  
for iPod, iPod Nano Gen 2 & 3,  
iPod iTouch, iPhone.  
-For use when iPod is  
being controlled through  
the Head Unit.  
-Vertical or Horizontal Mount.  
-Automotive/ Caravan/ Marine  
applications.  
-Connects to 30 pin iPod  
dock connector (Cable  
not included.)

# ED'S AUTO SERVICES

## VEHICLE SPECIFIC IPOD / MP3 ADAPTORS

### AWH8000

Ford BA/ BF/ Territory  
to RCA (1.5M) +RCA-Jack (75cm)



### AWH8002

Ford BA/ BF/ Territory  
to iPod



### No 859RCA

RCA to Suzuki  
Aux input lead



### No 857 (was AVC9)

Subaru Legacy 2003 on  
Aux input lead  
For stereos with AUX button  
only



### CT29MZ01

Mazda Aux in Adaptor  
For head units with Aux facility



### CT29MZ05

Mazda 2006 on  
2, 3, 5, 6, MX-5, RX-8  
iPhone 5 5S 6 6+ Adaptor  
For Head units with Media button



### CTVHOX001

Honda Accord, Civic, Fit/Jazz,  
S2000 2001 on  
Alpine OEM Non-Nav  
14 Pin CD Changer plug  
3.5mm Aux in Adaptor



### CTVSZX001

Suzuki Grand Vitara, Swift  
2005 on  
Panasonic OEM  
3.5mm Aux in Adaptor



### CTVTYX002

Toyota 3.5mm Aux in Adaptor  
Avensis, Corolla, RAV4, Yaris 2004 - 2015



### CTVVGX004

VW 3.5mm Aux in Adaptor  
VW EOS, Jetta 2006 - 2015  
VW Golf 2004 - 2013  
Passat 2004 - 2015  
Scirocco 2008 - 2015  
Sharan 2009 - 2015  
Tiguan 2007 - 2015



### PC7-BMW-01

BMW Aux input Adaptor



### PC7-100

Sony Unilink control  
Head Unit Adaptor  
MP3 and iPod Compatible  
Enables RCA inputs on head unit  
to be used.



### PC7-101

Pioneer to RCA fem.  
Head Unit Adaptor  
MP3 and iPod compatible



### PC7-102

Alpine Ai-Net / JVC  
to RCA  
Head Unit Adaptor  
MP3 & iPod compatible



### PC7-103

Alpine Mini Bus  
Head Unit Adaptor  
MP3 & iPod compatible




### PC7-104

Kenwood to RCA fem.  
Head Unit Adaptor  
MP3 and iPod compatible




### PC7-108

Blaupunkt 10 pin ISO  
Aux to RCA Fem  
Head Unit adaptor  
MP3 and iPod compatible

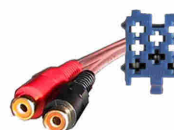


### PC7-108A

Blaupunkt MINI ISO AUX  
to RCA Fem  
Head Unit Adaptor  
MP3 and iPod compatible

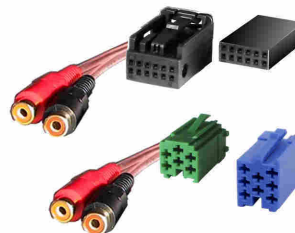

### PC7-215

Aux in  
Universal Quadlock to RCA Kit

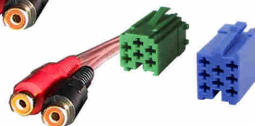

### PC7-216

Aux in  
Universal Mini ISO to RCA Kit



### PC7-225

Mercedes Command2  
without TV tun Aux



### PC7-226

Audi RNS2 & MFS3  
Without TV Tun Aux



### PC7-229

Saab/ Chevrolet 07  
to RCA




### PC7-232

Alpine high speed  
to RCA

## VIDEO SPLITTER VS-1380

Single source  
to  
4 Outputs  
Amplified  
Video  
Splitter  
With  
Seperate Signal  
Adjustments.

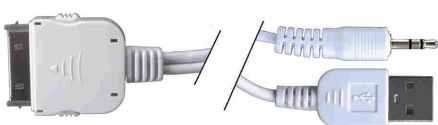

## PC7-HU

iPod to USB and JACK 3.5mm  
Allows playback via Jack plug,  
and charge and play with  
Aux in/USB head units.



## IPUSB

iPod to USB 2.0  
4 foot cable



## PC26-015

iPod 12V to 5V  
Converter Cable



## PC26-025

iPod to Alpine Ai-Net  
Connection Cable



## PC26-026

iPod to Pioneer  
Control Cable



## CTAMZBT001

Mazda Bluetooth Interface  
3, 5, 6, MX5, RX8 2006 - 2009

## IPOD ADAPTORS Charge & Play



## AIL501

iPod Charge and play lead  
Converts 12V Power to 5V for charging  
iPod controlled from iPod directly  
1.2 metre cable



## AIL502

iPod Charge and play lead  
Converts 12V Power to 5V for charging  
iPod controlled from iPod directly  
1.2 metre cable



## AIL503

iPod Charge and play AVC lead  
Converts 12V Power to 5V for charging  
iPod controlled from iPod directly  
1.2 metre cable



## I2R

iPhone 5 to USB  
Charge and Sync  
Retractable Cable



## IWAHKB Black

## IWAHWH White

passPORT Home Dock Adaptor  
Authorises docking stations to charge  
iPhone (3G), iPod touch (Gen2),  
iPod nano (Gen4)



## ACA125


iPod/iPhone  
Charging adaptor  
12V to 5V  
Allows 12V iPod  
Accessories to charge  
newer 5 volt iPod/iPhones

## BLUETOOTH




# ED'S AUTO SERVICES

## ACCESSORY INTERFACE LEADS

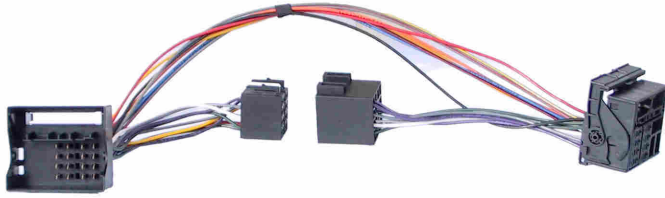

Vehicle to ISO to Vehicle  
Adaptor Leads  
For kits and devices that come with ISO plugs  
to go inline between the OEM stereo and vehicle.

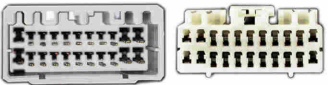

**SOT-046** Chrysler 300C, Voyager  
Original Boston 04 - 07



**SOT-049** Hyundai 1999 on




**SOT-053**  
Holden/ Opel to 2000



**SOT-060** Round Pin BMW, Land Rover



**SOT-061** Ford up to 2001

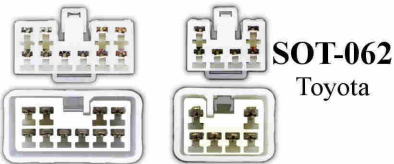

**SOT-062**  
Toyota



**SOT-064** Honda 1986 on




**SOT-067** Mazda 1990 on




**SOT-068** Chrysler Jeep pre 2000



**SOT-069** Subaru 1993 on

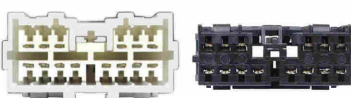


**SOT-070**  
Mitsubishi  
1995 on

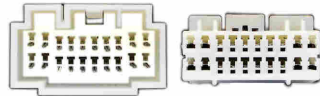

**SOT-071** Fiat Sedici, Suzuki  
Honda Non-amped 99 on




**SOT-072** Daewoo, Ssangyong

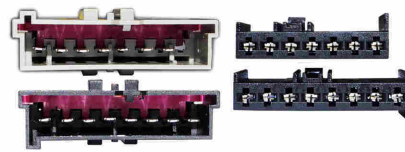

**SOT-074** Ford up to 2001



**SOT-075** Nissan 2002 on 16 pin

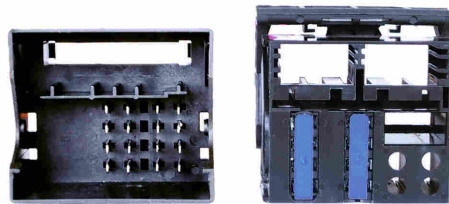

**SOT-076** Flat Pin BMW, Lambo,  
Land Rover, Range Rover, Smart



**SOT-077** Ford Ranger 2007 on  
Mazda 2001 on




**SOT-078** Holden Barina /Opel 2000 on



**SOT-082** Jaguar



**SOT-085** Ford

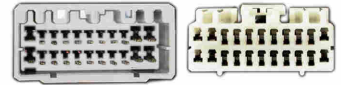


**SOT-086** Chrysler, Jeep 2000 on




**SOT-092** Ford Mondeo 2003 on



**SOT-093** Rodeo/ Isuzu

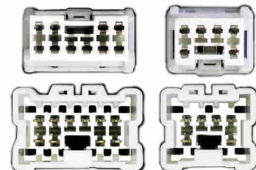

**SOT-096**  
Nissan 1995 on

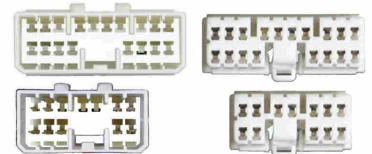

**SOT-098** Jaguar Alpine Audio




**SOT-099** Audi MMI Non-Bose



**SOT-117** Nissan VDA




**SOT-122** VE Commodore

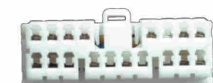

**SOT-126**  
Jaguar

# ED'S AUTO SERVICES

## ACCESSORY INTERFACE LEADS

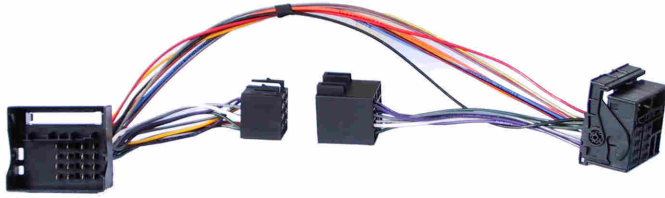

Accessory Interface Leads allow aftermarket products that are supplied with standard ISO blocks to be installed into vehicles with different connectors. Male to female conversions are ideal for satellite navigation units, hands free kits, amplifiers, tracking systems, Bluetooth devices, etc.




**SOT-901** Hyundai/ Kea 01 on,  
non-amped




**SOT-921** Porsche 2005 on  
Late PCM2 & PCM2.1 Systems



**SOT-908** Honda, Mistubishi 2006 on  
Citroën C-Crosser, Peugeot 4007 2007 on  
Non-amplified

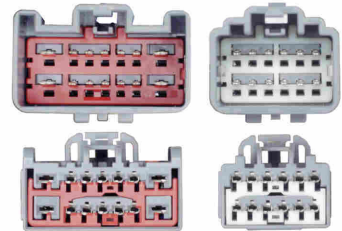

**SOT-934**  
Volvo  
Non-amped

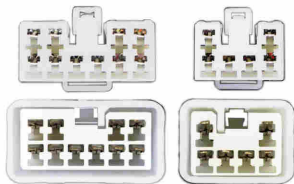

**SOT-910**  
Lexus  
IS/RX Series  
2005 on




**SOT-924**  
Chevrolet, Saab,  
Holden Epica



**SOT-936** Porsche pre 2005  
PCM1 & early PCM2



**SOT-912** Mercedes Gateway &  
Harmon Kardon Command

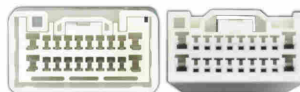

**SOT-929** Mitsubishi Outlander



**SOT-938** Ford Fiesta 2009  
Non Bluetooth



**SOT-913** Lexus 2005 on



**SOT-914** Toyota Landcruiser  
Touchscreen non-amp 2005 -08



**SOT-930**  
Hyundai Santa Fe  
2007 on



**SOT-962** Honda Accord Jazz  
Non-amped



**SOT-916** Mazda CX7 Post Amp



**SOT-918** Nissan 2006 on (20 pin)




**SOT-963** GM

See [autoleads.co.uk](http://autoleads.co.uk)  
for more options




# ED'S AUTO SERVICES

## ACCESSORY INTERFACE LEADS

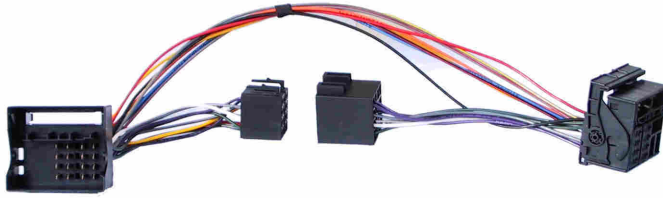

Accessory Interface Leads allow aftermarket products that are supplied with standard ISO blocks to be installed into vehicles with different connectors. Male to female conversions are ideal for satellite navigation units, hands free kits, amplifiers, tracking systems, Bluetooth devices, etc.

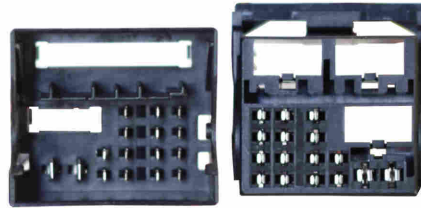

**SOT-986** Audi MIB




**CT10FD09** Ford C-Max, Fiesta, Kuga, Ranger, Transit 2010 on



**SOT-973** Honda Accord 08 on  
Insight 09 on



**SOT-1009** Honda Accord Jazz Amped

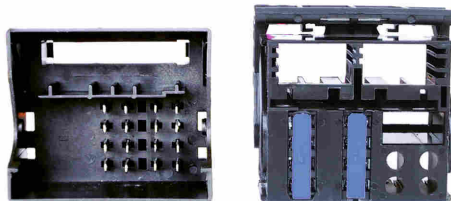

**SOT-976** VW, Mercedes, BMW 05 on



**SOT-IO2S** IO to 2 Speaker loom




**SOT-1111** Mazda Bose Amped




**SOT-IOADAP** IO adaptor for  
Amp SOT loom



**SOT-976FB**  
VW, Mercedes, BMW 05 on  
Fully populated Quadlock

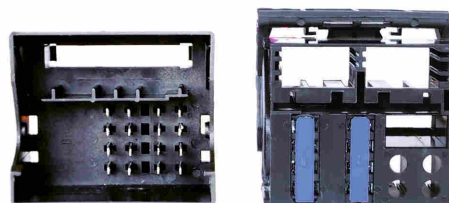

**SOT-1112** Peugeot JBL

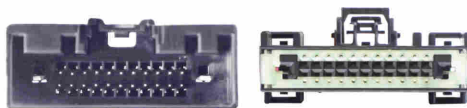


**SOT-984** Ford Fiesta Mk6 2010 on




**SOT-985** Hyundai  
with 24 & 18 pin connector




## VEHICLE SPECIFIC TELEMUTE LEADS FOR CELL PHONES

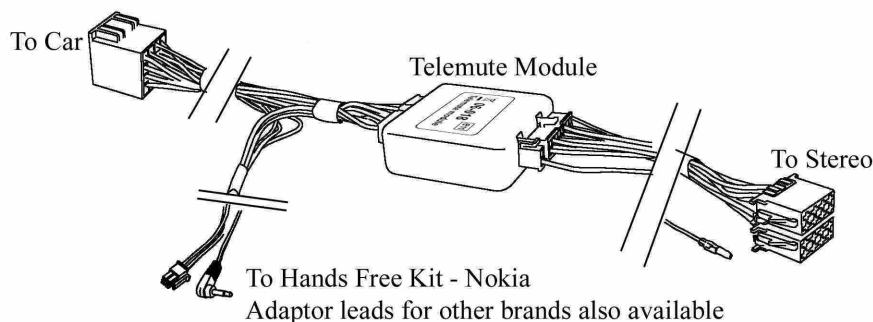

**06-050B**  
Universal ISO  
Cellular Lead

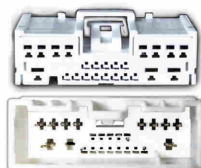

**06-077B**  
Mazda Cellular Lead  
2001 on

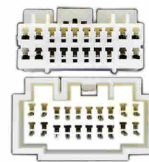


**06-087B**  
*Honda without premium  
sound installed*  
Cellular Lead  
1999 on




**06-062B**  
Toyota Cellular lead  
Non-amplified Toyota



**06-069B**  
Subaru  
Cellular Lead

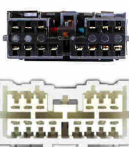

**06-070B**  
Mitsubishi  
Cellular Lead  
1995 on

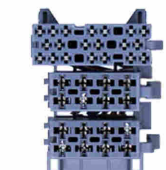


**06-078B**  
Cellular Lead  
Corsa 09/2000 on  
Astra 1998 on without  
Trafficmaster



**06-116B**  
VW 2003 on  
(Delta) RDC2 / 3 / 500  
Stereo  
Cellular Lead




**06-910B**  
Adaptor lead for Nokia  
Hands Free Kit  
Lexus IS220D, LS460,  
RX350, RX400H,  
GS450H 2005 on

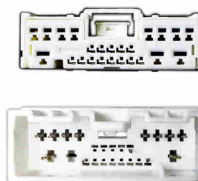


**06-923B**  
Mazda CX7  
Post Amp  
Telemute Lead



## COMMODORE CELL PHONE HOOK UP LEADS

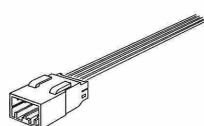

**No 576**  
Cell Phone Hook up  
VT - VX Commodore  
4 PIN

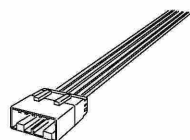

**No 577**  
Cell Phone Hook up  
VY - VZ Commodore  
6 PIN



**No 779**  
Cell Phone Hook up  
VE/WM Commodore  
2006 on  
16 PIN



**06-117B**  
Nissan Primera 2002 on  
Cellular Lead  
12 Pin



**06-128B**  
Nissan Primera  
interface lead  
2005 on



**06-121B**  
BMW/VW Tel only  
interface




**06-129B**  
Nissan 350Z  
Telemute interface 2004 on

This sheet shows units available in stock. Please ask if you require something not shown. We may have it by now or be able to get it for you. For further information, call us or go to [www.autoleads.co.uk](http://www.autoleads.co.uk)

# ED'S AUTO SERVICES

## Leads to plug into car stereo

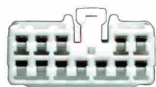


**No 712**  
Suzuki 1995 on  
12 PIN



**No 728**  
VT Commodore  
1997 on  
18 PIN



**No 729**  
VR - VS  
Commodore  
14 PIN

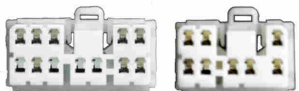

**No 731**  
Mazda 1990 on  
12 PIN & 8 PIN



**No 732**  
Mitsubishi  
85 - 94  
9 PIN & 5 PIN



**No 733**  
Mitsubishi 95 on  
14 PIN



**No 734**  
European  
16 PIN




**No 735**  
Nissan  
Aust & NZ spec  
10 PIN & 6 PIN



**No 737**  
Subaru 93 on  
14 PIN



**No 738**  
Honda 86 on  
16 PIN




**No 740**  
Toyota 87 on  
10 PIN & 6 PIN



**No 741**  
Subaru Pre 93  
9 PIN & 7 PIN



**No 742**  
Honda 98 on  
8 Large, 12 Small

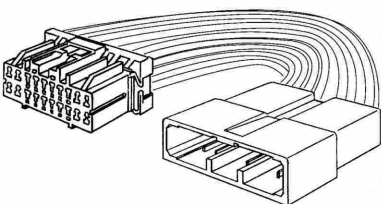

**No 742-538**  
Honda 98 on  
Stereo to  
Honda Pre 98  
Car  
20 PIN to 16 PIN




**No 745**  
Ssangyong  
Musso  
16 PIN



**No 746**  
Daewoo,  
Ssangyong Korando,  
Rexton 16 PIN



**No 748**  
Hyundai 99 on  
16 PIN

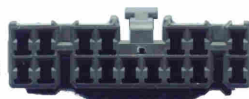

**No 749**  
Isuzu/ Rodeo  
1996 on  
16 PIN



**No 750E**  
/ PC3-211  
BMW stereo  
to ISO  
17 PIN



**No 754**  
Ford Falcon  
AU 1997 on  
4 Large, 16 Small



**No 758**  
Chrysler 84  
7 + 7 PIN



**No 759**  
Chrysler/ Jeep  
2002 on  
6 Large, 16 Small




**No 782**  
Hyundai/ Kea  
24 PIN




**CR01RB**  
Chrysler 84 on  
7 + 7 PIN



**CR02RB**  
Chrysler 02 on  
4 Large, 16 Small

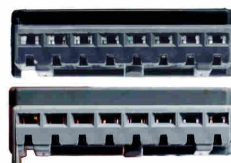

**FD02RB**  
Ford 1986 - 1989  
8 PIN + 8 PIN




**FD16RB**  
Ford USA 1998 on



**GM02RB**  
GM 86 on  
10 PIN & 10 PIN



**HA10RB**  
Honda Civic 06 on  
12 Large, 5 Small



**MA03RB**  
Mazda 2000 on  
6 Large, 16 Small



**MI04RB**  
Mitsubishi 08 on  
4 Large, 16 Small



**PC3-201-4**  
Ford pre 92 to ISO  
7 PIN pwr + 8 PIN spkr



**PC3-220**  
Ford Fiesta 02 on  
3 Large, 8 Med, 13 Small



**No 534KEN-E**  
JVC/ Kenwood  
to ISO 16 PIN



**VW03RB**  
BMW/ Volkswagen  
/ Audi  
2002 on



**L-ALP**  
Alpine  
16 PIN SQUARE



**L-ALP2**  
Alpine  
16 PIN ROUND



**L-CLA**  
Clarion



**L-JVC**  
JVC to 09



**L-JVC2**  
JVC 2009 - 2011



**L-JK**  
JVC 2011 on  
/ Kenwood



**L-PA1**  
Panasonic models  
CDQDP 101, 102, 151



**L-PA2**  
Panasonic 03 on



**L-PIO1**  
Pioneer 30mm wide



**L-PIO2**  
Pioneer  
2 Large, 14 Small



**L-PI3**  
Pioneer  
2 Large, 14 Small



**L-SNY**  
Sony  
2 Large, 14 Small



**No 534SNY1**  
Sony to ISO  
2 Large, 14 Small



# ED'S AUTO SERVICES

## AERIAL ADAPTORS

### ED-CR30 -Pair (ED-CR10+ED-CR20)

**ED-CR10** Chrysler / Dodge / Jeep  
to std Male Aerial Adaptor 2001 on  
Ford USA 2007 on

**ED-CR20** Chrysler / Dodge / Jeep  
Reverse aerial adaptor 2001 on  
Ford USA 2007 on

**ED-GM12**  
Aerial Adaptor  
GM Female  
to ISO DIN Male

**ED-GM30**  
Pair

**ED - GM10** GM USA  
Antenna female mini barbed  
or barbless to std. male

Toyota Cavalier

**ED - GM20** GM USA  
Male mini barbed to std. female

**ED-NI30**  
Pair

**ED - NI10 (EXT - 300N)**  
Nissan female to std. male  
and female diversity leads

**ED - NI20 (EXT - 330N)**  
Nissan male to std. male and  
female diversity leads

**EXT300N-1**

Nissan female to single std. male

**ED-NI31**  
Pair

**ED - NI21**  
Nissan male to single  
std. female

**ED-NI12**

Nissan 2007 on  
aerial to std. male

**ED-NI32**  
Pair

**ED-NI22**

Nissan 2007 on  
stereo to std. fem

**ED - VW12**

European male to std. male

**ED - VW23**

European female to std. female

**ED-VW30**  
Pair

**ED - VW10** Europewn  
male button to std. male

**ED - VW20** European  
female button to std. female

**ED - VW16**

European  
screw to std. female

**ED - VW17** European  
screw to std. male

Taurus

**ED - FD10** Ford USA  
Antenna female to  
std. male

**ED - FD20** Ford USA  
Radio male to std. female

**ED-HO30**  
Pair

**ED-HO10**

Honda 2005 on  
Mazda, Mitsubishi,  
Suzuki to std Male

**ED-HO20**

Honda 2005 on  
Mazda, Mitsubishi,  
Suzuki to std Fem

**LX-06** Lexus to  
Std. Aerial plug

**LX-07** Lexus to  
Std. aerial  
receptacle

**ED-PF10**

Peugeot / Fiat  
aerial to std male

**ED-SU30**  
Pair

**ED-SU10** Subaru 2005 on  
Aerial to Std. Aerial plug

**ED-SU20** Subaru 2005 on  
Aerial to Std. Aerial receptacle

**TY6** Some Toyotas 2010 on  
to Std. Aerial plug

**TY7** Some Toyota 2010 on  
to Std. Aerial receptacle

**ED-VO10**

Volvo to Std. Aerial plug

**ED-VO30**  
Pair

**ED-VO20**

Volvo to Std. Aerial receptacle

**ED-VWA2** (amplified) Audi/ VW Aerial adaptor for cars  
with aerial trigger power supply feeding into coaxial cable

**ED-VWA4** (amplified) Audi/ VW 2000 on Aerial adaptor for cars  
with aerial trigger power supply feeding into coaxial cable

**ED-VWA6**  
Pair

**ED-VWA3** BMW/Mercedes/Euro 2000 on  
Chrysler 2007 on to std Male Aerial Adaptor

**ED-VWA3R** BMW/Mercedes/Euro 2000 on  
Chrysler 2007 on to std Fem Reverse Aerial Adaptor

**ED - VWA7**

VW / Audi /

Seat / Skoda

Phantom Active Diversity Aerial Adaptor 2005 on




# ED'S AUTO SERVICES

**ED-HO30**  
-Pair



**ED-HO10/CT27AA26**  
Honda to std Male Aerial Adaptor

**ED-HO20/CT27AA50**  
Honda to std Female Aerial Adaptor



**ED-HY10**  
Hyundai/Kia to std Male Aerial Adaptor



**ED-HY20**  
Hyundai/Kia to std Fem Aerial Adaptor



**KI-06**  
Kia to Std. male Aerial adaptor




**KI-07**  
Kia to Std. fem Aerial adaptor



**ED-EXT.. Aerial Extension lead**


150mm 300mm 500mm  
1200mm 3000mm 4000mm

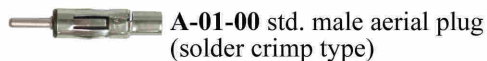

**A-01-00** std. male aerial plug  
(solder crimp type)



**PLUG** std. male aerial plug  
(screw screw type)

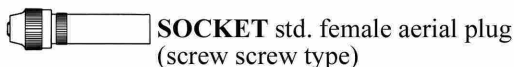


**SOCKET** std. female aerial plug  
(screw screw type)



**EDALEM**  
Aerial Male Fly Lead



**EDALEF**  
Aerial Female Fly Lead

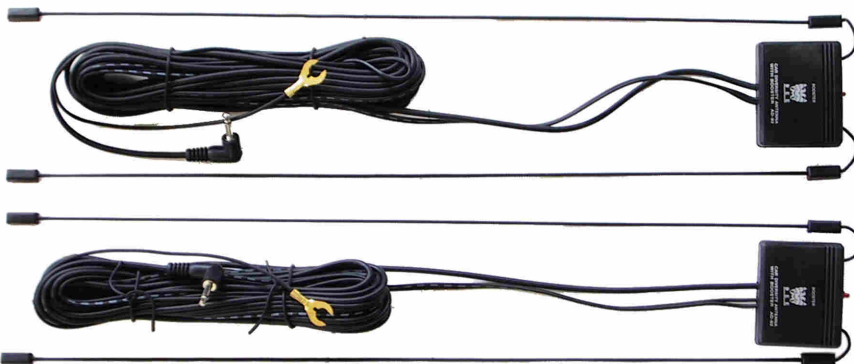

**AVTVA**  
TV Aerial

Amplified 4 Way System. Stick on 410mm Elements



**AXA102**  
Rubber Aerial



**RMA315**  
Rubber Aerial



**BOS200**  
Inline  
Aerial signal booster  
AM & FM



**PC5-60PWD**  
4.5 Metre Aerial Extension  
with Power Wire



**A2M1F**  
1 Fem to 2 Male  
Aerial split lead



**ED-PRMACY**  
Mazda Premacy  
1999 on



**AXA218**  
Shark Fin  
Amplified Aerial

# ED'S AUTO SERVICES

## ED-NXMAST

180mm  
5mm rubber shrouded  
male screw mount

## RMA887

430mm  
5mm screw mount

## FRFW

408mm  
5mm screw  
mount

## RMA881

284mm  
5mm screw  
mount

## RMA884

232mm  
5mm screw  
mount

## RMA801

110mm - 270mm  
Adjustable height  
5mm & 6mm  
screw mount

## RMA819

Electronic screen mount aerial  
340mm

## RMA885

438mm  
Citroën, Ford, Peugeot, Renault  
6mm Male / Female Thread

## RMA883

284mm  
6mm screw  
mount

## RMA855

Universal  
Cowl Mount  
Aerial

## RMA868

450mm  
Amplified  
Roof mount aerial  
11mm screw  
mounting hole  
210mm cable  
12mm underhang

## ED-ODYSSEY

Honda Odyssey  
1995 - 2001  
103mm between screws

## ED-LEX2

Lexus  
ES300,  
MCV20  
1997 - 2002

## ED-TOYA5 MAST

Toyota Supra  
05/1993 - 08/99

## ED-TOYA6 MAST

Toyota Sceptor  
1990 on



## ED-SUZCRU

Suzuki Ignis  
2000-2005  
Jimny 1998 on  
Holden Cruze  
2000-2005  
Aerial

## RMA826

Front  
Roof Mount  
Aerial  
530mm length


# ED'S AUTO SERVICES

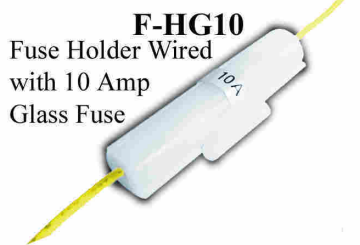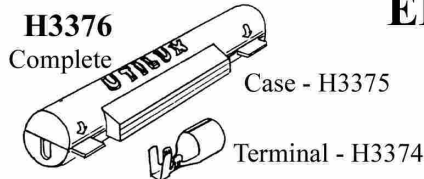


## FUSE HOLDERS




## FUSES

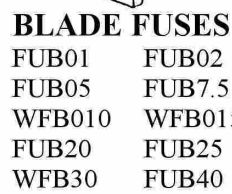

## Blade Spur Fuses

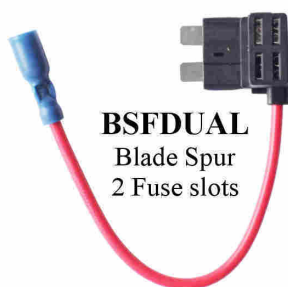

## Mini Blade Spur Fuses

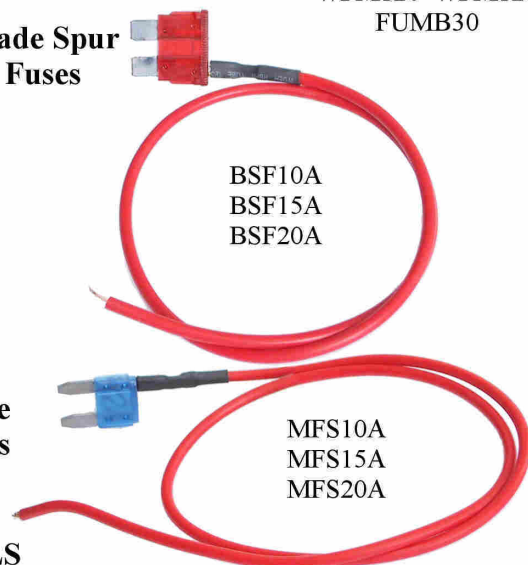


## ROLL CRIMP TERMINALS

### RING



### BULLET

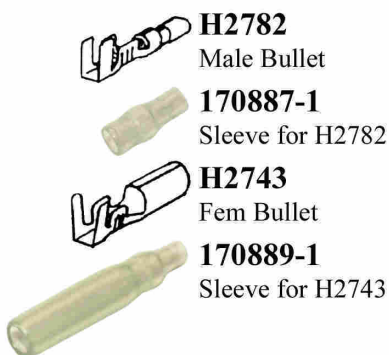


### 2.8mm



### 4.8mm




### 6.3mm

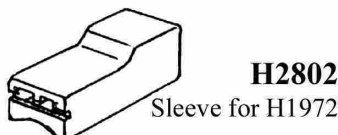



## CRIMP TERMINALS

### RED

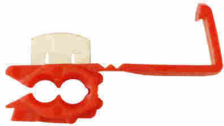

**R860**  
Red cable clamp



**R2068**  
Red link terminal



**R2277**  
Red pin terminal



**R2594**  
Red 6.3mm fem spade



**R2842**  
Red 2.8mm spade



**R2845**  
Red 6.3mm spade



**R2847**  
Red 6.3mm branched spade



**R3559**  
Red 4.8mm fem spade



**R3560**  
Red 6.3mm covered fem spade



**R3562**  
Red 4.8mm covered fem spade



**R3564**  
Red 2.8mm fem spade



**R3919**  
Red 4mm bullet



**R3922**  
Red 4mm fem bullet



**R4111**  
Red M3 3mm ring



**R4113**  
Red M4 4mm ring



**R4115**  
Red M5 5mm ring



**R4116**  
Red M6 6mm ring



**R4118**  
Red M8 8mm ring



**R4119**  
Red M10 10mm ring



**R4413**  
Red M3 3mm forked



**R4414**  
Red M4 4mm forked



**R4415**  
Red M5 5mm forked



**R4416**  
Red M6 6mm forked

### BLUE



**R861**  
Blue cable clamp



**R2069**  
Blue link terminal



**R2278**  
Blue pin terminal



**R2595**  
Blue 6.3mm fem spade



**R2597**  
Blue 8mm fem spade



**R2846**  
Blue 6.3mm spade



**R2848**  
Blue 6.3mm branched spade



**R3561**  
Blue 6.3mm covered fem spade



**R3563**  
Blue 4.8mm covered fem spade



**R3565**  
Blue 4.8mm fem spade



**R3925**  
Blue 4mm bullet



**R3926**  
Blue 4mm fem bullet



**R4123**  
Blue M4 4mm ring



**R4125**  
Blue M5 5mm ring



**R4127**  
Blue M6 6mm ring



**R4128**  
Blue M8 8mm ring



**R4129**  
Blue M10 10mm ring



**R4422**  
Blue M3 3mm forked



**R4423**  
Blue M4 4mm forked



**R4426**  
Blue M5 5mm forked



**R4427**  
Blue M6 6mm forked

### YELLOW



**R2070**  
Yellow link terminal



**R2596**  
Yellow 6.3mm fem spade



**R2598**  
Yellow 9.5mm fem spade



**R2843**  
Yellow 6.3mm spade



**R3566**  
Yellow 6.3mm covered fem spade



**R3921**  
Yellow 5mm bullet



**R3924**  
Yellow 5mm fem bullet



**R3927**  
4mm bullet



**R3928**  
Yellow 4mm fem bullet



**R4133**  
Yellow M5 5mm ring



**R4134**  
Yellow M6 6mm ring



**R4137**  
Yellow M8 8mm ring



**R4138**  
Yellow M10 10mm ring



**R4430**  
Yellow M4 4mm forked



**R4431**  
Yellow M5 5mm forked



**R4434**  
Yellow M6 6mm forked

# ED'S AUTO SERVICES

## Single core 3mm Cable

10 Amps (NZRef 150)

-  **5813-100BK**  
Black, 3mm x 100 metres
-  **5813-100RD**  
Red, 3mm x 100 metres
-  **5813-100GN**  
Green, 3mm x 100 metres
-  **5813-100YW**  
Yellow, 3mm x 100 metres
-  **5813-100BE**  
Blue, 3mm x 100 metres
-  **5813-100WE**  
White, 3mm x 100 metres
-  **5813-100BN**  
Brown, 3mm x 100 metres
-  **5813-100GY**  
Grey, 3mm x 100 metres

## 30 Metre Rolls

-  **5813-30OE**  
Orange, 3mm x 30 metres
-  **5813-30VT**  
Violet, 3mm x 30 metres
-  **5813-30PK**  
Pink, 3mm x 30 metres
-  **5813-30GY**  
Grey, 3mm x 30 metres

## Twin Wire Cables

-  **2mm Speaker Cable 2.5 Amps**  
**5822-100SP** (NZRef 151)  
Grey, Grey-white 2mmx100M
-  **3mm Speaker Cable 10 Amps**  
**5823-100F8**  
Red, Red-black 3mmx100M



**AWS2018**  
18 Gauge x 100M clear  
Tinned Marine speaker cable

-  **AWS5016**  
Green 16 Gauge x 100M speaker cable
-  **AWS6016**  
White 16 Gauge x 100M speaker cable
-  **AWS8016**  
Grey 16 Gauge x 100M speaker cable
-  **AWS9016**  
Purple 16 Gauge x 100M speaker cable



**AWP1100 Red**  
0 Gauge x 25 Metre power cable



**PC4R Red, AWP1204 Brown**  
4 Gauge x 25M power cable



**AWP1108 Red, AWP1208 Brown**  
8 Gauge x 50M power cable



**AWP1120** Red 20 Gauge x 100M loom cable



**AWP1220** Black 20 Gauge x 100M loom cable



**AWP1320** Blue 20 Gauge x 100M loom cable



**AWP1420** Yellow 20 Gauge x 100M loom cable



**AWP4101** Red 15 Gauge x 100M hookup cable



**AWP4201** Black 15 Gauge x 100M hookup cable



**AWP4301** Blue 15 Gauge x 100M hookup cable




**AWP4401** Yellow 15 Gauge x 100M hookup cable



**AWP6101** Red 11 Gauge x 100M hookup cable



**AWP6201** Black 11 Gauge x 100M hookup cable



**AWS1010 100M**  
10 Gauge speaker cable



**AWS1012 100M**  
12 Gauge speaker cable



**AWS1014 100M**  
**AWS1214 12M**  
14 Gauge speaker cable



**SC16 100M**  
**AWS1216 12M**  
16 Gauge speaker cable



**SC18 100M**  
**AWS1218 12M**  
18 Gauge speaker cable




**AWS1230** 2 x 30 strand x 100M  
speaker cable



**AWS1215** 15 Gauge 2 core x 100M  
speaker cable Round silicon outer



**AWP1112** 20 Gauge x100M figure 8 cable



**AWS4016**  
16 Gauge 4 core  
x100M  
flat speaker cable



**AWS4018**  
18 Gauge 4 core x 100M  
flat speaker cable



# ED'S AUTO SERVICES



**WLT710** 7mm x 10Metres Split Loom Conduit

**WLT750** 7mm x 50Metres Split Loom Conduit



**WLT1010** 10mm x 10Metres Split Loom Conduit


**WLT1050** 10mm x 50Metres Split Loom Conduit




**WLT1310** 13mm x 10Metres Split Loom Conduit



**WLT1610** 16mm x 10Metres Split Loom Conduit

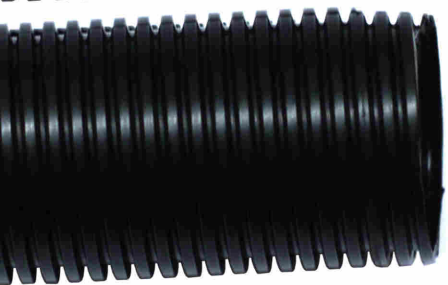

**WLT2510** 25mm x 10Metres Split Loom Conduit

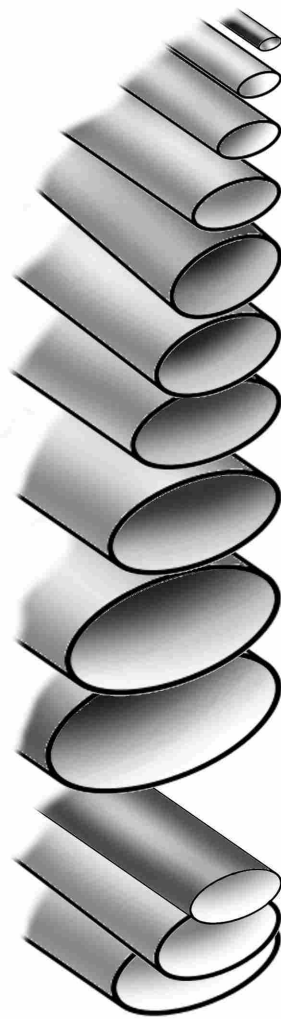

**WAH102 Red WAH202 Black** 2mm heatshrink

**WAH104 Red WAH204 Black** 4mm heatshrink

**WAH106 Red WAH206 Black** 6mm heatshrink

**WAH108 Red WAH208 Black** 8mm heatshrink

**WAH110 Red WAH210 Black** 10mm heatshrink

**WAH112 Red WAH212 Black** 12mm heatshrink

**WAH114 Red WAH214 Black** 14mm heatshrink

**WAH116 Red WAH216 Black** 16mm heatshrink

**WAH120 Red WAH220 Black** 20mm heatshrink

**WAH125 Red WAH225 Black** 25mm heatshrink

**WAH01210** Mixed 2 - 10mm heatshrink

**WAH1225** Mixed 12 - 25mm heatshrink

**WGH203** Glue lined 3mm heatshrink Black

**WGH206** Glue lined 6mm heatshrink Black

**WGH209** Glue lined 9mm heatshrink Black

**WGH212** Glue lined 12mm heatshrink Black

**WGH215** Glue lined 15mm heatshrink Black

Loom Tube

Cable feed tool

**WLT001** 7mm

**WLT002** 10 - 13mm

**WLT003** 16mm

**WLT004** 28mm





# ED'S AUTOSERVICES

## CABLE TIES

**WCT100** 100mm x 2.5mm

**HSTT100M-BK** 100mm x 2.5mm

**WCT200** 203mm x 2.5mm



**HST200L-BK** 200mm x 3.2mm



**WCT150** 150mm x 3.6mm

**WCT300** 292mm x 3.6mm

**HST300L-BK** 292mm x 3.6mm



**HST160ST-BK** 160mm x 4.8mm

**HST200ST-BK** 200mm x 4.8mm

**HST300ST-BK** 310mm x 4.8mm

**WCT390** 368mm x 4.8mm

**WCT635** 635mm x 4.8mm



**HST370HD-BK** 380mm x 7.6mm



**WCT205** 200mm x 4.2mm

Screw Mount Cable Tie



## TERMINALS



**M1189-TL**

Round 3.6mm



**M1190-T**

Round 3.6mm



**H3739**

2.8 Tabbed



**H2858**

2.8 Tabbed




**M-42**

8 way mini-ISO  
Housing  
Blue




**M-43**

6 way mini-ISO  
Housing  
Green

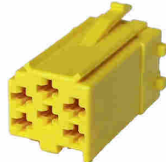

**M-44**

6 way mini-ISO  
Housing  
Yellow

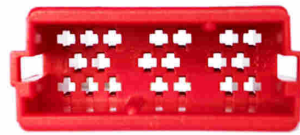

**M-46**

20 way mini-ISO  
Housing



**M-47**

mini-ISO  
Terminal



**M-48**

mini-ISO  
Terminal

## STANDARD Q.C. CONNECTOR SYSTEM 6.3mm



**7122-2825**

2 PIN



**7122-2845**

4 PIN



**7122-2865**

6 Male 6.3mm  
Spade terminal Housing




**7114-2251**

6.3mm Spade




**7123-2825**

2 PIN

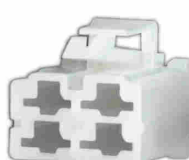

**7123-2845**

4 PIN

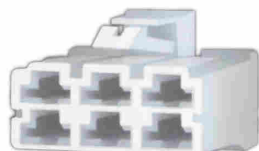

**7123-2865**

6 Female 6.3mm  
Spade terminal Housing



**7116-2641**

6.3mm Spade



**T-AHL**  
30cm Velcro tape strips  
Pack -10 pairs hook & loop



**WAH2525**  
25 Metre Velcro Hook tape

**WAL2525**  
25 Metre Velcro Loop tape

## ED'S AUTO SERVICES

**TI5669x21**  
Inseal Double Sided Tape  
21mm x 0.8mm x 10M



**TI5669x9**  
Double Sided Tape  
9mm x 0.8mm x 10M



### ADHESIVE TAPES



**INSEAL3259 6x6mm**  
Foam tape  
6mm x 6mm x 12M



**INSEAL3259 3mm**  
Foam tape  
3mm x 15mm x 25M



**INSEAL3259 1.5mm**  
Foam tape  
1.5mm x 15mm x 50M



**LOOM TAPE**  
19mm x 25M



**LOOM TAPE 25mm**  
25mm x 25M



**WT385**  
Cloth Tape



**WT386**  
Cloth Tape



**WAT302**  
Scotch 1710  
P.V.C. Electrical tape  
18mm x 20M



**T-DUCT/R**  
Duct tape roll  
48mm x 30M Black



**AAA101**  
Textured ABS Pastic Panel  
300mm x 240mm x 2mm  
(2 panels per pack)



**BS-SY6330**  
4 Guage  
High Current Quick Disconnect  
Plugs  
(2 pieces required for pair)



**BS-SY6319**  
8 Guage  
High Current Quick Disconnect  
Plugs  
(2 pieces required for pair)



**WHD102**  
Sound Damping  
with Aluminium  
Heat shielding  
6 Sheets  
30x30cm

# NUTS


## HEX



## HEX FLANGE



## WING

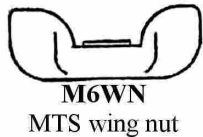

# ED'S AUTO SERVICES

# MACHINE SCREWS



## STEREO MOUNTING SCREWS




## HEXWASHER

## SELF DRILLING (TEC) SCREWS


## WOOD/CHIPBOARD SCREWS

( Available in Pozi or Square Drive )

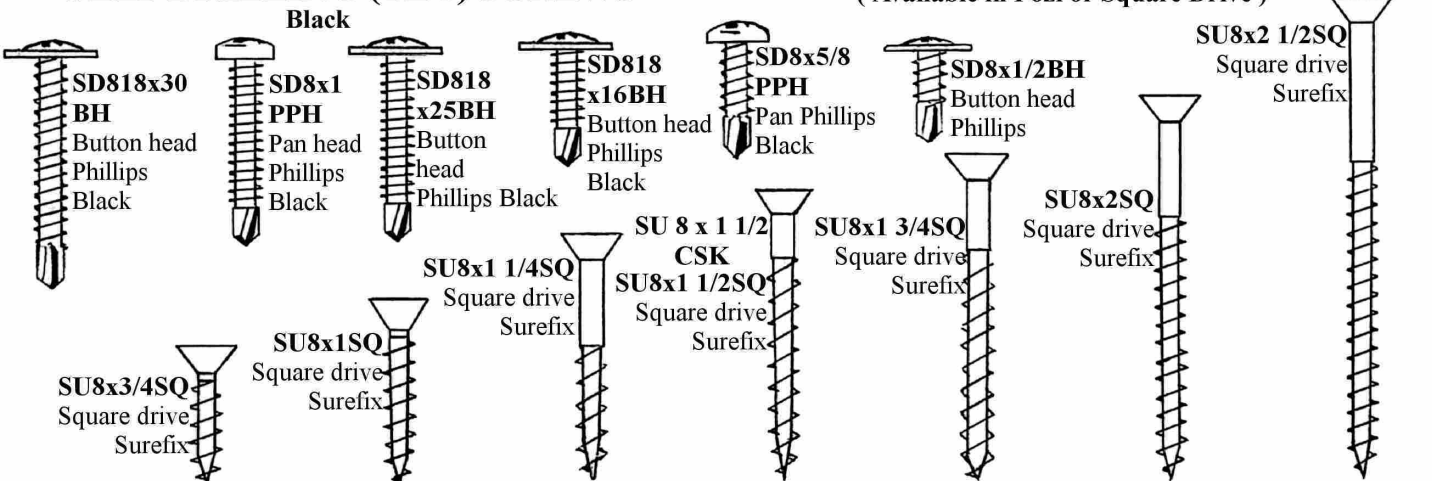

## SELF TAPPING (STP) SCREWS

Black unless noted

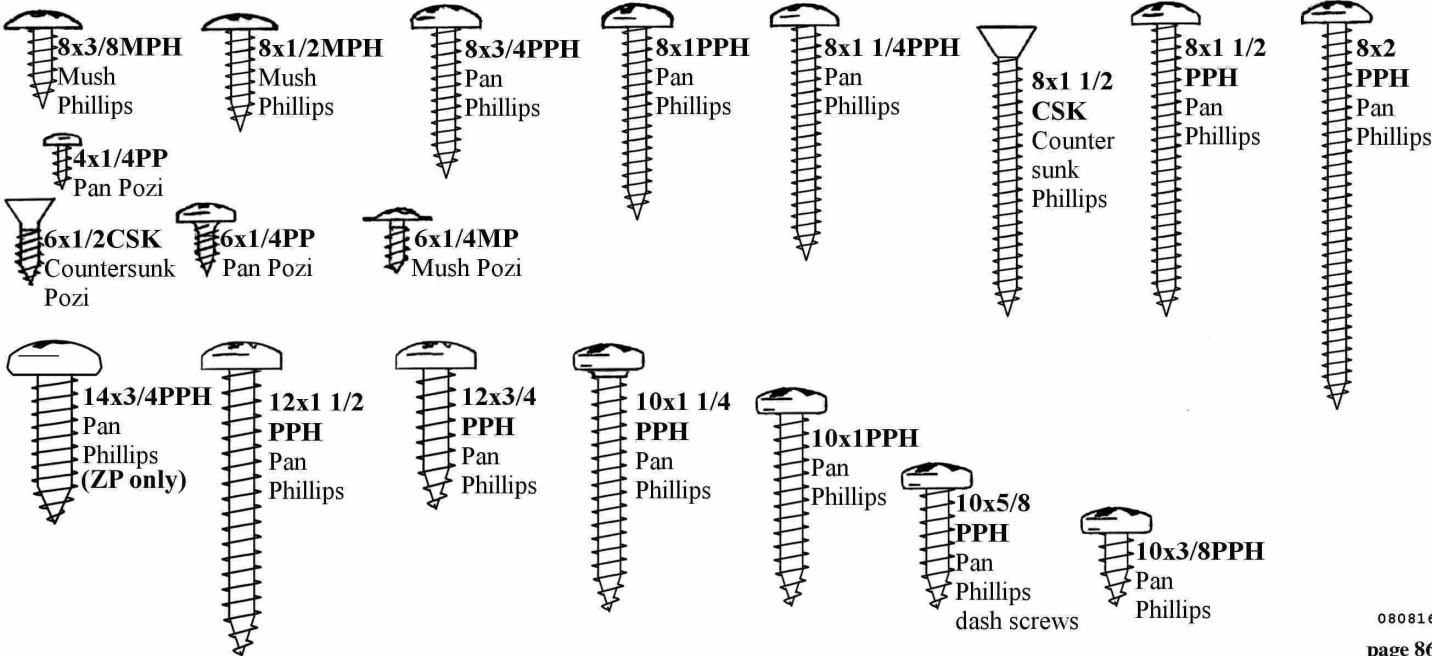



# ED'S AUTO SERVICES

## WASHERS



1/8 x 3/8FW



M4 x 11FW



M5 x 12.5FW



M6 x 12.5FW



3/8 x 3/4FW



M10 x 21FW

## LOCK WASHERS



M4ILW



M5EXLW



M6EXLW

## GROMMETS



**WRG106**

Rubber Grommet  
6.5 x 9.5 x 1.8mm



**WRG110**

Rubber Grommet  
10.5 x 13.9 x 3.4mm



**WRG115**

Rubber Grommet  
15.5 x 20.1 x 1.7mm



**S10PLA**

Plastic Spacer Washer  
10mm inside diameter  
3.9mm depth




**PC5-KEYSET** 18 piece Stereo Removal Tool Set



**DT1**  
DIN Stereo removal tool




**DT2**  
Euro DIN Stereo removal tool

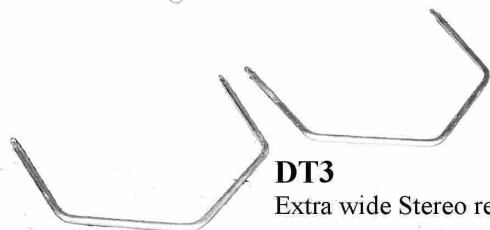

**DT3**  
Extra wide Stereo removal tool



**DT4**  
Mercedes Stereo removal tool

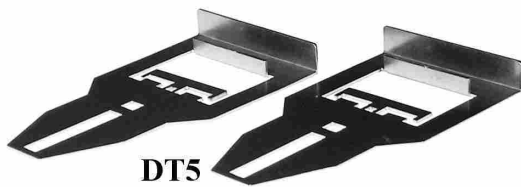

**DT5**  
Old style Clarion, Hyundai  
Stereo removal tool



**DT6**  
VAG Stereo removal tool



**ATH-WT2-PP**  
Glass surface Soft Toolkit



**ATH-SUK2-XNGL**  
Hardened Polymer  
Scraper  
Kit

## BOJO TOOLS

**ATH-1-NGL**

Pry Tool

**ATH-2-NGL**

Flat wedge

**ATH-3-NGL**

Narrow Forked Pry Bar

**ATH-4-NGL**

Wedge Puller

**ATH-5-NGL**

Wide Forked Pry Bar

**ATH-6-NGL**

Wedge

**ATH-7-NGL**

Flat forked tool

**ATH-11-CEL**

Aerospace grade scraper

**ATH-19-NGL**

Wide Pry Tool

**ATH-19-UNGL**

Hardened Wide Pry Tool

**ATH-19-R406**

Panel clip Removal Tool

**ATH-20-XNGL**

High strength

Thin Flat Pry Tool

**ATH-21-XNGL**

High strength

Thin Pry Tool

**ATH-26-NGL**

Scoop nose Pry Tool

**ATH-30-NGL**

Wire insertion Tool

**ATH-50-NGL**

Insulation mat

Application Tool

**ATH-56-NGL**

Short Pry Tool



**BG-PRY-7B**

7 piece Pry tool Kit



**BOJO-10-PRY**

10 piece Pry tool Kit



**TP-KIT-10B**

Techno Pry 10 piece Pry tool Kit



**ATH-MUK-NGL**

BOJO 10 piece trim removal set



**ATH-IW2-UNGL**

Wire installer kit

# ED'S AUTO SERVICES

## TOOLS



**RTool YY8310**  
Pre Insulated Terminal  
Crimp tool



**No 00 Tool**  
Copper lug and link  
0.5mm - 10mm



**No 61 Tool**  
Uninsulated Terminal  
Crimp tool



**No 76B Tool**  
Pre Insulated Terminal  
Crimp tool  
0.5mm - 6mm wire




**No 147A Tool**  
Uninsulated Terminal  
Crimp tool




**T-003**  
Wire Stripper



**YY8400**  
Hand Compression Tool  
For crimping terminals  
10mm up to 120mm

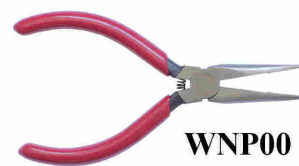

**WNP00**  
5" needle nose  
Pliers

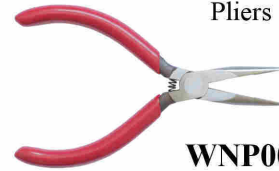

**WNP006**  
5" needle nose Pliers  
15 degree angle



**WIS001**  
Self-Adjusting  
Cutter Stripper



**WOS002**  
Offset Screwdriver  
Drill Shank



**WLP008**  
Large 8" Pliers



**WPS002** O Ring and Hook Scribe set



**WIT002** Heavy Duty Crimping tool



**WIC001** Cable Cutter



**WTL624**  
Circuit Tester



**AL-KIT-A**  
Super Rod - For drawing cables through  
narrow spaces



## iO Bluetooth Music and Handsfree Cellphone kits.

Intergrates with the car audio system, using a single control panel to make calls and stream music from any bluetooth device.

Use a vehicle specific Accesory Interface Lead to connect the iO kit



2 speaker only vehicles also need the SOTIO2S 2 speaker adaptor plug



### iOPLAY2

180W Bluetooth, 3.5mm jack, 30 pin iPod music and handsfree with full iPhone control  
CVC echo cancellation, Cambridge Sound Research amp  
Full iPod & iPhone control, charge, display & search - Direct iPhone/iPod plug & Bluetooth  
Audio-sensing  
Advanced handsfree functionality for ease of use and driver safety  
connect 2 devices at the same time with full functionality  
Auto connect 5 devices in memory  
Text to speech  
SMS text message compatible  
Automatic phonebook synchronization  
Set up for steering wheel control inputs  
Parking aid compatible  
Advanced tech for portable sat nav voice instructions



### iOTALK2

80W Bluetooth music and handsfree with full iPhone control  
CVC echo cancellation, Cambridge Sound Research amp  
Full iPod & iPhone control, display & search - Bluetooth only  
Advanced handsfree functionality for ease of use and driver safety  
connect 2 devices at the same time with full functionality  
Auto connect 5 devices in memory  
Text to speech  
SMS text message compatible  
Automatic phonebook synchronization  
Set up for steering wheel control inputs  
Parking aid compatible  
Advanced tech for portable sat nav voice instructions



### iO-VISOR

Visor Hands-Free Bluetooth Car Kit  
No installation



### iO Play

Geared towards high quality music streaming while providing full handsfree cellphone functionality.

Allows you to make calls while simultaneously streaming music from any bluetooth device such as an iPod.

Has its own 60 watt amplifier, delivering sound to both front and rear speakers, and circumventing the need for an AUX in on the existing stereo.



### iO-BTAPOD

iPod / iPhone Bluetooth Adaptor



### iO-BTAPODC

Includes iO-BTAPOD iPod / iPhone Bluetooth Adaptor and iPod / iPhone cigarette socket charger

Uses HFP and A2DP profiles

See [www.my-io.com](http://www.my-io.com) for further details

MAGNETIC PHONE MOUNT



**MAGFMI**  
Magnetic Flush Mount  
for flat surfaces



**MAGDMI**  
Magnetic Dash Mount




**MAGWDMI**  
Magnetic Window Mount

MAGNETIC PAD MOUNT



**MAGICMOUNT™ XL**  
Magnetic Mount for Tablets

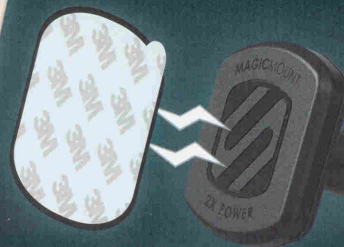

**2X POWER**  
for Tablets

**MAGTHD2**  
Magnetic Dash/Window  
Phone/Tablet Mount



**MAGICMOUNT™ XL DASH/WINDOW**  
Magnetic Window Mount



**MAGTHM2**  
Rear Seat  
Tablet Mount

