



No 501
Nissan Speaker Hook up
2 PIN White plug



No 502
Speaker Hook up
2 PIN



No 503
Nissan Speaker Hook up
2 PIN



No 504
Audi / VW Speaker Hook up
2 PIN




No 505
Honda (pair) Speaker Hook up
2 PIN + 2 PIN



No 512E
Suzuki 1995 on, to ISO
12 PIN



No 527E
Toyota Pre 1987, to ISO
5 PIN + 9 PIN



No 528E
Holden Commodore
VT 1997 on, to ISO
18 PIN



No 529E
Holden Commodore
VR - VS 1993 - 1998 to ISO
14 PIN



No 530E
Holden Commodore VN - VP 1988 - 1993
Isuzu 1987 - 1995 to ISO
13 PIN



No 531
Mazda, Ford Ex Japan to ISO
Falcon EF - EL 1995 - 98
8 PIN + 12 PIN



No 532
Mitsubishi 1985 - 1994
Ex - Japan
5 PIN + 9 PIN



No 533E
Mitsubishi 1995 on, to ISO
14 PIN



No 534
European
16 PIN



No 535
Nissan
10 PIN + 6 PIN




No 536
Nissan 1995 on
Ex - Japan
10 PIN + 6 PIN




No 537
Subaru 1993 on
14 PIN



No 538E
Honda 1986 on
16 PIN



No 539E
Ford Mondeo /
Escort / Transit to ISO
8 PIN + 8 PIN

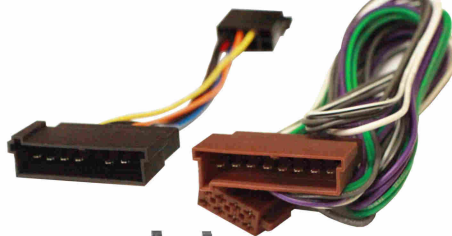

No 539EABP
Ford
With Amp Bypass
8 PIN + 8 PIN




No 540E
Toyota 1987 on, to ISO
10 PIN + 6 PIN



No 541
Subaru pre 1993
9 PIN + 7 PIN




No 542
Honda 1998 on
Suzuki 2001 on
20 PIN (8 Large, 12 Small)




No 543E
Hyundai 1992 - 99 to ISO
14 PIN



No 544
Mazda / Ford Japan
1986 - 89
4 + 4 + 3 + 1 PIN



No 545
Ssangyong Musso
18 PIN



No 546E
Ssangyong Korando, Rexton
Daewoo
18 PIN



No 547
Nissan 2001 on
16 PIN




No 548
Hyundai 1999 on
Kia
16 PIN




No 549E
Isuzu / Rodeo
1996 on, to ISO
16 PIN



No 550E
BMW
3 / 5 Series to ISO
17 PIN



No 552E
Hyundai/Kia 2010 on
18 PIN (8 large 10 small) & 20 PIN
(4 large 20 small)



No 554E
Ford Falcon
1997 on, to ISO
20 PIN (4 Large, 4 Med, 12 Small)



No 555E
Ford Galaxy / VW Sharon
to ISO
14 PIN + 8 PIN




No 556E
Ford Mondeo 2003 on
to ISO
16 PIN (DO NOT USE WITH VW
OR BMW - WIRING DIFFERENT)

ED'S AUTO SERVICES

LEADS TO MATCH ORIGINAL CAR WIRING HARNESSSES



No 557E
Mazda
2000 on to ISO
24 PIN (3 Large, 8 Med, 13 Small)

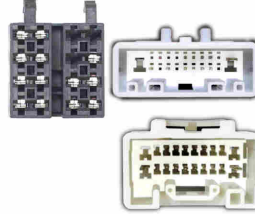

No 573E
Nissan 06 >, Subaru 03 >
to ISO
20 PIN (2 Large, 18 Small)




No 558E
Chrysler 1984 on to ISO
7 + 7 PIN



No 559E
Chrysler / Jeep 2002 > to ISO
22 PIN (6 Large, 6 Small)




No 560E
BMW 3/ 5 Series
2000 on to ISO
16 PIN (DO NOT USE
ON MONDEO,
WIRING DIFFERENT)

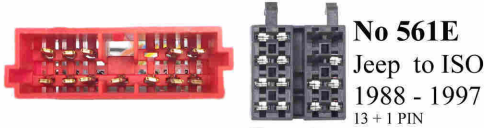

No 561E
Jeep to ISO
1988 - 1997
13 + 1 PIN



No 562E
KIA to ISO
20 PIN (4 Large, 16 Small)

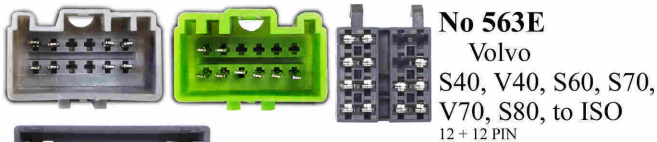

No 563E
Volvo
S40, V40, S60, S70,
V70, S80, to ISO
12 + 12 PIN




No 564E
Citroën/ Peugeot
2005 > to ISO
16 PIN



No 565E
Jaguar to ISO
XJ6, XJ8, XK8, up to 7/2002
20 PIN



No 566E
Jaguar
up to 9/1994 to ISO
14 PIN

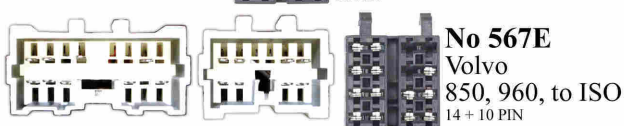


No 567E
Volvo
850, 960, to ISO
14 + 10 PIN



No 568
Falcon EA, EB, ED 1988-94
13 PIN



No 569E
GM (USA) & Toyota Cavalier
up to 2002 to ISO
21 PIN




No 570E
Ford USA 2002 on to ISO
24 PIN (3 Large, 8 Med, 13 Small)



No 571E
Jaguar S-Type, XJR, XJ8,
X-Type to ISO
20 PIN (4 Large, 16 Small)




No 572E
Honda 2005 on
17 PIN (12 Large, 5 Small)

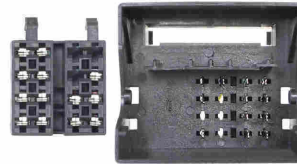

No 580E
Mercedes Audio 10
2004 > to ISO



No 581E
Astra 2004 > to ISO

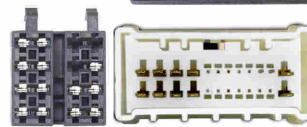


No 582E
Hyundai/ Kea to ISO
24 PIN (10 Large, 14 Small)



No 585E
Captiva 2005 > to ISO
16 + 14 PIN (16 Small, 2 Large, 12 Small)



No 586E
Volvo 6 Speaker
740 88>90, 760 91>93, 850 92>93
940 90>94, 960 90>93
14 PIN + 14 PIN



No 587E
Honda 24 Pin to ISO
24 PIN (4 Large, 20 Small)



No 588E
Ford Fiesta 2010 >
Focus, Ranger 2012 > to ISO
24 PIN (2 Large, 22 Small)



CR04B
Some Chrysler/ Jeep 2007 >
to ISO
22 PIN (2 Large, 20 Small)




FD16B
Ford 1998 >
to ISO
16 PIN



HA09B
Honda Split loom 2003 >
Add aftermarket unit and keep
OEM unit for dash controls



GM03B
General Motors 1994 >
to ISO
32 PIN

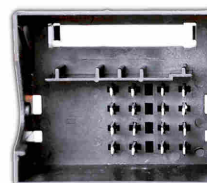

VW03B
VW 2002 >
to ISO
16 PIN



PC3-09
10 Male-pin housing to RCA kit




PC9-401
Audi Rear Amplified adaptor
Audi A3, A4, A6, A8




PC9-404
Audi Rear Amplified adaptor
RCA output (suits 4V)
Audi A3, A4, A6, A8, TT



PC9-405
BMW
4 Channel
Amplified to RCA

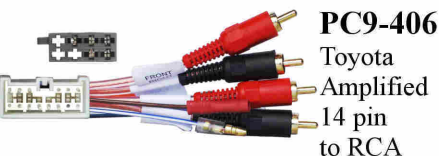

PC9-406
Toyota
Amplified
14 pin
to RCA




PC9-407
Chrysler Amplified
Jeep Grand Cherokee
Voyager LE & Grand



FDK1B
Ford USA
Low level Hook up
1989 - 1994
8 + 8 PIN



FDK2B
Ford USA
High level Hook up
8 + 14 + 11 + 8 PIN

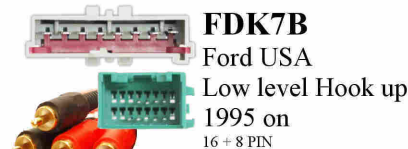

FDK7B
Ford USA
Low level Hook up
1995 on
16 + 8 PIN



FDK8B
Ford USA
High level Hook up
1995 on
16 + 14 + 8 + 8 PIN



SLC-4
4 Channel Speaker
to Line Level Converter 80
watts per channel Adjustable

ED'S AUTO SERVICES Active System Adaptors & Amp Bypass Adaptors



PC9-408
Audi / Porsche
Fully Amplified
Speaker level to Line level



PC9-410
Audi / Porsche Fully Amplified RCA out




PC9-411
Toyota
Amplified
15 pin to RCA



PC9-414
Volvo Amplified
6 pin DIN to RCA



PC9-415
Saab 05>

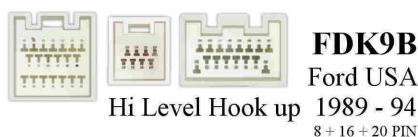

FDK9B
Ford USA
Hi Level Hook up 1989 - 94
8 + 16 + 20 PIN



FDK10B
Ford USA
Hi Level Hook up
1988 - 97
16 + 8 + 8 PIN



FDK11B
Ford USA
Select
2003 on
24 + 8 PIN



FDK13B
Ford USA
Select
2000 on
16 + 8 PIN


SPEAKER LEVEL CONVERTERS



LOC-80
2 Channel Speaker
Level Converter
80 watts per channel
Adjustable



PC9-460
Low Level Booster
1v to 4v Line Driver
Individually Adjustable Gain




PC9-416
Audi 2005 on
Front and Rear
Amplified



PC9-417
Audi 2005 on
Rear Amplified



PC9-422
Toyota 20 pin
to RCA & ISO

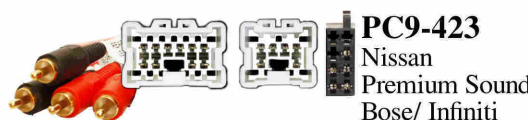

PC9-423
Nissan
Premium Sound
Bose/ Infiniti



PC9-514
BMW Harman Kardon Amplified Systems



PC9-520
Mazda 2001 on
Bose adaptor
to ISO



No 539EABP
Ford with
Amp bypass
8 + 8 PIN



TA03HB
Toyota
Amplified 2000 on
20 PIN: (4 Large, 16 Small)



TA07SR
Toyota/Lexus
OEM JBL Amped 2004 on
20 PIN: 2 Large, 18 Small



No 861E
Toyota Lexus
Amp bypass Harness to ISO



H2L
Active
speaker to
line level converter
with time sequence
control to reduce
turn on pop

ED'S AUTO SERVICES


Active System Adaptors & Amp Bypass Adaptors



CT20NS07

Amplified hook up lead

Nissan Armada, Pathfinder, Qashqai, Rogue, Sentra, X-Trail 2007 on
Juke 2010

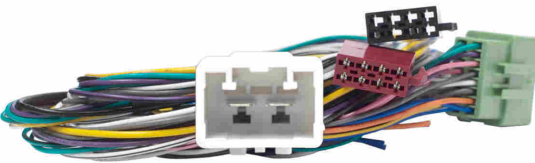

CT51-LR01

Land Rover Amp Bypass Lead

Harman Kardon, NOT Logic 7

Land Rover Discovery 2004 - 2009

Range Rover Sport 2005 - 2013



CT51-TY01


Toyota 15 pin Active System Adaptor

MR2 1994-2005


Celica 1994-2006

ED'S AUTO SERVICES

ACCESSORY INTERFACE LEADS

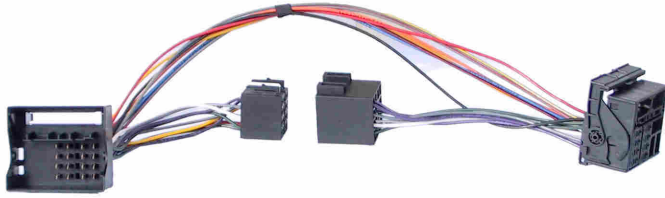

Vehicle to ISO to Vehicle
Adaptor Leads
For kits and devices that come with ISO plugs
to go inline between the OEM stereo and vehicle.



SOT-046 Chrysler 300C, Voyager
Original Boston 04 - 07



SOT-049 Hyundai 1999 on




SOT-053
Holden/ Opel to 2000



SOT-060 Round Pin BMW, Land Rover



SOT-061 Ford up to 2001

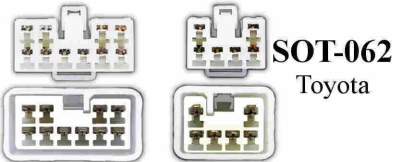

SOT-062
Toyota



SOT-064 Honda 1986 on




SOT-067 Mazda 1990 on




SOT-068 Chrysler Jeep pre 2000



SOT-069 Subaru 1993 on

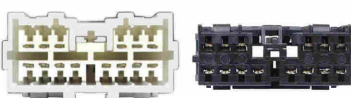


SOT-070
Mitsubishi
1995 on

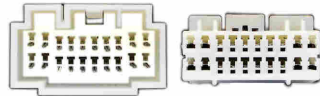

SOT-071 Fiat Sedici, Suzuki
Honda Non-amped 99 on




SOT-072 Daewoo, Ssangyong

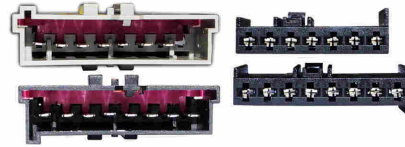

SOT-074 Ford up to 2001



SOT-075 Nissan 2002 on 16 pin

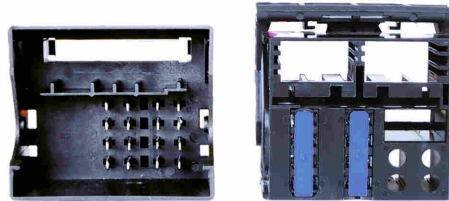

SOT-076 Flat Pin BMW, Lambo,
Land Rover, Range Rover, Smart



SOT-077 Ford Ranger 2007 on
Mazda 2001 on




SOT-078 Holden Barina /Opel 2000 on



SOT-082 Jaguar



SOT-085 Ford

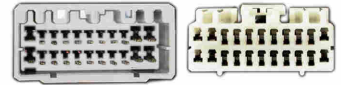


SOT-086 Chrysler, Jeep 2000 on




SOT-092 Ford Mondeo 2003 on



SOT-093 Rodeo/ Isuzu

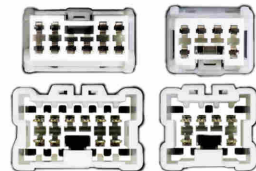

SOT-096
Nissan 1995 on

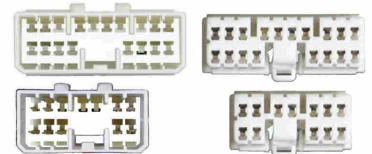

SOT-098 Jaguar Alpine Audio




SOT-099 Audi MMI Non-Bose



SOT-117 Nissan VDA




SOT-122 VE Commodore

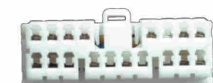

SOT-126
Jaguar

ED'S AUTO SERVICES

ACCESSORY INTERFACE LEADS

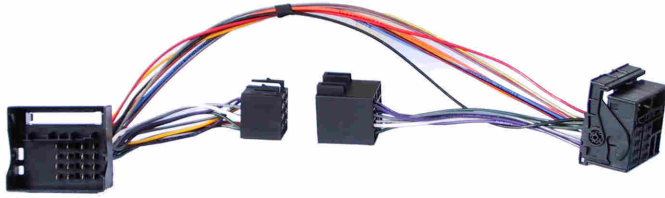

Accessory Interface Leads allow aftermarket products that are supplied with standard ISO blocks to be installed into vehicles with different connectors. Male to female conversions are ideal for satellite navigation units, hands free kits, amplifiers, tracking systems, Bluetooth devices, etc.




SOT-901 Hyundai/ Kea 01 on,
non-amped




SOT-921 Porsche 2005 on
Late PCM2 & PCM2.1 Systems



SOT-908 Honda, Mistubishi 2006 on
Citroën C-Crosser, Peugeot 4007 2007 on
Non-amplified

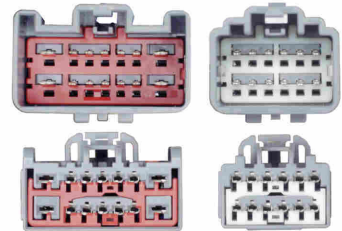

SOT-934
Volvo
Non-amped

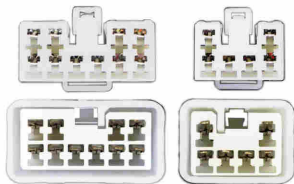

SOT-910
Lexus
IS/RX Series
2005 on




SOT-924
Chevrolet, Saab,
Holden Epica




SOT-936 Porsche pre 2005
PCM1 & early PCM2



SOT-912 Mercedes Gateway &
Harmon Kardon Command

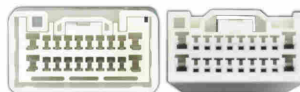

SOT-929 Mitsubishi Outlander



SOT-938 Ford Fiesta 2009
Non Bluetooth



SOT-913 Lexus 2005 on



SOT-914 Toyota Landcruiser
Touchscreen non-amp 2005 -08



SOT-930
Hyundai Santa Fe
2007 on




SOT-962 Honda Accord Jazz
Non-amped



SOT-916 Mazda CX7 Post Amp



SOT-918 Nissan 2006 on (20 pin)

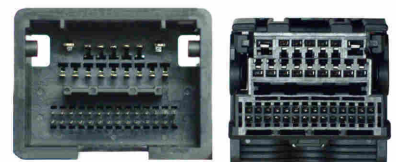


SOT-963 GM


See autoleads.co.uk
for more options

ED'S AUTO SERVICES

ACCESSORY INTERFACE LEADS

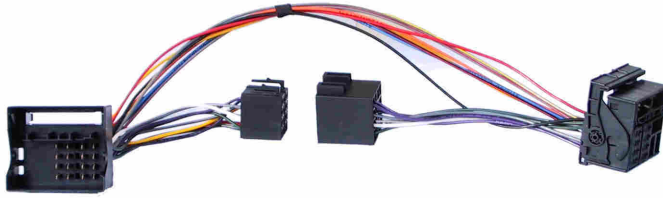

Accessory Interface Leads allow aftermarket products that are supplied with standard ISO blocks to be installed into vehicles with different connectors. Male to female conversions are ideal for satellite navigation units, hands free kits, amplifiers, tracking systems, Bluetooth devices, etc.

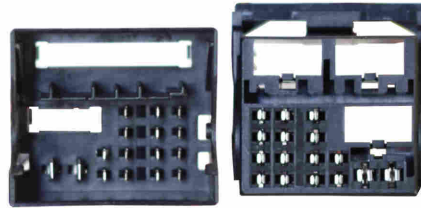

SOT-986 Audi MIB




CT10FD09 Ford C-Max, Fiesta, Kuga, Ranger, Transit 2010 on



SOT-973 Honda Accord 08 on
Insight 09 on



SOT-1009 Honda Accord Jazz Amped

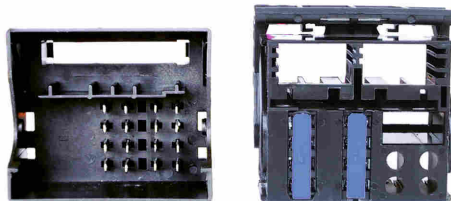

SOT-976 VW, Mercedes, BMW 05 on



SOT-IO2S IO to 2 Speaker loom




SOT-1111 Mazda Bose Amped




SOT-IOADAP IO adaptor for
Amp SOT loom



SOT-976FB
VW, Mercedes, BMW 05 on
Fully populated Quadlock

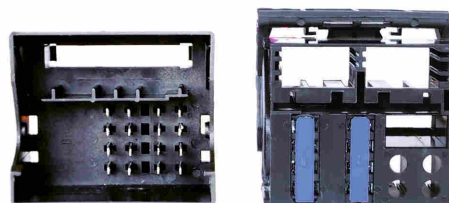

SOT-1112 Peugeot JBL

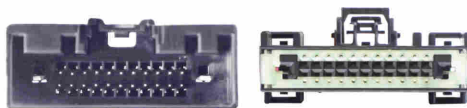


SOT-984 Ford Fiesta Mk6 2010 on



SOT-985 Hyundai
with 24 & 18 pin connector

ED'S AUTO SERVICES

Leads to plug into car stereo

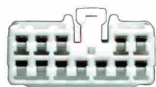


No 712
Suzuki 1995 on
12 PIN



No 728
VT Commodore
1997 on
18 PIN



No 729
VR - VS
Commodore
14 PIN

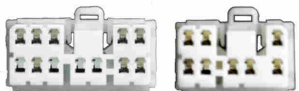

No 731
Mazda 1990 on
12 PIN & 8 PIN



No 732
Mitsubishi
85 - 94
9 PIN & 5 PIN



No 733
Mitsubishi 95 on
14 PIN



No 734
European
16 PIN




No 735
Nissan
Aust & NZ spec
10 PIN & 6 PIN



No 737
Subaru 93 on
14 PIN



No 738
Honda 86 on
16 PIN




No 740
Toyota 87 on
10 PIN & 6 PIN



No 741
Subaru Pre 93
9 PIN & 7 PIN



No 742
Honda 98 on
8 Large, 12 Small

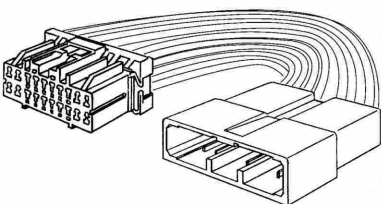

No 742-538
Honda 98 on
Stereo to
Honda Pre 98
Car
20 PIN to 16 PIN




No 745
Ssangyong
Musso
16 PIN



No 746
Daewoo,
Ssangyong Korando,
Rexton 16 PIN



No 748
Hyundai 99 on
16 PIN

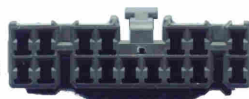

No 749
Isuzu/ Rodeo
1996 on
16 PIN



No 750E
/ PC3-211
BMW stereo
to ISO
17 PIN



No 754
Ford Falcon
AU 1997 on
4 Large, 16 Small



No 758
Chrysler 84
7 + 7 PIN



No 759
Chrysler/ Jeep
2002 on
6 Large, 16 Small




No 782
Hyundai/ Kea
24 PIN




CR01RB
Chrysler 84 on
7 + 7 PIN



CR02RB
Chrysler 02 on
4 Large, 16 Small

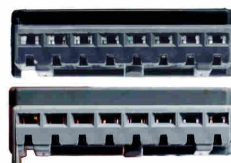

FD02RB
Ford 1986 - 1989
8 PIN + 8 PIN




FD16RB
Ford USA 1998 on



GM02RB
GM 86 on
10 PIN & 10 PIN



HA10RB
Honda Civic 06 on
12 Large, 5 Small



MA03RB
Mazda 2000 on
6 Large, 16 Small



MI04RB
Mitsubishi 08 on
4 Large, 16 Small



PC3-201-4
Ford pre 92 to ISO
7 PIN pwr + 8 PIN spkr



PC3-220
Ford Fiesta 02 on
3 Large, 8 Med, 13 Small



No 534KEN-E
JVC/ Kenwood
to ISO 16 PIN



VW03RB
BMW/ Volkswagen
/ Audi
2002 on



L-ALP
Alpine
16 PIN SQUARE



L-ALP2
Alpine
16 PIN ROUND



L-CLA
Clarion



L-JVC
JVC to 09



L-JVC2
JVC 2009 - 2011



L-JK
JVC 2011 on
/ Kenwood



L-PA1
Panasonic models
CDQDP 101, 102, 151



L-PA2
Panasonic 03 on



L-PIO1
Pioneer 30mm wide



L-PIO2
Pioneer
2 Large, 14 Small



L-PI3
Pioneer
2 Large, 14 Small



L-SNY
Sony
2 Large, 14 Small



No 534SNY1
Sony to ISO
2 Large, 14 Small