

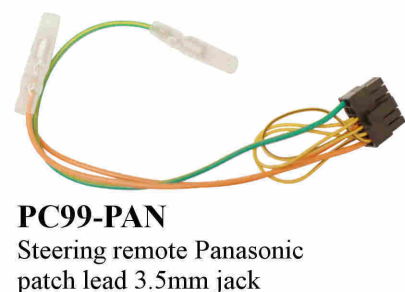


## VEHICLE SPECIFIC STEERING WHEEL CONTROL ADAPTORS

Use Patch Lead to match your stereo to control adaptor, which plugs directly into car

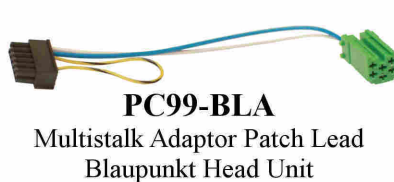

### CONTROL ADAPTOR PLUG CONFIGURATIONS

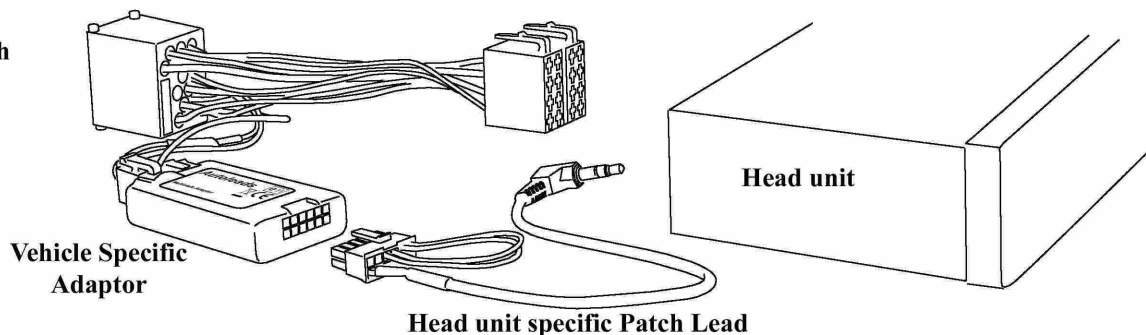

# ED'S AUTO SERVICES

## VEHICLE SPECIFIC STEERING WHEEL CONTROL ADAPTORS

( Require Stereo specific patch leads shown on the previous page)




**PC99-X46**

Mazda 3/6/RX8




**PC99-X50**

Ford  
Focus C-Max,  
Mondeo 2004 >  
Focus 2005 >

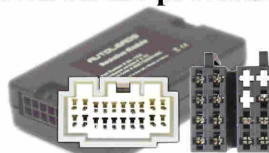


**PC99-X60**

Honda CRV 05/2005 >

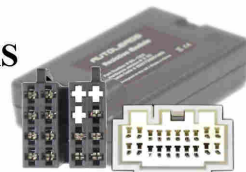


**PC99-X61**

Honda S2000

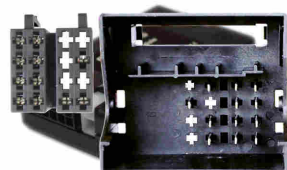

**PC99-X80** Astra 2004 >

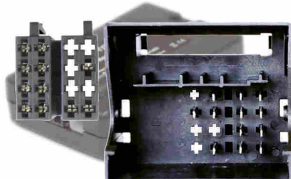

**PC99-X85**

BMW CAN bus 3 Series 2005 on




**PC99-201**

Mitsubishi Colt 2005 >, L200 2010 >



**PC99-208**

Hyundai Santa Fe

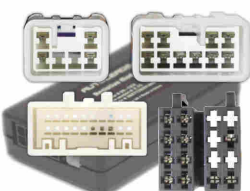

**PC99-209**

Toyota



**PC99-213**

Peugeot, Citroën  
with separate control stalk



**PC99-215**

Nissan X-Trail 2007 on



**PC99-216**

Nissan X Micra 2006 on



**PC99-218**

Suzuki




**PC99-220**

Nissan Dualis/Qashqai




**PC99-223**

Toyota RAV4 Prius  
Auris Yaris

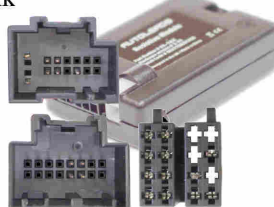


**PC99-224**

Holden Captiva 7

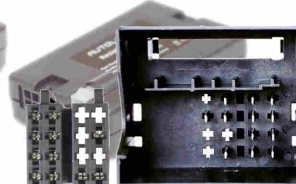


**PC99-501**

BMW E90, E91  
NOT IDRIVE

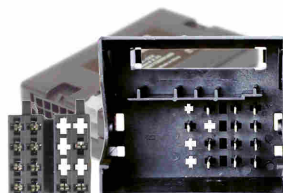


**PC99-502**

VW Passat 2005 on  
- Not CC

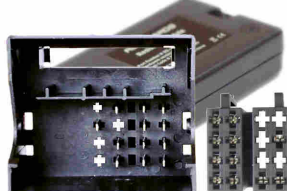


**PC99-503**

Audi A4 2007 on

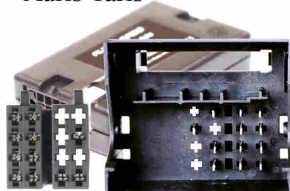


**PC99-504**

Audi A3

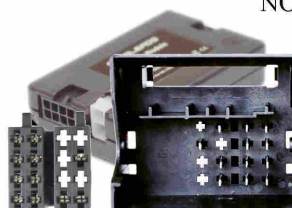


**PC99-505**

VW Golf MkIV 8 Button control

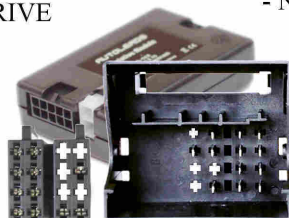

**PC99-511**

Mercedes B,C,E Class

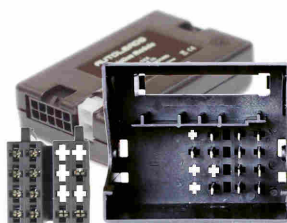

**PC99-521**

Mercedes Sprinter 2008 on

**Units for other  
European cars  
can be procured  
on request**

See [Autoleads.co.uk](http://Autoleads.co.uk)  
for Products not  
shown



**CTUMT01**

Mitsubishi Select Rockford Fosgate Steering Adaptor and  
Onboard information Display for Aftermarket AV Headunit  
ASX 2010 - 2015 L200, Lancer, Triton 2008 - 2015  
Outlander 2008 - 2013 Pajero Sport 2012 - 2015



**SWCHL03**


Holden Steering Wheel Control Adaptor  
Holden Calais VT, VX 1997-2002  
Caprice, Statesman WH Series 1&2 1999-2003  
Monaro V2 2001-2002



# ED'S AUTO SERVICES

## CT CAN-BUS STEERING REMOTE ADAPTORS

Require Head unit specific Patch Leads on next page

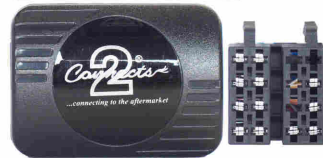

**CTSAD005.2**

Audi A2/A3/A4/TT  
Rear Amplified Quadlock  
CAN-Bus Steering Control  
Adaptor lead



**CTSAD006.2**

Audi A2/A3/A4/TT  
Fully Amplified Quadlock  
CAN-Bus Steering Control  
Adaptor lead




**CTSAD007.2**

Audi A2/A3/A4/TT  
Rear Amplified ISO  
CAN-Bus Steering Control  
Adaptor lead




**CTSAD008.2**

Audi A2/A3/A4/  
A6/A8/TT  
Fully Amplified  
CAN-Bus Steering  
Control Adaptor lead

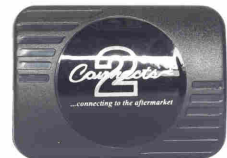


**CTSAR003.2**

Alfa Romeo 147  
2007-2010  
GT 2008-10  
CAN-Bus Steering  
Control Adaptor lead

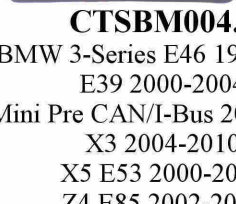


**CTSBM004.2**

BMW 3-Series E46 1998-2005  
E39 2000-2004  
Mini Pre CAN/I-Bus 2001-2006  
X3 2004-2010  
X5 E53 2000-2006  
Z4 E85 2002-2008  
Steering Control Adaptor lead

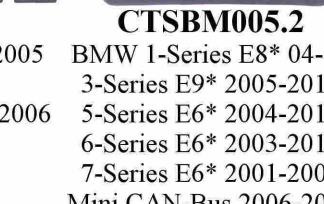


**CTSBM005.2**

BMW 1-Series E8\* 04-13  
3-Series E9\* 2005-2012  
5-Series E6\* 2004-2010  
6-Series E6\* 2003-2010  
7-Series E6\* 2001-2008  
Mini CAN-Bus 2006-2013  
Z4 E89 2009 on  
CAN-Bus Steering  
Control Adaptor lead

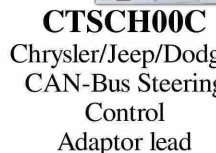

**CTSCH00C**

Chrysler/Jeep/Dodge  
CAN-Bus Steering  
Control  
Adaptor lead

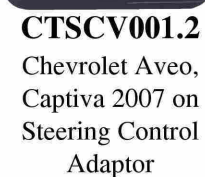


**CTSCV001.2**

Chevrolet Aveo,  
Captiva 2007 on  
Steering Control  
Adaptor





**CTSFA015.2**

Fiat Ducato  
2015 on  
CAN-Bus  
Steering Control  
Adaptor

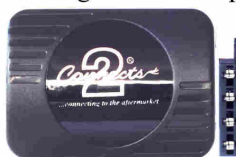


**CTSFO003.2**

FORD C-Max 1st Gen 2003-2010  
Fiesta 2005-2008  
Focus Mk2 2004-2011  
Fusion 2005-2012  
Galaxy Mk3 2006 on  
Kuga 1st Gen 2008-2012  
Mondeo Mk4 2007-2014  
Transit 4th Gen (Facelift) 2006-2013  
Transit Connect 1st Gen 2004-2013  
CAN-Bus Steering Control Adaptor

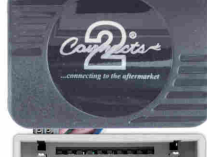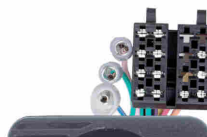


**CTSHO003.2**

Honda  
CR-V 2009 - 2012  
CR-Z 2010 - 2015  
Fit 2007 - 2015  
Insight 2009 - 2015  
Jazz 2008 - 2015  
Steering Control Adaptor

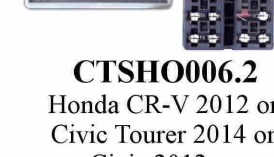

**CTSHO006.2**

Honda CR-V 2012 on  
Civic Tourer 2014 on  
Civic 2012 on  
Non-Nav, Non-amped  
CAN-Bus Steering  
Control Adaptor

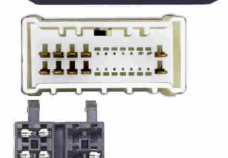

**CTSHY002.2**

Hyundai Santa Fe  
2006-2010  
Non-amped  
Steering  
Control Adaptor

# ED'S AUTO SERVICES

## CT CAN-BUS STEERING REMOTE ADAPTORS

Require Head unit specific Patch Leads on next page



**CTSIZ001.2**

Chevrolet/ Holden Colorado  
2012-2014  
Isuzu D-Max 2012 on  
Isuzu MU-X 2014 on  
Steering Control Adaptor lead



**CTSJG001.2**

Jaguar XJ8 1998 - 2003  
Steering Control  
Adaptor lead



**CTSKI004.2**

Kia Sportage 2010 on  
Picanto, Rio 2011 on  
Cee'd, Forte, Soul 2012 on  
Steering Control  
Adaptor lead



**CTLR006.2**

Land Rover Range Rover Sport  
2005-2013  
Land Rover Freelander TD4 MK20  
2006-2014  
Land Rover Discovery 2005-2014  
Not for fibre optic amplified systems  
CAN-Bus Steering Control  
Adaptor lead



**CTSMC001.2**

Mercedes Audio 20  
A-Class W169 2004-2012  
B-Class 2005-2011  
C-Class W203 2004-2007  
R-Class 2006-2013  
Sprinter 2006  
Viano 2006-2015  
ML Non-Amped 2005-2011  
CLK W209 2004-2009  
VW Crafter 2012-2014  
CAN-Bus  
Steering Control Adaptor lead



**CTSMC004.2**

Mercedes E-Class W211  
Audio 20 2002-2009  
SLK R171 2004-2011  
SL R230 2004-2014  
CAN-Bus Steering  
Control Adaptor lead



**CTSMC006.2**

Mercedes Benz  
C Class W203 2001-04  
CLK W209 2001-04  
CAN-Bus Steering  
Control Adaptor lead



**CTSMC013.2**

Mercedes Benz  
E-Class W211  
Fibre-Amp 2002-2009  
CAN-Bus Steering  
Control Adaptor lead



**CTSMT005.2**

Mitsubishi  
L200 2012-2015  
Triton 2012 on  
Strada, Sportero 2014 on  
CAN-Bus Steering  
Control Adaptor



**CTSMT007.2**

Mitsubishi  
Shogun, Pajero  
2010 - 2013  
CAN-Bus Steering  
Control Adaptor



**CTSMT009.2**

Mitsubishi  
Rockford Fosgate  
Outlander, Pajero,  
Shogun 2013 on  
ASX 2015 on  
CAN-Bus Steering  
Control Adaptor



**CTSMZ005.2**

MAZDA Bose  
3 2009-2013  
5 2010 on  
6 2010-2013  
CAN-Bus Steering  
Control Adaptor



**CTSMZ007.2**

MAZDA Bose  
24 Pin Plug  
CX-7 2008-2012  
CX-5 2013 on  
6 2013 on  
CAN-Bus Steering  
Control Adaptor



# ED'S AUTO SERVICES

## CT CAN-BUS STEERING REMOTE ADAPTORS

Require Head unit specific Patch Leads on next page



**CTSIZ001.2**

Chevrolet/ Holden Colorado  
2012-2014

Isuzu D-Max 2012 on  
Isuzu MU-X 2014 on  
Steering Control Adaptor lead



**CTSJG001.2**

Jaguar XJ8 1998 - 2003  
Steering Control  
Adaptor lead



**CTSKI004.2**

Kia Sportage 2010 on  
Picanto, Rio 2011 on  
Cee'd, Forte, Soul 2012 on  
Steering Control  
Adaptor lead



**CTLR006.2**

Land Rover Range Rover Sport  
2005-2013  
Land Rover Freelander TD4 MK20  
2006-2014  
Land Rover Discovery 2005-2014  
Not for fibre optic amplified systems  
CAN-Bus Steering Control  
Adaptor lead



**CTSMC001.2**

Mercedes Audio 20  
A-Class W169 2004-2012  
B-Class 2005-2011  
C-Class W203 2004-2007  
R-Class 2006-2013  
Sprinter 2006  
Viano 2006-2015  
ML Non-Amped 2005-2011  
CLK W209 2004-2009  
VW Crafter 2012-2014  
CAN-Bus  
Steering Control Adaptor lead



**CTSMC004.2**

Mercedes E-Class W211  
Audio 20 2002-2009  
SLK R171 2004-2011  
SL R230 2004-2014  
CAN-Bus Steering  
Control Adaptor lead



**CTSMC006.2**

Mercedes Benz  
C Class W203 2001-04  
CLK W209 2001-04  
CAN-Bus Steering  
Control Adaptor lead



**CTSMC013.2**

Mercedes Benz  
E-Class W211  
Fibre-Amp 2002-2009  
CAN-Bus Steering  
Control Adaptor lead



**CTSMT005.2**

Mitsubishi  
L200 2012-2015  
Triton 2012 on  
Strada, Sportero 2014 on  
CAN-Bus Steering  
Control Adaptor



**CTSMT007.2**

Mitsubishi  
Shogun, Pajero  
2010 - 2013  
CAN-Bus Steering  
Control Adaptor



**CTSMT009.2**

Mitsubishi  
Rockford Fosgate  
Outlander, Pajero,  
Shogun 2013 on  
ASX 2015 on  
CAN-Bus Steering  
Control Adaptor



**CTSMZ005.2**

MAZDA Bose  
3 2009-2013  
5 2010 on  
6 2010-2013  
CAN-Bus Steering  
Control Adaptor




**CTSMZ007.2**

MAZDA Bose  
24 Pin Plug  
CX-7 2008-2012  
CX-5 2013 on  
6 2013 on  
CAN-Bus Steering  
Control Adaptor

# ED'S AUTO SERVICES

## CT CAN-BUS STEERING REMOTE ADAPTORS

Require Head unit specific Patch Leads on next page

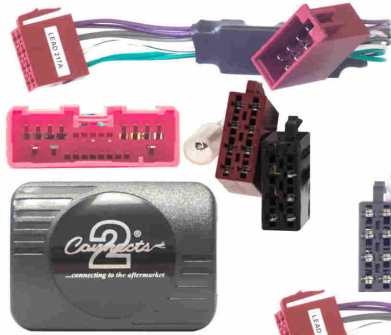

### CTSMZ010.2

MAZDA Bose  
CX-9 2007-2015  
3 2013 on  
CAN-Bus Steering  
Control Adaptor



### CTSMZ012.2

MAZDA Bose  
MX5 1999 on  
Steering Control Adaptor



### CTSNS003.2

Nissan 2009 on  
Resistive Steering  
Control adaptor



### CTSNS010.2

Nissan Analogue 2009 on  
With Bluetooth Phone Button  
Cube, Titan 2009 on  
Xterra 2009-2016  
Navarra Blaupunkt/Clarion 2009 on  
Sentra 2013 on  
Cabstar 2014 on  
Resistive Steering  
Control adaptor



### CTSNS012.2

Nissan Altima 2014 on  
Steering Adaptor lead



### CTSTY002.2

Toyota Avensis, Corolla, Rav 4,  
Rush, Verso, Yaris 2011 on  
28 Pin  
Steering Control  
Adaptor lead



### CTSVL003.2

Volvo XC90 Amplified  
2004-2014  
CAN-Bus Steering Control  
Adaptor



### CTSVW001.2

VW Beetle 1998 - 2010  
Bora, Lupo 1998 - 2005  
Golf 1998 - 2003  
Passat 1996 - 2005  
Sharan 2000 - 2005  
Transporter T4 1990 - 2003  
Resistive Steering Control  
Adaptor



## Head unit Specific Patch Leads for CT Steering Control Adaptor Leads



**CTALPINELEAD**  
Apline  
Steering wheel control  
adaptor Patch lead



**CTBLAUPUNKTLEAD**  
Blaupunkt Steering wheel control  
adaptor Patch lead



**CTCHINAHULEAD**  
Steering wheel control Patch lead  
for Chinese brand head units



**CTCLARIONLEAD**  
Clarion  
Steering wheel control Patch lead



**CTJVC2LEAD**  
JVC  
Steering wheel control  
adaptor Patch lead




**CTJVC3LEAD**  
JVC KWAVX Series  
Steering wheel control  
adaptor Patch lead



**CTKENWOODLEAD2**  
Steering Control Patch Lead  
Kenwood single control wire




**CTNAKAMICHILEAD**  
Steering Control Patch Lead  
Nakamichi

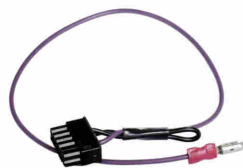

**CTPHILIPSLEAD**  
Philips  
Steering wheel control Patch lead




**CTSONYLEAD**  
Sony  
Steering wheel control Patch lead

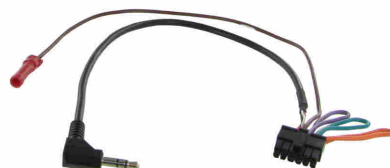

**CTMULTILEAD**  
Universal  
Steering wheel control Patch lead

## UNIVERSAL STEERING WHEEL CONTROL ADAPTORS

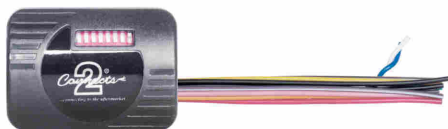

**UNI-SWC.2**  
Universal Steering Wheel Control Adaptor  
CAN-Bus and Resistive  
-Use CT patch lead for head unit connection



**UNI-JACK.2**  
Universal Steering Wheel Control Adaptor  
Resistive only  
-Use CT patch lead for head unit connection



**SWI-RC**  
Programmable  
Steering wheel control adaptor



**S3-1**  
CAN-Bus and  
Steering remote adaptor



**S3CR02**  
Select Chrysler 05 on  
plug for S3-1



**S3CR04**  
Select Chrysler 07 on  
plug for S3-1



**S3GMCL2**  
GM Patch Lead for S3-1



**S3GMLAN**  
Select GM LAN 06 on  
plug for S3-1